


Assembly Instructions For

F2326/6 (E) 3/08

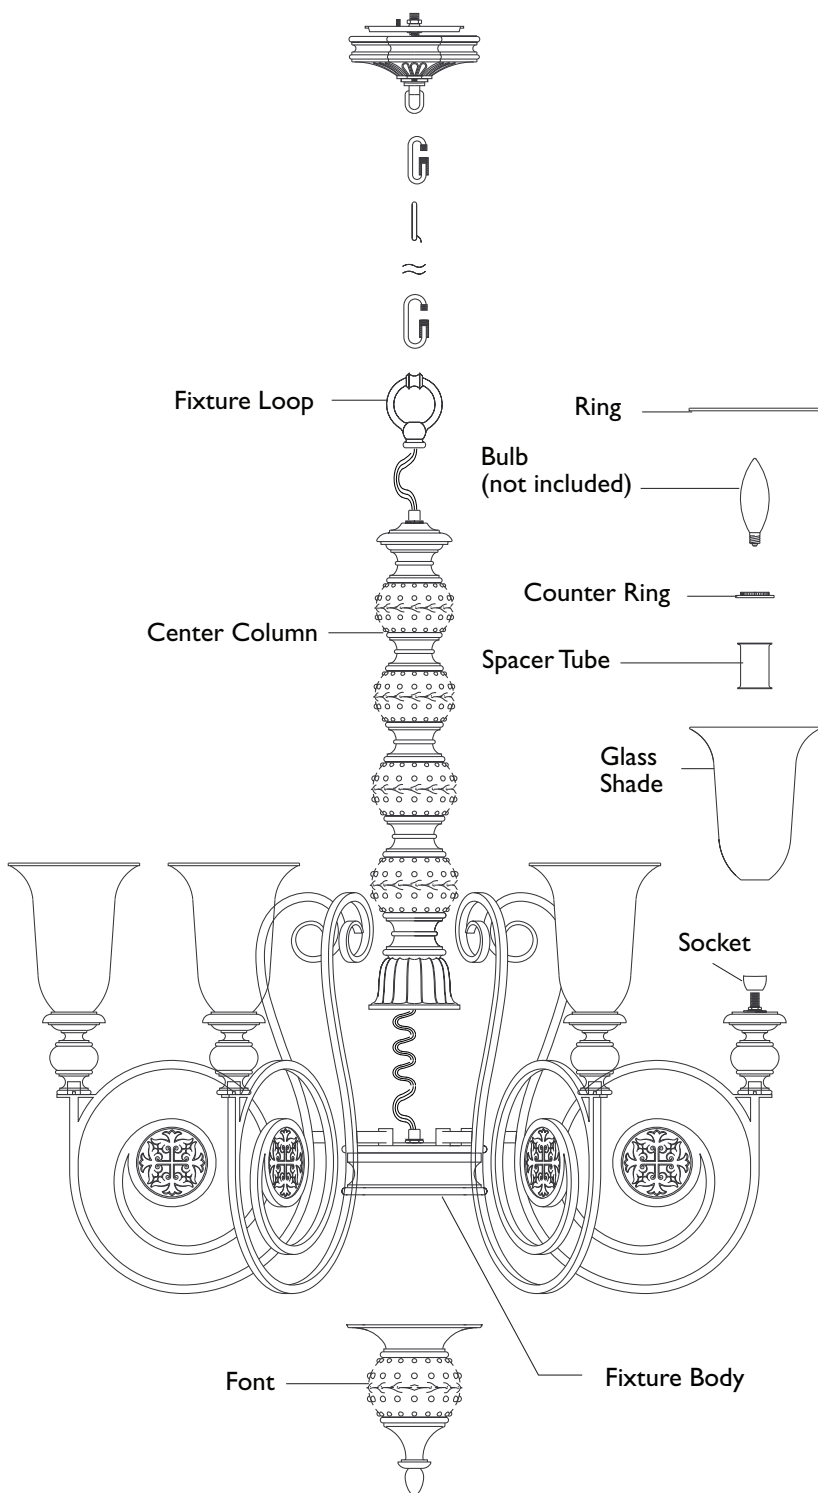


IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly.
Bulbs not included.

1. Carefully thread fixture wire and ground wire through fixture loop. Screw fixture loop onto top threaded pipe until secure.
2. Install central column securely onto top of fixture body.
3. Install font and finial by screwing onto bottom of fixture.
4. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
5. Place Glass Shade onto Lamp Body. Secure by placing Counter Ring onto Spacer Tube and Threaded Socket.
6. Install Type B, 60 Watt Max. Candlebra base bulbs (not included) into sockets as noted on relamping label at socket area.
7. Install Shade Ring onto top of Glass Shade.

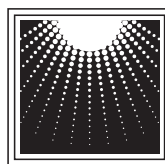

MURRAY
F E I S S
Generation Brands™