



Assembly Instructions For F2380/3 (E) 12/08

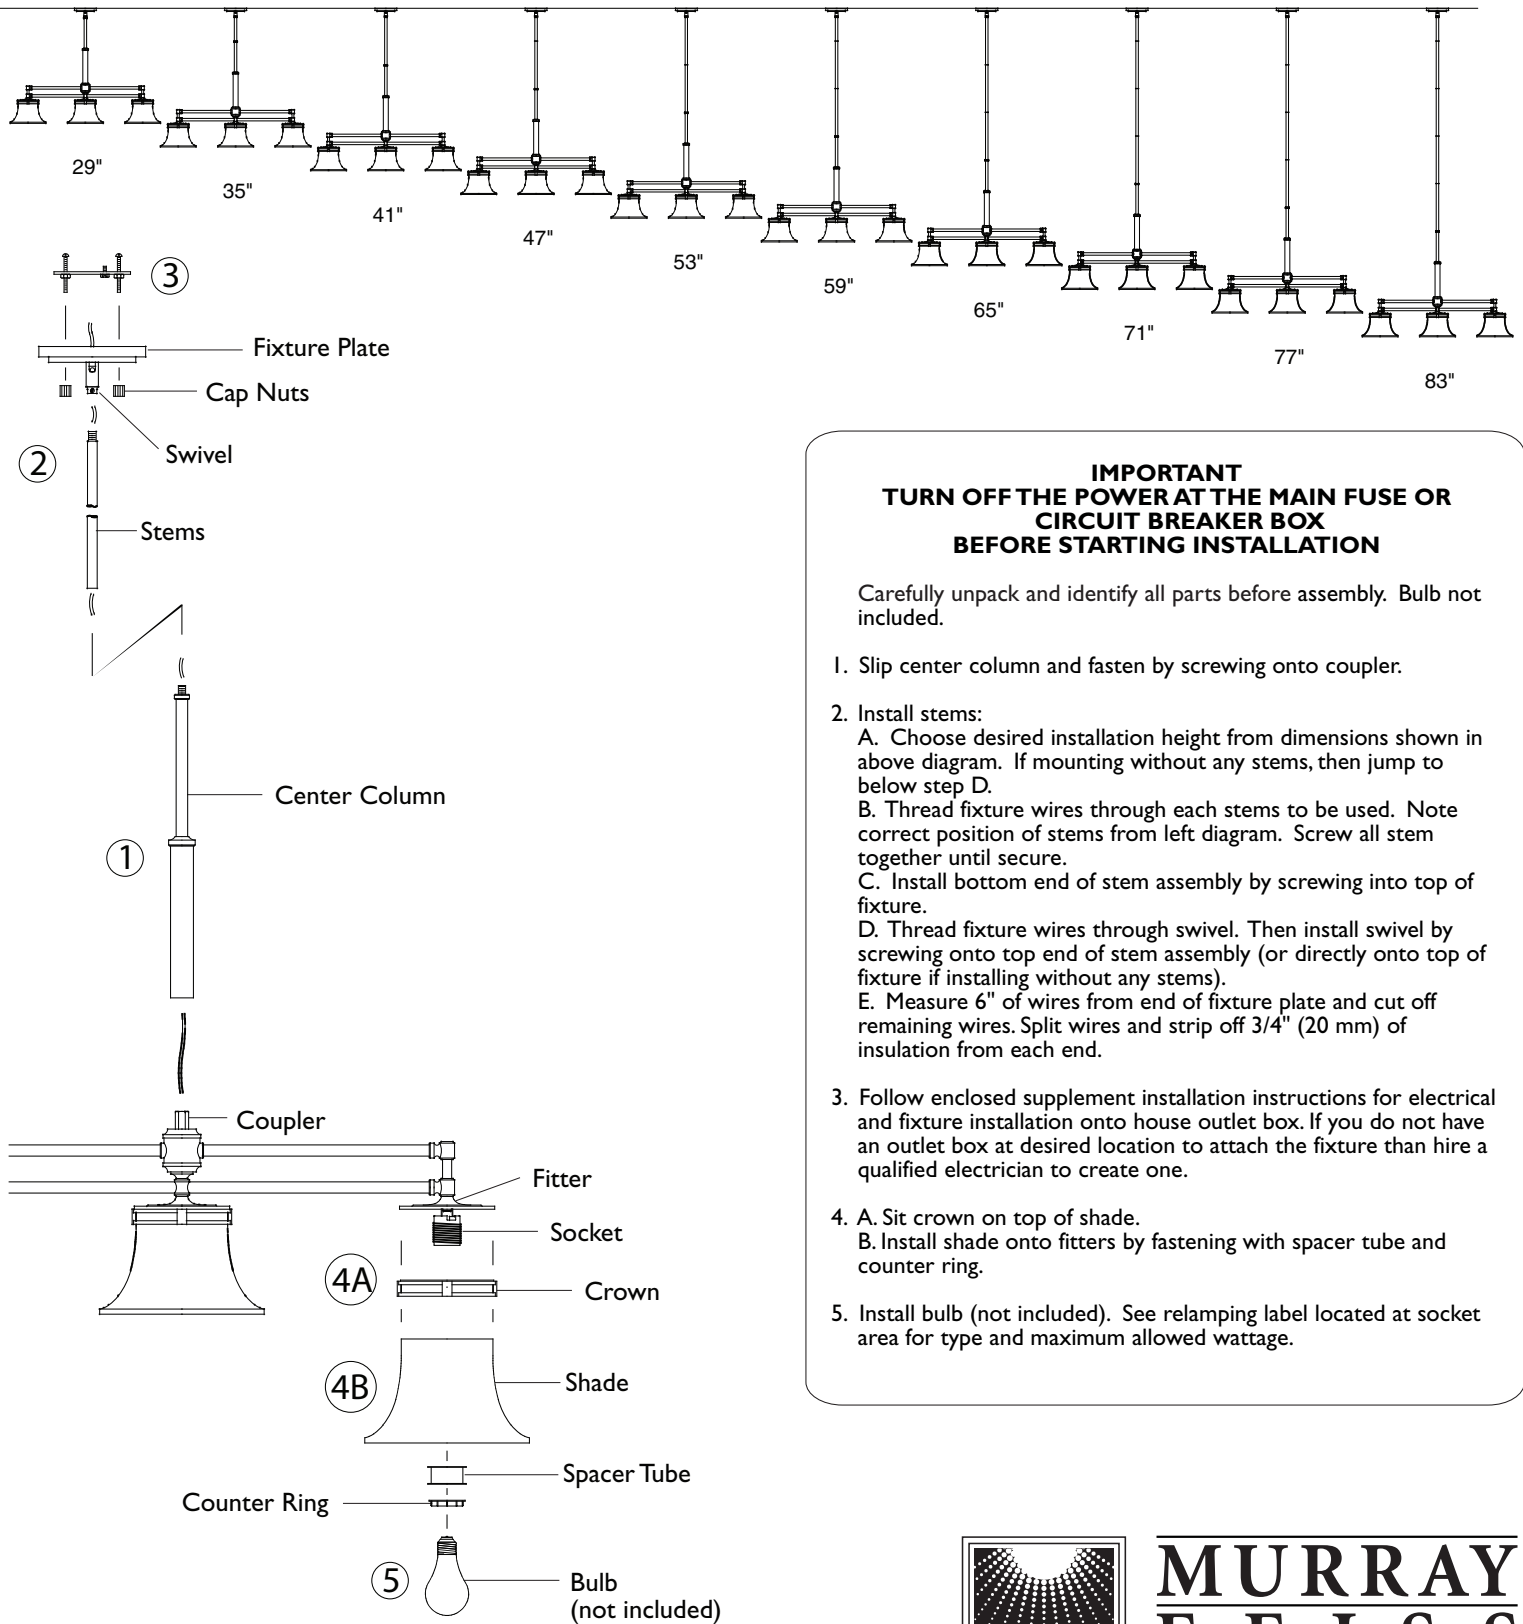

**IMPORTANT
TURN OFF THE POWER AT THE MAIN FUSE OR
CIRCUIT BREAKER BOX
BEFORE STARTING INSTALLATION**

Carefully unpack and identify all parts before assembly. Bulb not included.

1. Slip center column and fasten by screwing onto coupler.
2. Install stems:
 - A. Choose desired installation height from dimensions shown in above diagram. If mounting without any stems, then jump to below step D.
 - B. Thread fixture wires through each stems to be used. Note correct position of stems from left diagram. Screw all stem together until secure.
 - C. Install bottom end of stem assembly by screwing into top of fixture.
 - D. Thread fixture wires through swivel. Then install swivel by screwing onto top end of stem assembly (or directly onto top of fixture if installing without any stems).
 - E. Measure 6" of wires from end of fixture plate and cut off remaining wires. Split wires and strip off 3/4" (20 mm) of insulation from each end.
3. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
4. A. Sit crown on top of shade.
B. Install shade onto fitters by fastening with spacer tube and counter ring.
5. Install bulb (not included). See relamping label located at socket area for type and maximum allowed wattage.

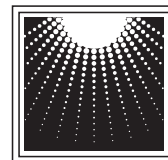

**MURRAY
FEISS**
Generation Brands™