


Assembly Instructions For

F2410/6+2 (E) 11/08

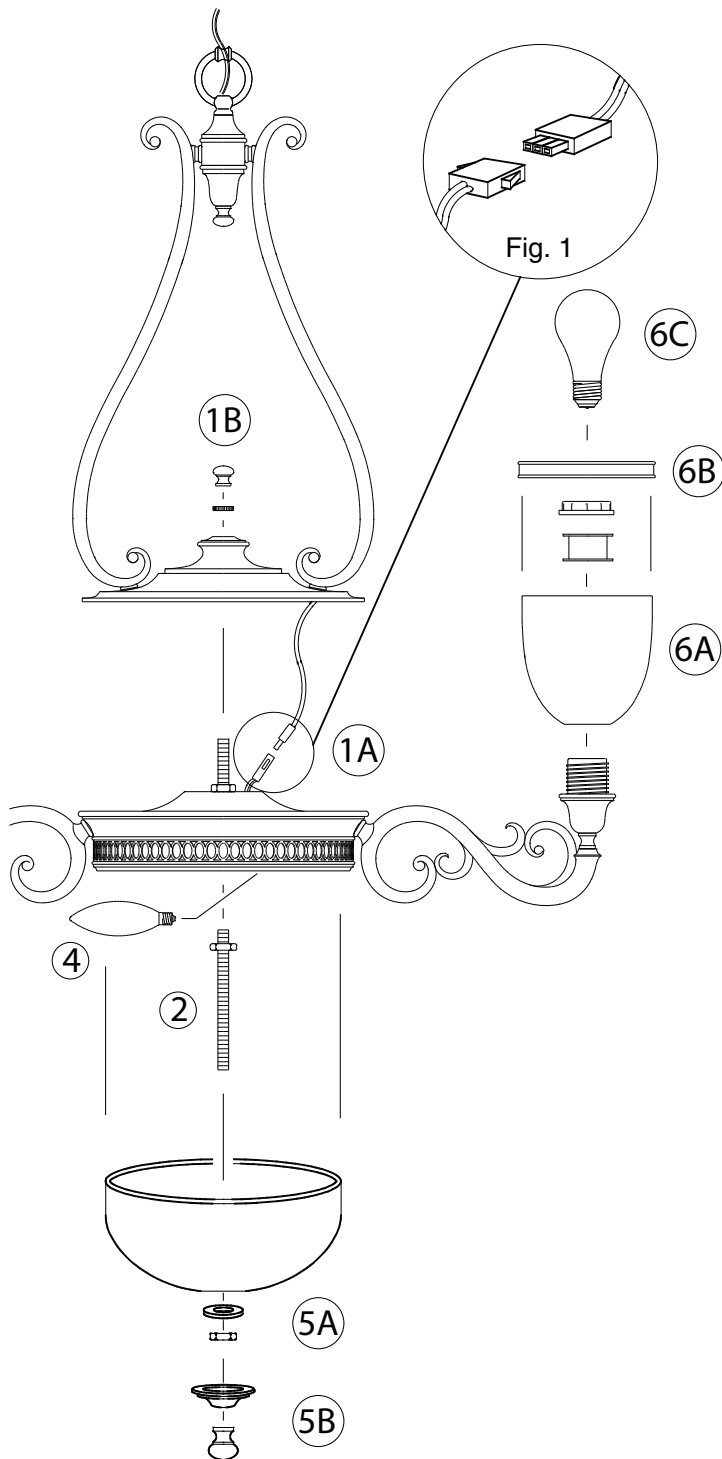


IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulbs not included.

1. Install upper assembly onto lower assembly:
 - A. Snap wire connectors from upper and lower assemblies together. See fig. 1.
 - B. While tucking wires inside, secure upper assembly onto lower assembly by fastening with round nut and then with small finial.
2. Install a hex nut onto one end of long threaded pipe leaving about 1/2" (13 mm) thread exposed. Screw same end of threaded pipe into bottom coupler. Tighten hex nut.
3. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture then hire a qualified electrician to create one.
4. Install two type-B 25 Watt maximum candelabra base bulbs (not included). NOTE: Do not install bulb exceeding 25 Watt.
5. A. Install shade (large size) onto bottom of fixture by securing with a flat washer and large hex nut. Do not over tighten.
B. Install finial (large size) by screwing onto bottom of shade.
6. A. Install shade (small size) by fastening onto sockets with spacer tube and counter ring.
B. Install trim ring by slipping onto top of shade.
C. Install type-A 100 Watt maximum medium base bulbs (not included) into sockets. NOTE: Do not install bulb exceeding 100 Watt.

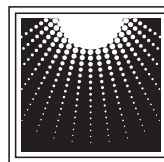

MURRAY
F E I S S
Generation Brands™