


Assembly Instructions For


F2502/6+3 (E) 5/09

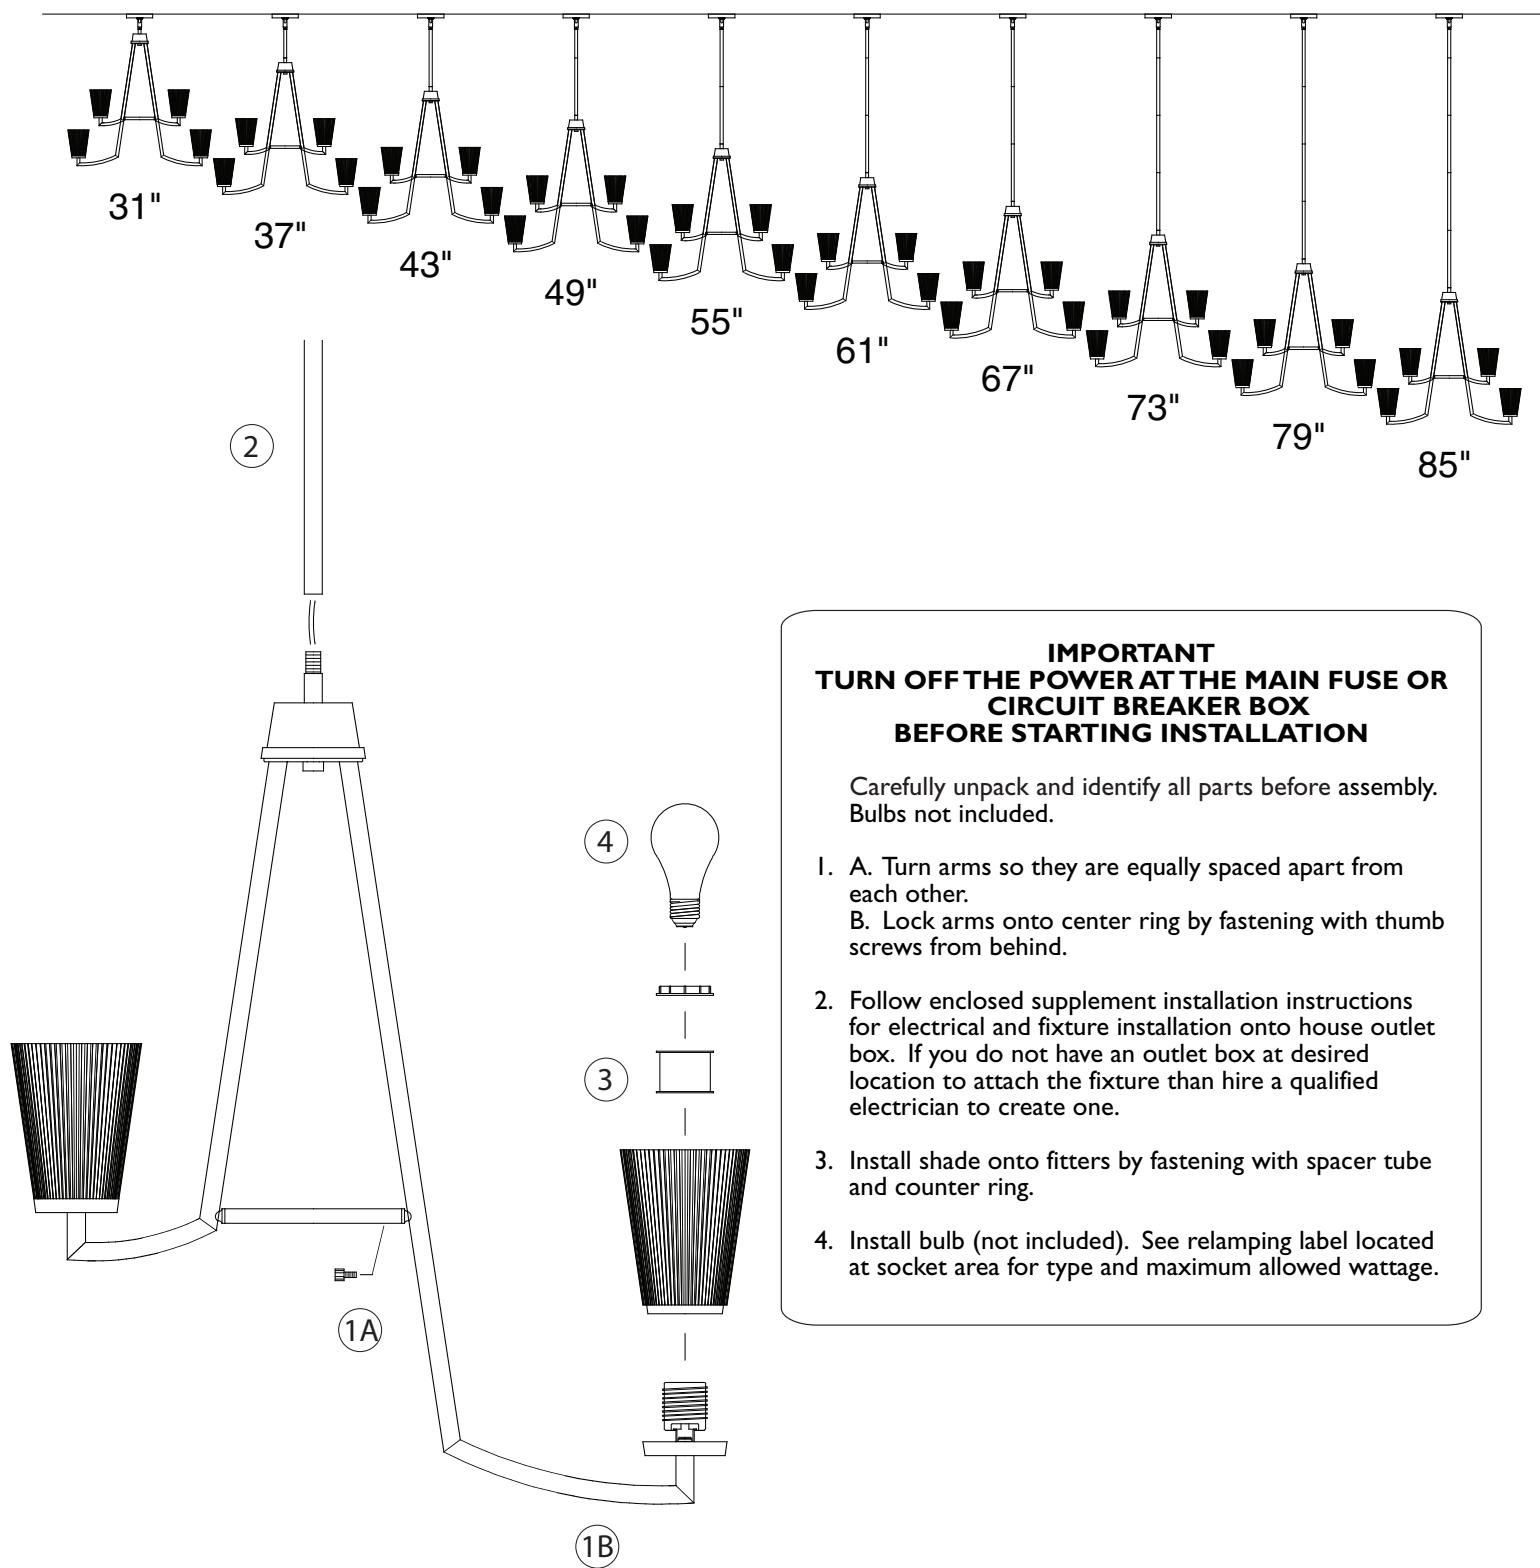

IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly.
Bulbs not included.

1. A. Turn arms so they are equally spaced apart from each other.
B. Lock arms onto center ring by fastening with thumb screws from behind.
2. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
3. Install shade onto fitters by fastening with spacer tube and counter ring.
4. Install bulb (not included). See relamping label located at socket area for type and maximum allowed wattage.

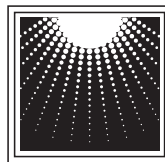

MURRAY
F E I S S

Generation Brands™