





Pg. 1 of 6 (E) 11/09

Pg. 1 of 6 (E) 11/09



Carefully unpack and identify all parts as shown in left diagram. Bulbs not included.

Below are suggested stem combinations, or without any stems, to achieve stated heights. However additional heights can be achieved using different stem configuration to maximum of 98-1/2" height.

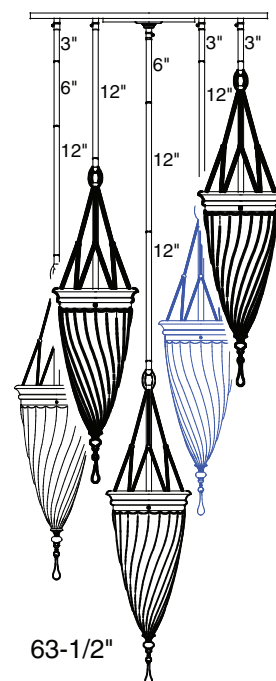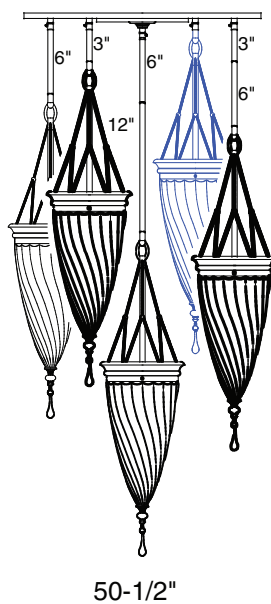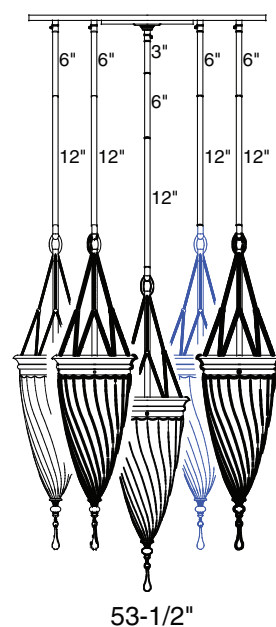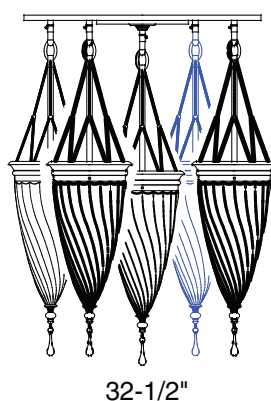


GENERATION BRANDS™ 

Assembly Instructions For

F2528/5

Pg. 2 of 6 (E) 11/09

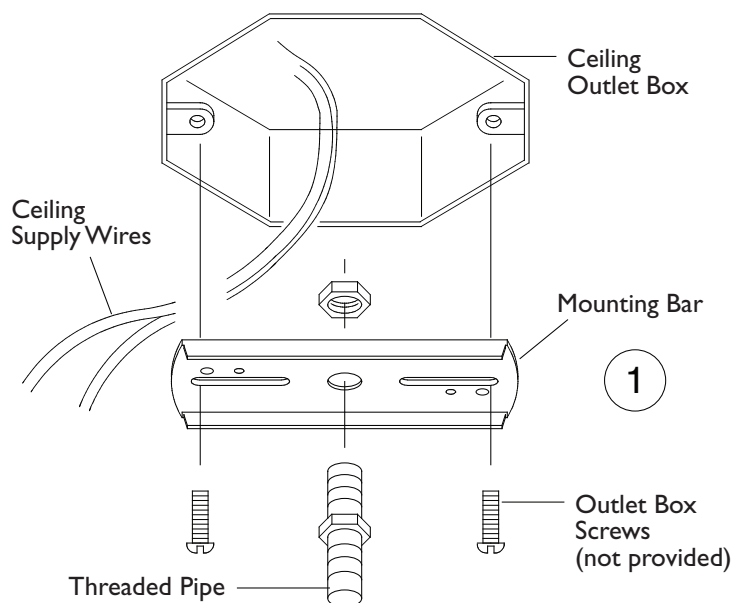

1. Install mounting bar:

A. Test install mounting bar onto ceiling outlet box. Note the flat surface of mounting bar must face outlet box. Determine whether mounting bar sits flush against ceiling surface or recessed. If recessed, measure how deep - our included hardware can accommodate up to 1/2" (13 mm) deep recess.


B. Remove mounting bar.

C. Install threaded pipe along with a hex nut by screwing into bottom side of mounting bar. Note the flat surface of mounting bar is the top. Make certain about 5/8" of thread are exposed below hex nut, then tighten the hex nut.

Note: If ceiling outlet box was recessed then leave additional thread exposed accordingly.

D. Install additional hex nut from above of mounting bar. Tighten hex nut.

E. Install mounting bar by screwing securely onto ceiling outlet box. Use two machine screws supplied by outlet box.

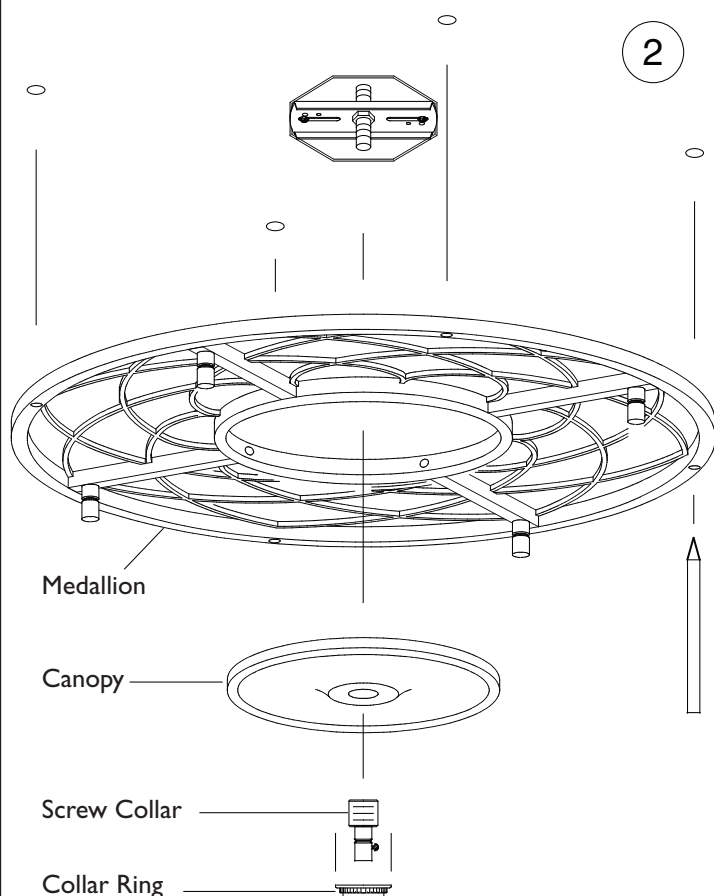

2. Drill pilot holes for medallion:

A. Test install medallion onto ceiling outlet box by holding with canopy, then fasten screw collar, and then tighten collar ring.

Note: Make certain the screw collar turns at least three full times against threaded pipe. If not then remove medallion and adjust threaded pipe length accordingly, and then repeat above step.

B. Once medallion is aligned at desired position, using a pen or pencil mark the four holes located in outer ring of medallion.


C. Remove medallion.

D. IF SHEET ROCK CEILING: Drill marked holes using 3/8" drill bit.

IF MARKED HOLES FALL DIRECTLY BELOW WOODEN CEILING BEAMS: Drill marked holes using 1/8" drill bit.

IF CONCRETE CEILING: Drill marked holes using 3/16" drill bit (for masonry or concrete type).

NOTE: If in doubt what type of ceiling then consult a qualified contractor or electrician for installation.




**MURRAY
FEISS**

GENERATION
BRANDS™

Assembly Instructions For

F2528/5

Pg. 3 of 6 (E) 10/09

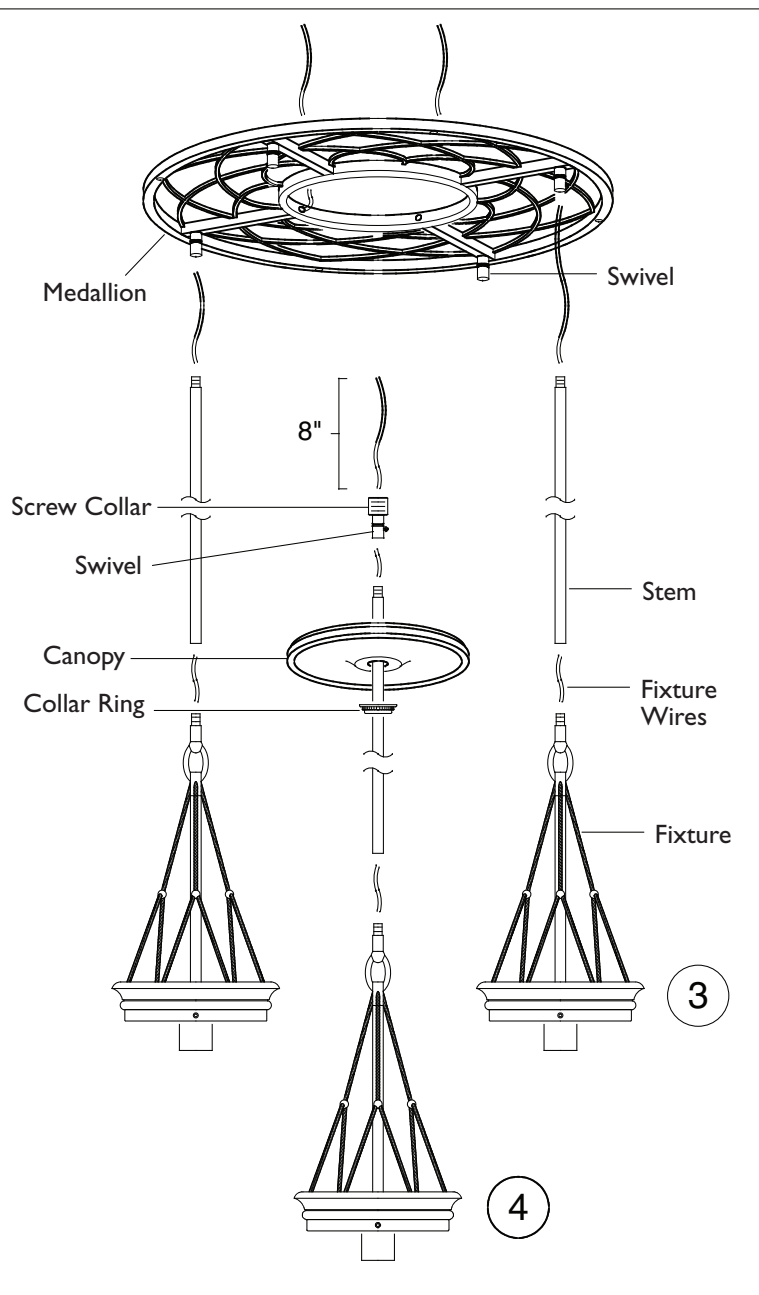

3. Install outer four fixtures:

A. Choose desired installation height based either from suggested dimensions shown in page one or of your own preference.

B. Thread fixture wires through each stems, if any, to be used. Note correct position of stems from left diagram. Screw all stems and fixture together until secure.

C. Pass fixture wires located above assembled stems, or above fixture if no stem is used, through desired swivel location. Then fasten top end of stem, or fixture, onto swivel by twisting bottom section of swivel. Lock screw located at the side of swivel. Repeat others.

Note: When inserting fixture wires through swivel, make certain wires continue running through inside of cross tube and exit through inner ring hole. See illustration.

D. Cut excess fixture wires leaving about 8" (20 cm) length. Then strip off 3/4" of plastic insulation from each end.



4. Install center fixture:

A. Thread fixture wires through desired length of stems, if any. Then screw all stems and fixture together until secure.

B. Pass fixture wires located above assembled stems, or above fixture if no stem is used, through swivel and screw collar. Then fasten top end of stem, or fixture, onto swivel by twisting bottom section of swivel. Lock screw located at the side of swivel.

C. Lower collar ring gently through stems until it rests on top of fixture. Repeat with canopy.

D. Cut excess fixture wires leaving about 8" (20 cm) length from screw collar. Then strip off 3/4" of plastic insulation from each end.

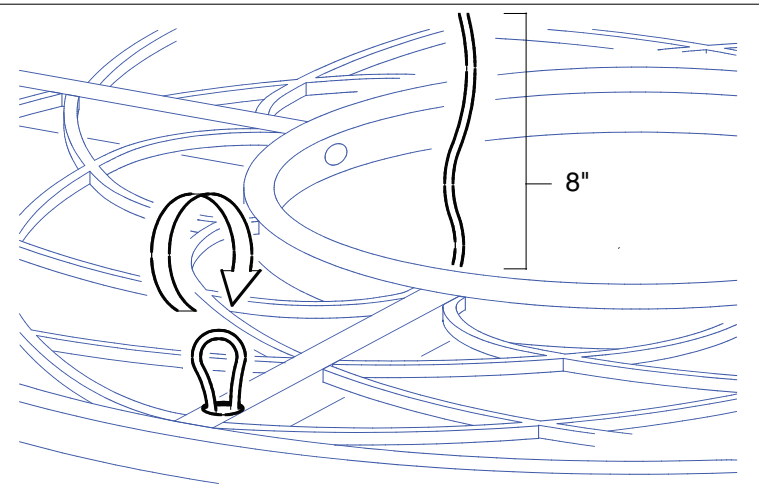


**MURRAY
FEISS**

GENERATION
BRANDS™

Assembly Instructions For

F2528/5

Pg. 4 of 6 (E) 11/09

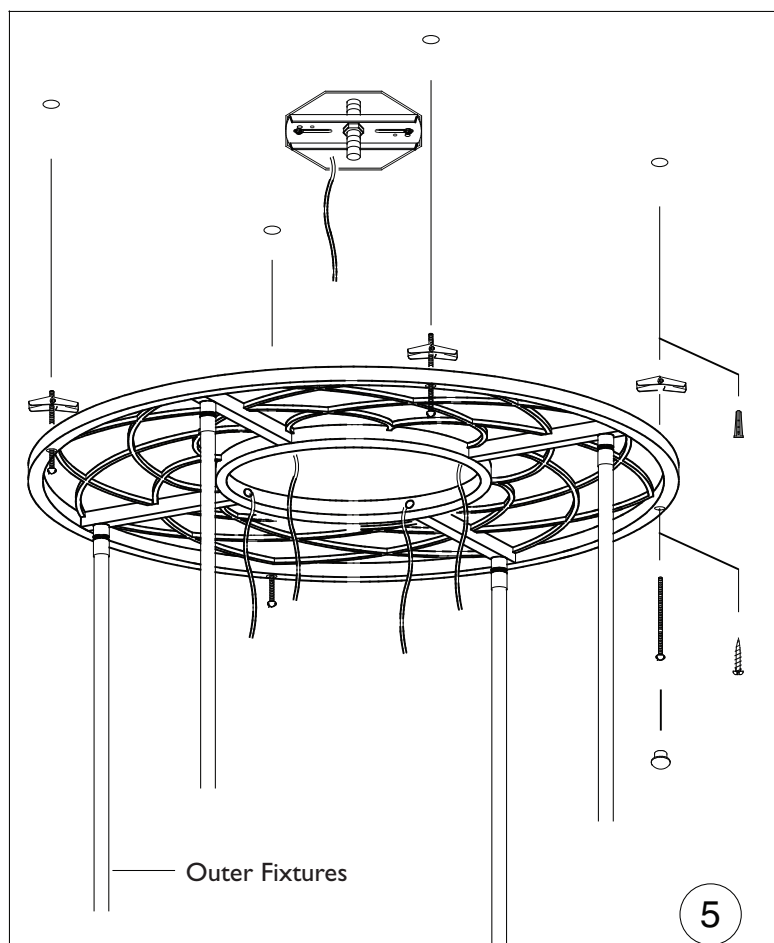

5. Install medallion, along with four outer fixtures, onto ceiling.

A. While one person is firmly holding onto medallion, have another follow below:


IF SHEET ROCK CEILING: Insert long machine screws into holes in medallion. Attach butterfly anchors from the other side by screwing onto protruding screws as shown on diagram. Pinch together the ends of butterfly anchors and push into drilled holes until anchors spring open inside of ceiling. While gently pulling medallion away from ceiling, tighten screws with a screw driver.

IF MARKED HOLES FALL DIRECTLY BELOW WOODEN CEILING BEAMS: Insert sheet metal screws through holes in medallion. Fasten screws directly into drilled holes.

IF CONCRETE CEILING: Insert plastic anchors into drilled holes. Insert sheet metal screws through holes in medallion. Fasten screws into plastic anchors.

Note: Make certain the four set of fixture wires are dangling from inside of medallion.


B. Cover the four holes in medallion with enclosed plug.

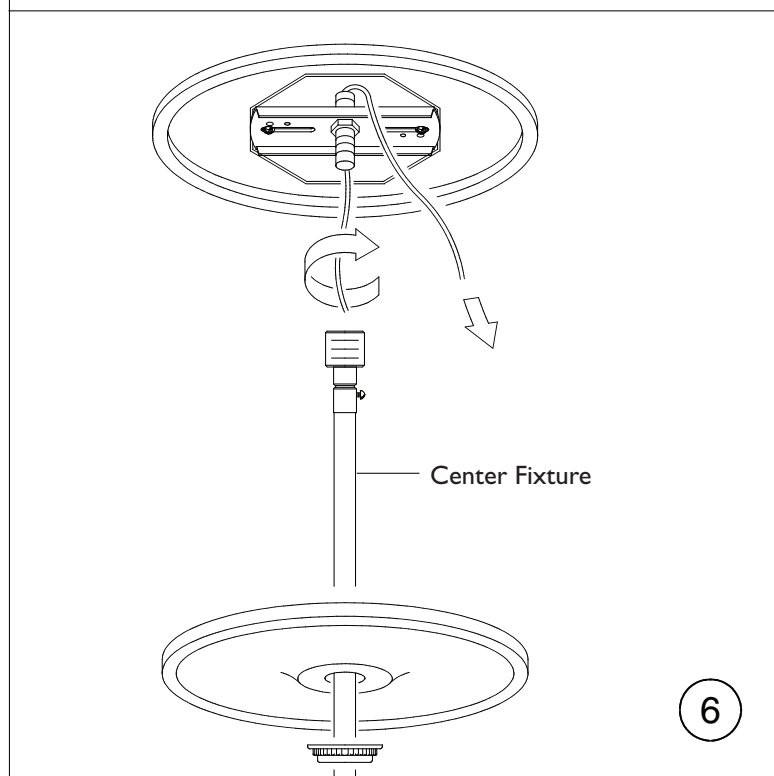

6. Install center fixture onto ceiling outlet box:

A. Take fixture wires from center fixture and thread through the threaded pipe. While pulling those same wires out from outlet box, lift center fixture and install onto the threaded pipe by screwing three full turns.

NOTE: For without stem assembly, tilt canopy in order to reach mounting hole location.




**MURRAY
FEISS**

GENERATION
BRANDS™

Assembly Instructions For

F2528/5

Pg. 5 of 6 (E) 11/09

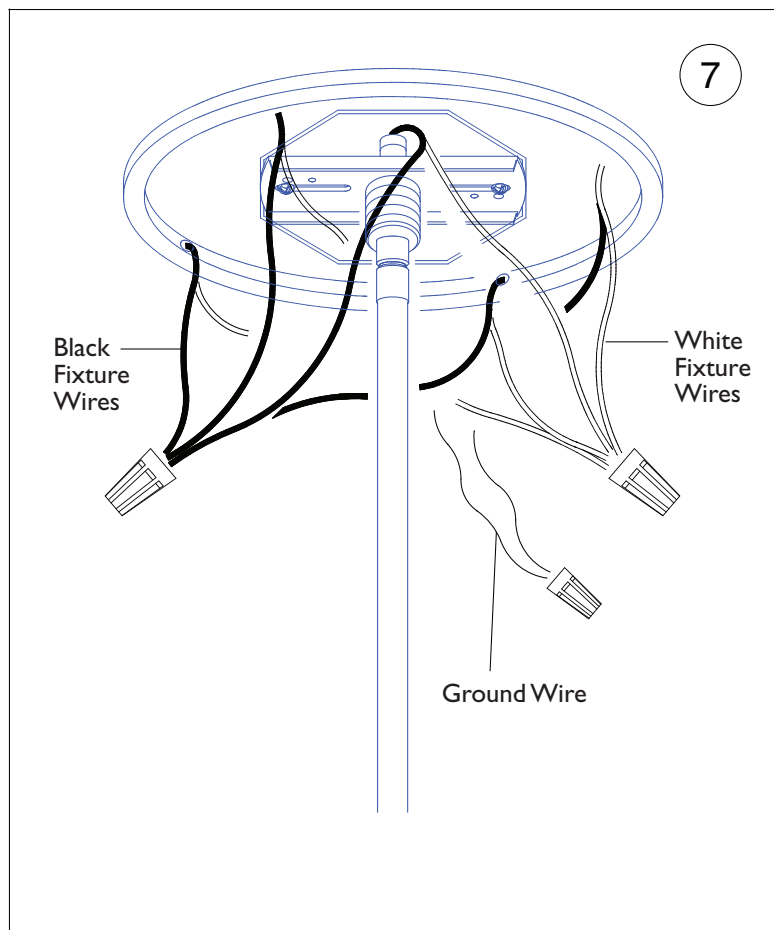

7. Connect electrical wires:


A. Connect all black fixture wires to black (or red) supply wire with wire connector. Connect all white fixture wires to white supply wire with wire connector.

Note: Make certain no loose conductors protrude outside of wire connectors. And make certain all wires are securely held together by wire connectors; and then apply electrical tape around wire connector and wires.


B. Connect fixture ground wire (without plastic insulation) to supply ground wire (usually with green insulation) with wire connector.

Note: If there is no supply ground wire at ceiling outlet box then attach fixture ground wire securely onto green grounding screw located at mounting bar.

Important: Never connect ground wire to black or white supply wires.

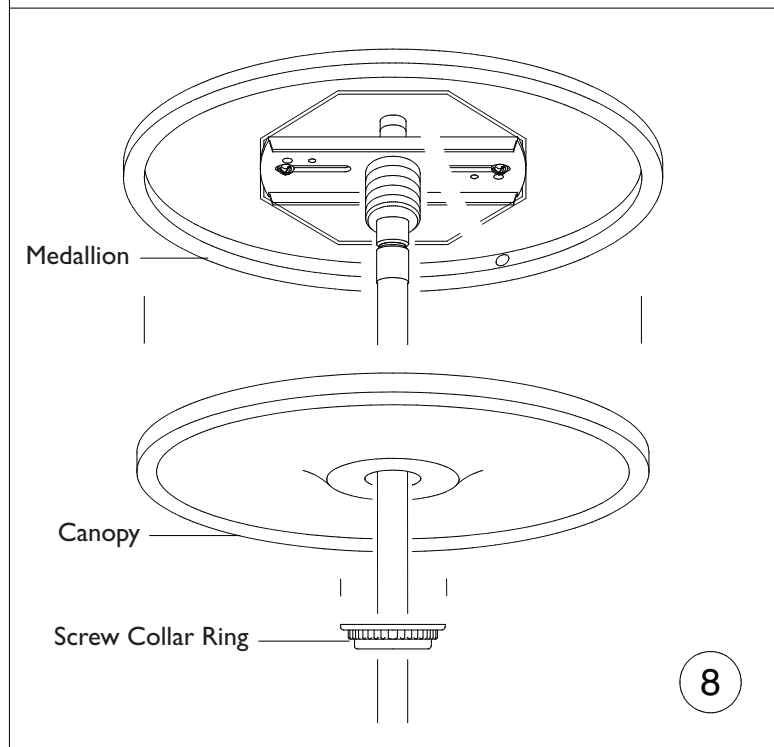

8. While gently tucking all fixture wires inside, raise canopy against the medallion and lock into position by screwing collar ring onto screw collar.




**MURRAY
FEISS**

GENERATION
BRANDS™

Assembly Instructions For

F2528/5

Pg. 6 of 6 (E) 10/09

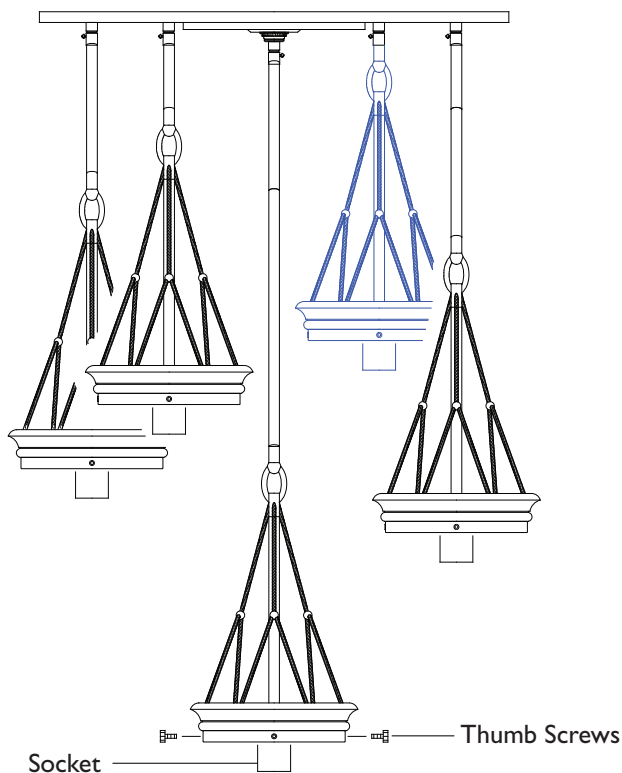

9


10

11

9. Install bulbs (not included). See relamping label located near socket area for type and maximum allowed wattage. Repeat others.

10. Install shade onto fixtures by fastening with thumb screws.

11. Install glass drop by hooking onto bottom end of shades.



**MURRAY
FEISS**

GENERATION
BRANDS™