



# Assembly Instructions For **FM300, FM301** (E) 3/08

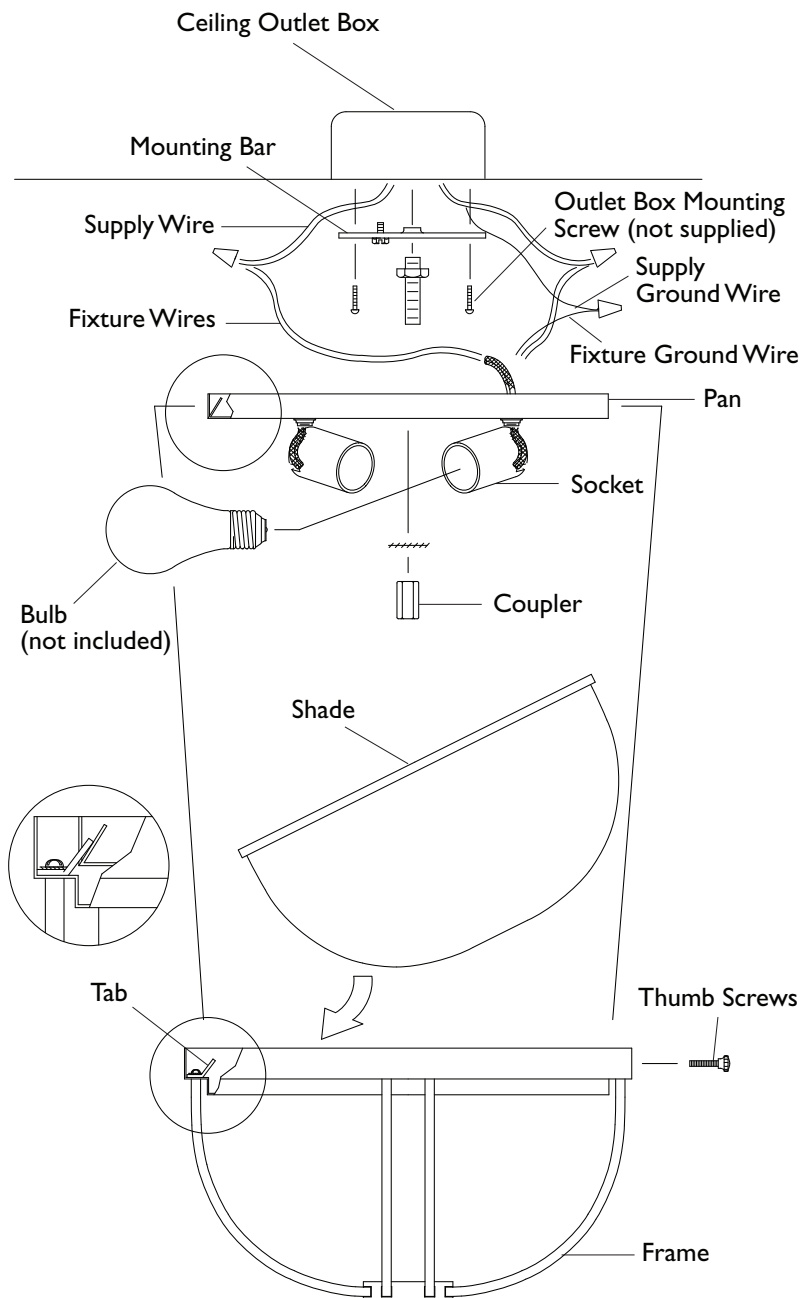

## **IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION**

Carefully unpack and identify all parts before assembly. Bulb not included.

1. Attach mounting bar securely to ceiling junction box with two machine screws (supplied with junction box) through slot at each end of mounting bar.  
Note: mounting bar should be installed with "GND" imprint and/or two dimples facing down.
2. Fasten one hex nut about 3/4" (19 mm) down from one end of threaded pipe. Then screw same end of threaded pipe into center hole in mounting bar. At this point test install the pan onto ceiling through this threaded pipe and make certain 3/8" (10 mm) of pipe protrude below. If not, then adjust the threaded pipe location by screwing up or down accordingly. Once correct threaded pipe location has been adjusted, remove pan and tighten hex nut against mounting bar. Make certain not to spin threaded pipe during tightening.
3. Spread the electrical wires so that the black wires are on one side of the outlet box and the white wires are on the other side.
4. Electrical connections:  
Connect the white wire from the fixture to the white wire of the outlet box. Connect the black wire from the fixture to the black wire of the outlet box.  
NOTE: Black outlet box wire may be red, round & smooth and/or have copper conductor. White outlet box wire may be square & ridged and/or have a silver conductor.
5. Grounding Connection:  
Connect fixture ground wire (without insulation) to ground wire from outlet box (usually with green insulation) with wire connector (not provided).  
IMPORTANT: Never connect ground wire to black or white power supply wires.
6. Place pan thru top threaded pipe so that it sits flush against ceiling. Be sure all wires are inside pan. Secure pan to ceiling by fastening lock washer and coupler onto top threaded pipe. Note: Coupler must turn at least 3 times, if it does not you must remove coupler and lengthen threaded pipe accordingly.
7. Install bulb (not included). See relamping label located at socket area for type and maximum allowed wattage.
8. Install shade and frame:  
A. Carefully insert shade inside of frame. Note: Insert shade in an angle and first tucking below the tab located inside of frame.  
B. While firmly holding onto frame, hook the side of frame that has tab onto one of the slots in pan. Then lock them into position by fastening with thumb screw onto another slot in opposite side of pan.  
  
IMPORTANT: Make certain thumb screw is firmly tightened. While firmly holding onto frame, gently shake the frame to test whether they are securely locked together. If not, then tighten the thumb screw or repeat above step #8-B.

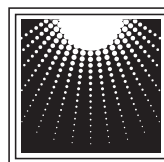

**MURRAY  
FEISS**  
Generation Brands™