
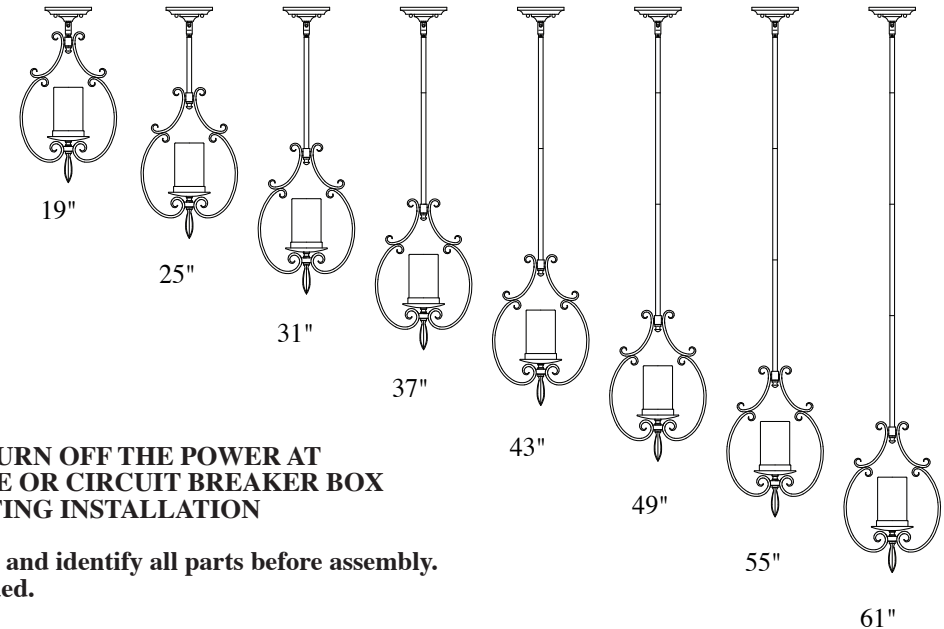


ASSEMBLY INSTRUCTIONS FOR P1107

(E) 10/06

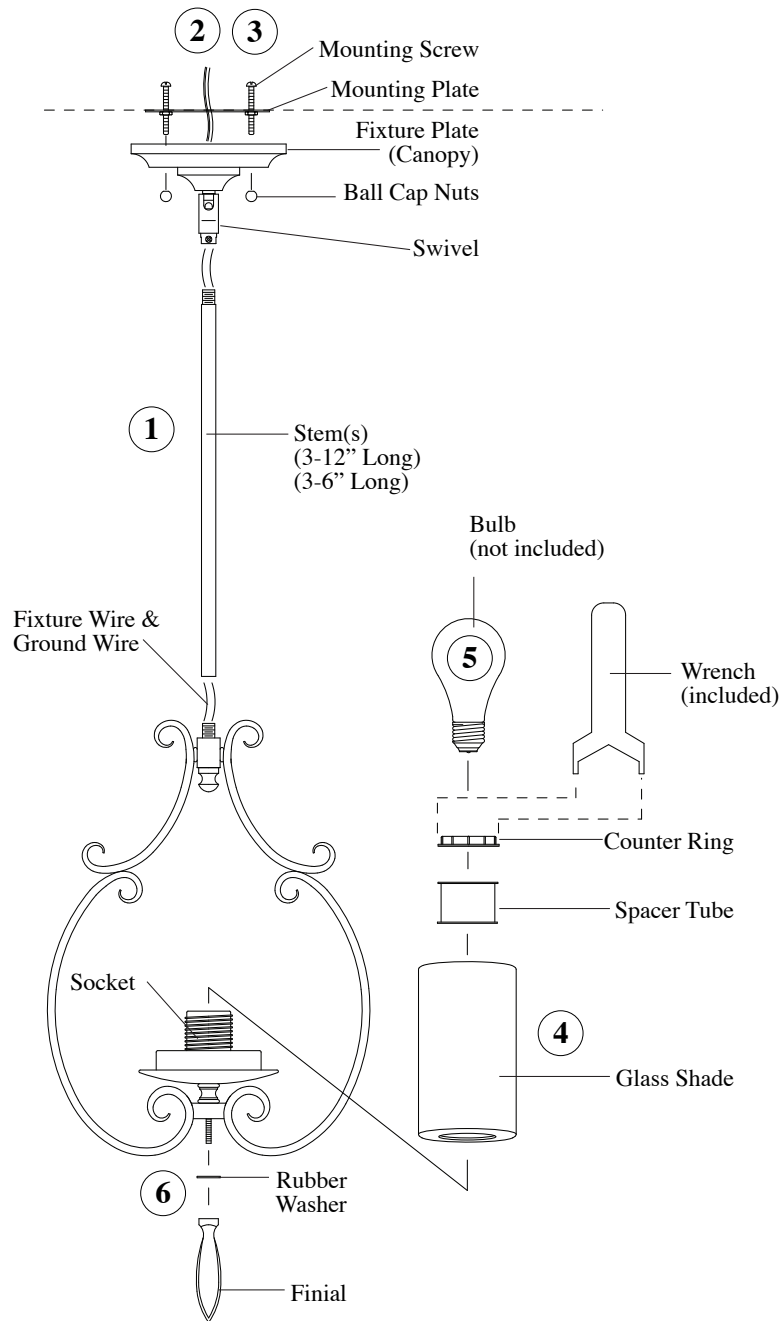

IMPORTANT: TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulb is not included.

1. STEM HUNG INSTALLATION:

A. Choose desired installation height from dimensions shown in above diagram. Thread fixture wire through each stem to be used. Please note correct position of stems from left diagram. Screw all stems together until secure.

FLUSH MOUNT INSTALLATION:

A. Thread fixture wires through swivel.

B. Screw fixture into swivel.

2. Measure 6" of wire from end of fixture plate and cut off remaining wire. Split wires and strip off 3/4" of insulation from each end.

3. Follow enclosed **"Multiple Standard Installation Instructions"** for electrical and fixture installation onto wall outlet box.

4. Place shade over threaded socket and then the spacer tube and secure all with counter ring, using supplied wrench.

5. Install bulbs (not included). See relamping label located near socket area for type and maximum allowed wattage.

6. Place rubber in between and fasten finial onto bottom of main frame.