
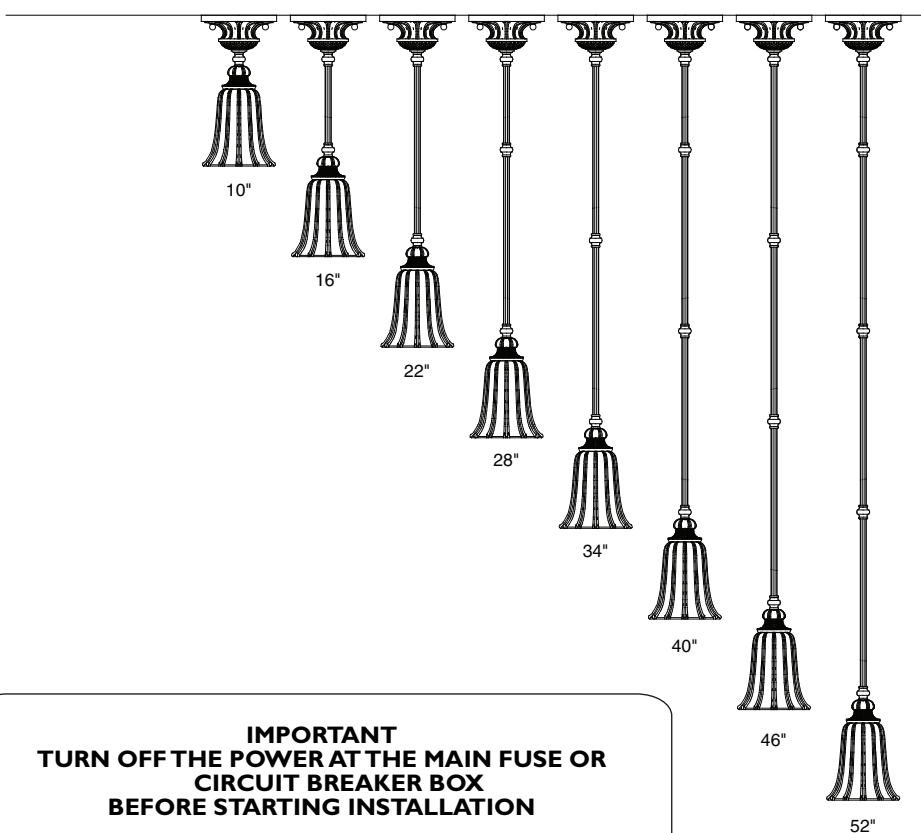


Assembly Instructions For

P1205

(E) 12/09

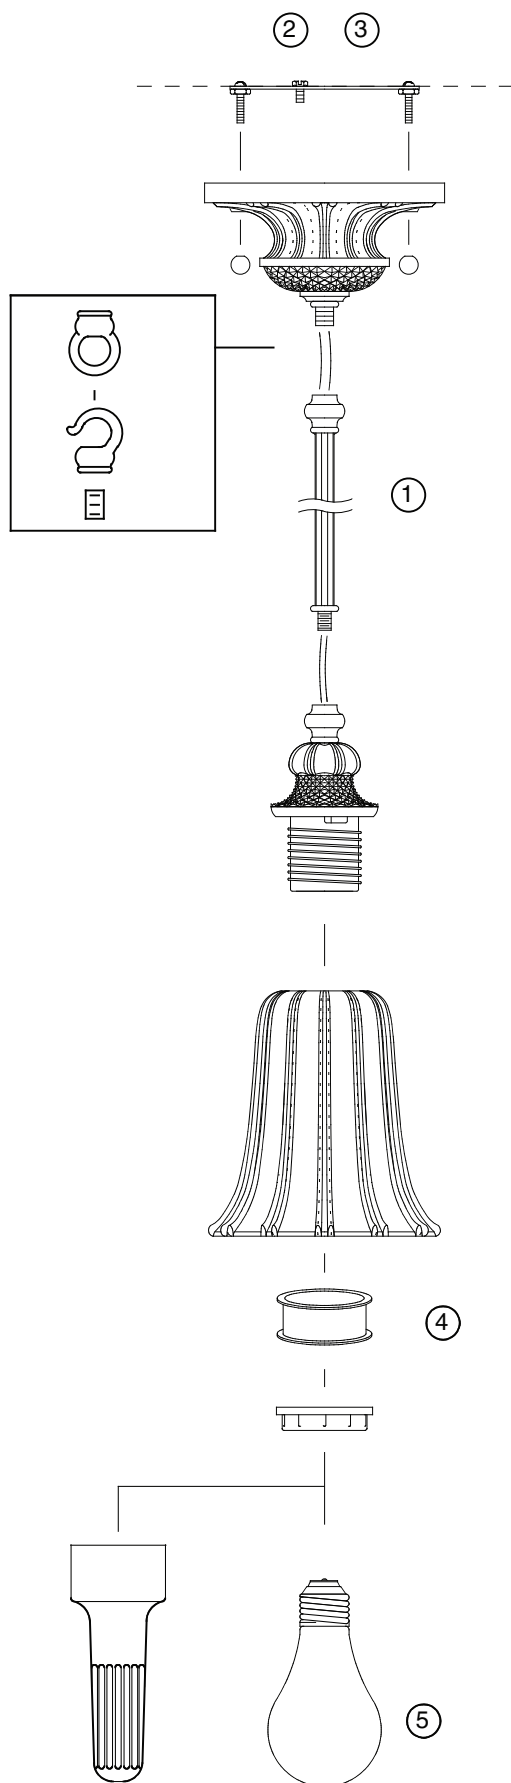

IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION


Carefully unpack and identify all parts before assembly. Bulb not included.

I. STEM HUNG INSTALLATION:

- A. Choose desired installation height from dimensions shown in above diagram. Thread fixture wires through each stems to be used. Note correct position of stems from left diagram. Screw all stem together until secure. Screw bottom stem into fixture coupler until secure.
- B. Thread fixture wires from top stem through canopy. Install top end of stem assembly by screwing into canopy.

WITHOUT STEM INSTALLATION:

- A. Thread fixture wires from top of fitter through canopy. Then screw canopy on top of fitter.
2. Cut excess wires leaving only 6" (15 cm) length of wires above canopy. Split fixture wire into two strands. Then strip off 3/4" (19 mm) of outer plastic insulation.
3. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture then hire a qualified electrician to create one.
4. Install glass shade onto fitter by fastening with spacer tube and counter ring. Use provided wrench to tighten.
5. Install bulb (not included). See relamping label located near socket area for type and maximum allowed wattage.



**MURRAY
FEISS**

GENERATION
BRANDS™