
Assembly Instructions For

SF249 (E) 10/07

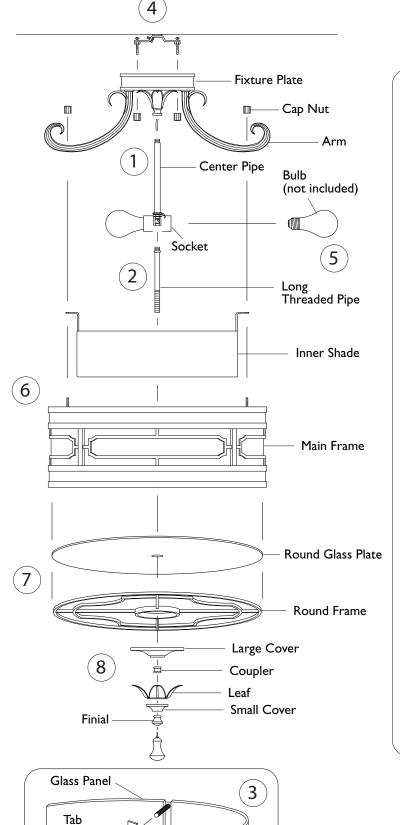

Cap Nut

> Long Strip

IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulb not included.

- Screw center pipe onto fixture plate while removing any slack in wires in between parts.
- Install long threaded pipe by screwing into bottom of socket assembly. Note correct position of pipe at illustration.
- 3. Install glass panels:
 - A. Gently grabbing onto a glass panel, place at inside of main frame. Make certain bottom of panel sits at inside groove.
 - B. While one person is holding onto this panel, have another person install another panel adjacent to it.

 C. Lock both panels by fastening with a long strip, tab
 - and cap nut. Do not over tighten. D. Repeat rest panels.
- 4. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
- Install bulb (not included). See relamping label located at socket area for type and maximum allowed wattage.
- 6. A. Spread open arms so they are equally spaced apart from each other.
 - B. Place inner shade slipping onto threaded studs located at top of main frame.
 - C. Install main frame onto arms by fastening with cap nuts from above.
- Slip round glass plate, round frame, and large cover through the long threaded pipe. Secure them in place by fastening with coupler. IMPORTANT: Do not over tighten.
- 8. Slip leaf and small cover through the pipe. Secure them in place by carefully fastening with finial.



