


# Assembly Instructions For


# SF256 (E) 11/08

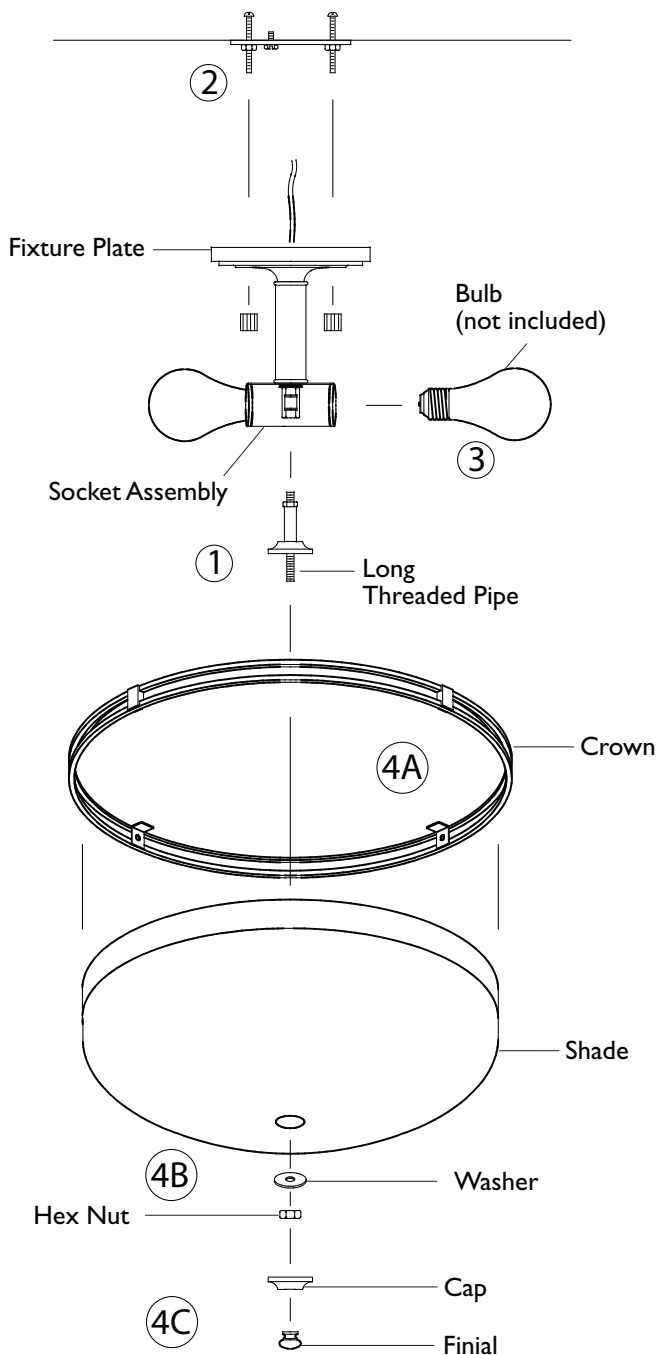

## IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulbs not included.

1. Screw the long threaded pipe into coupler located at bottom of socket assembly. Note correct position of threaded pipe at illustration.
2. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
3. Install bulb (not included). See relamping label located at socket area for type and maximum allowed wattage.
4. A. Sit crown on top of glass shade. Then while holding securely onto the glass shade, slide through the installed threaded pipe until shade comes to a stop.  
B. Secure into position by fastening with a flat washer and hex nut. Do not over tighten.  
C. Afterward, slip cover and install finial by screwing onto protruding threaded pipe.

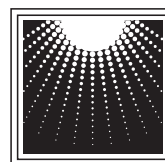

**MURRAY  
FEISS**

Generation Brands™