


Assembly Instructions For

SF263 (E) 11/08

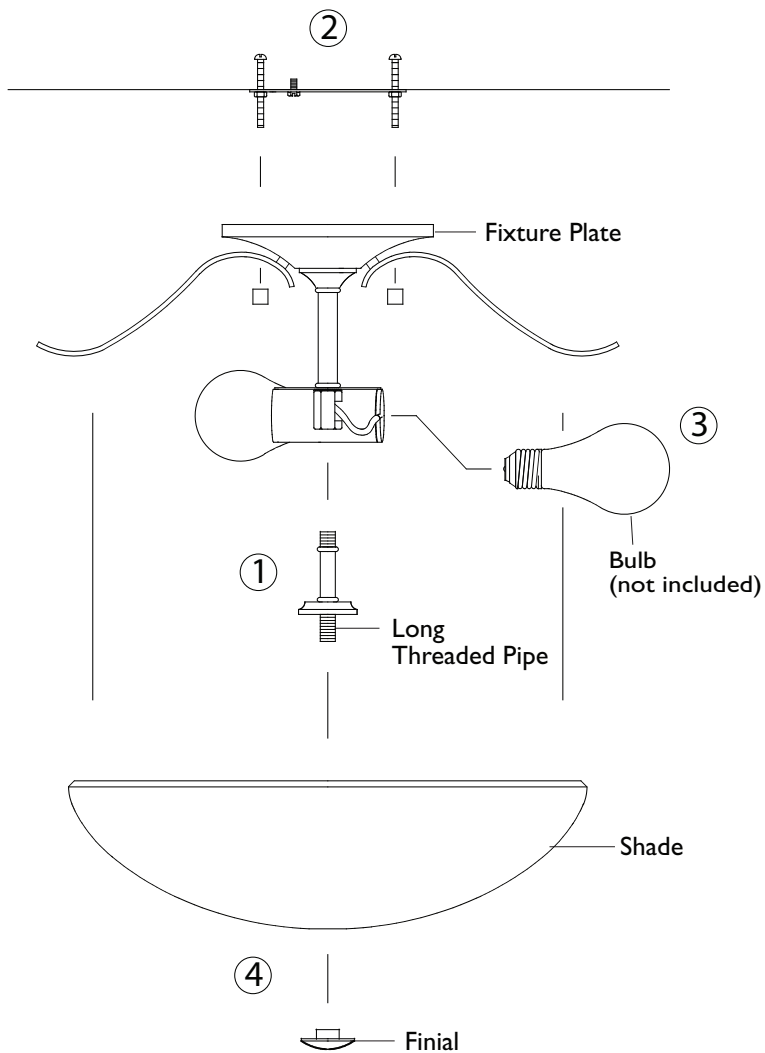


IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulb not included.

1. Screw the long threaded pipe into coupler located at bottom of socket assembly. Note correct position of threaded pipe at illustration.
2. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
3. Install bulb (not included). See relamping label located near socket area for type and maximum allowed wattage.
4. Install shade by slipping through the already installed center pipe and then fastening with a finial. Do not over tighten.

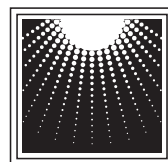

MURRAY
FEISS
Generation Brands™