


Assembly Instructions For

T1191

(E) 1/10

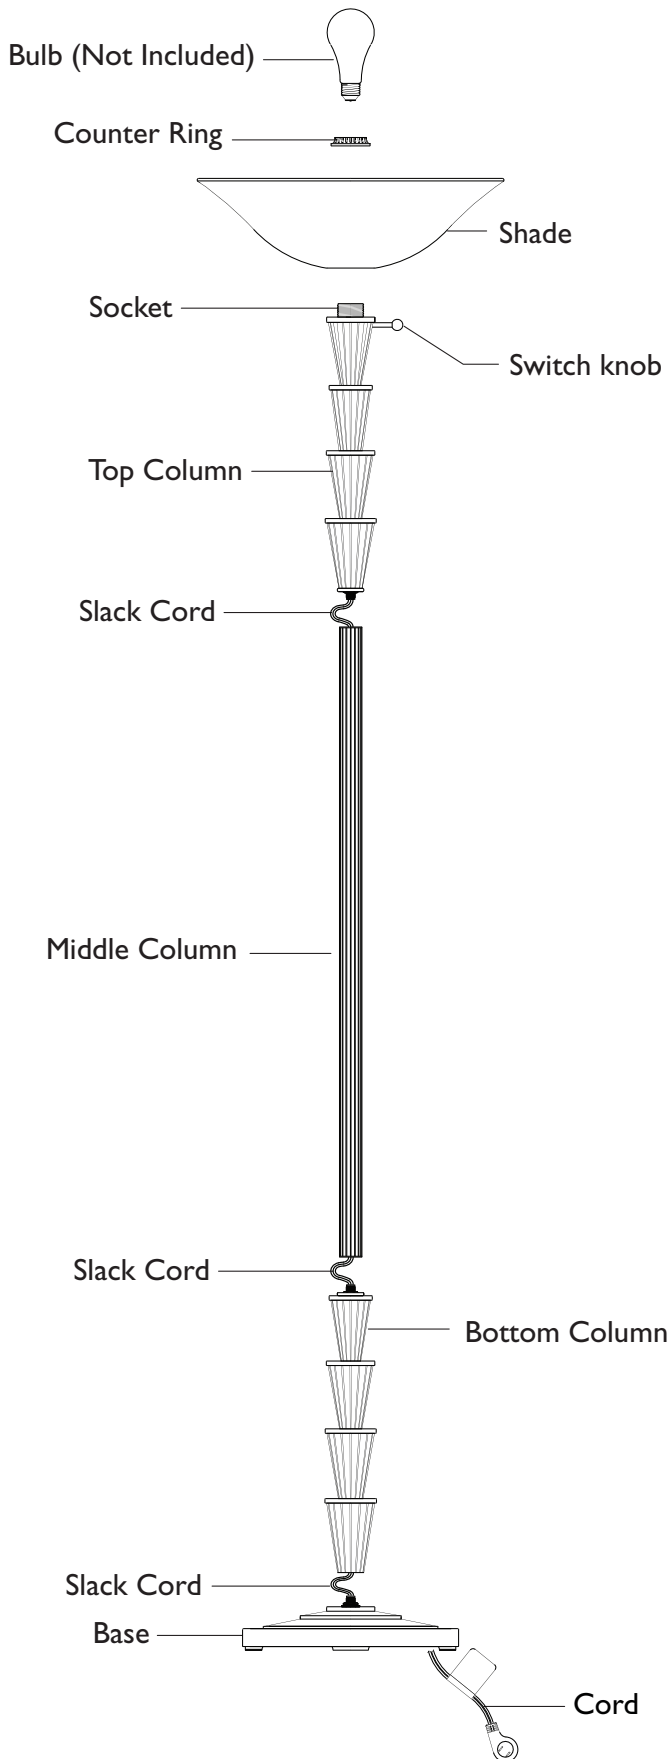


READ ALL INSTRUCTIONS BEFORE ASSEMBLING LAMP

Carefully unpack lamp parts onto carpeted surface or blanket and identify all parts.

1. Grasp Cord that exits at bottom of Base and pull gently (do not pull Cord from Cord Hole) until Slack Cords between Columns and Base disappears.
2. Thread Bottom Column onto Base and turn to tighten.
3. Thread Middle Column onto Bottom Column and turn to tighten.
4. Thread Top Column onto Middle Column and turn to tighten. Then pull the excess Cord through Cord Hole and set lamp upright on Base.
5. Place glass shade onto socket by fastening counter ring onto threaded socket.
6. Install a Type A, 150 Watt Max. 3-Way Medium Base Bulb (not included) into Socket as noted on relamping label at Socket area.

IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.



**MURRAY
FEISS**

GENERATION
BRANDS™