



Assembly Instructions For **WB1352** (E) 10/07

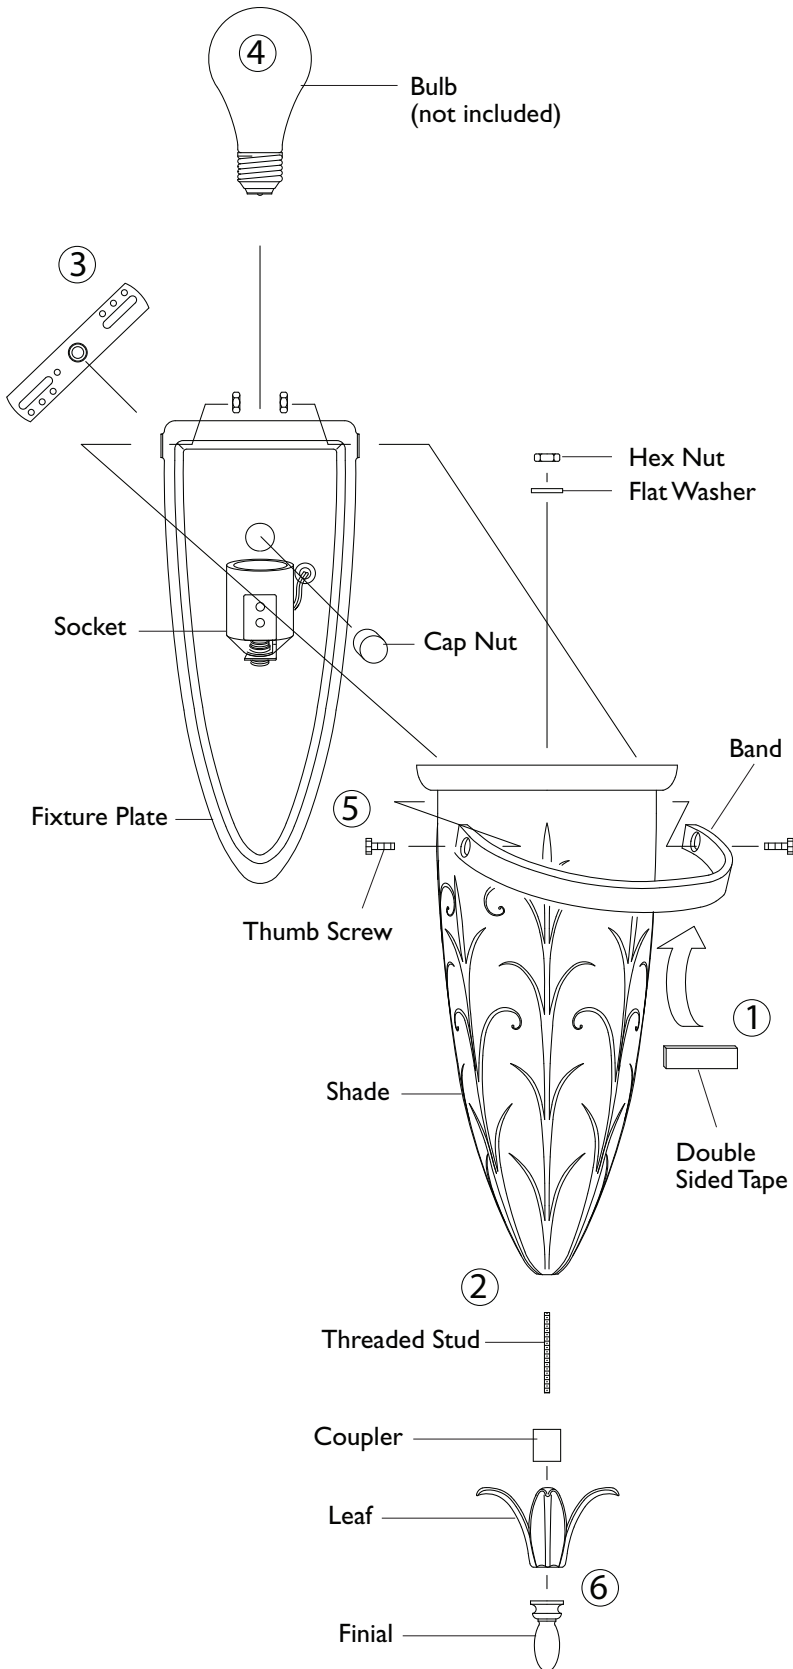

IMPORTANT **TURN OFF THE POWER AT THE MAIN FUSE OR** **CIRCUIT BREAKER BOX** **BEFORE STARTING INSTALLATION**

Carefully unpack and identify all parts before assembly. Bulb not included.

1. Remove protective films from double sided tape and affix onto center rear surface of band. Then press the band onto glass shade, making certain holes in band and glass shade are aligned to each other.
2. Install threaded stud into coupler, leaving about 3/8" (10 mm) thread exposed at other end. Slip the long end of threaded stud through hole at bottom of glass shade. Secure by fastening with flat washer and hex nut from above. **IMPORTANT: DO NOT OVER TIGHTEN.**
3. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
4. Install light bulb (not included). See relamping label located near socket area for type and maximum allowed wattage.
5. Install shade onto fixture plate by fastening with thumb screws.
6. Install leaf onto bottom of shade by fastening with a finial.

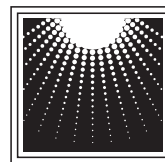

MURRAY
FEISS
Generation Brands™