


Assembly Instructions For

WB1369 (E) 3/08

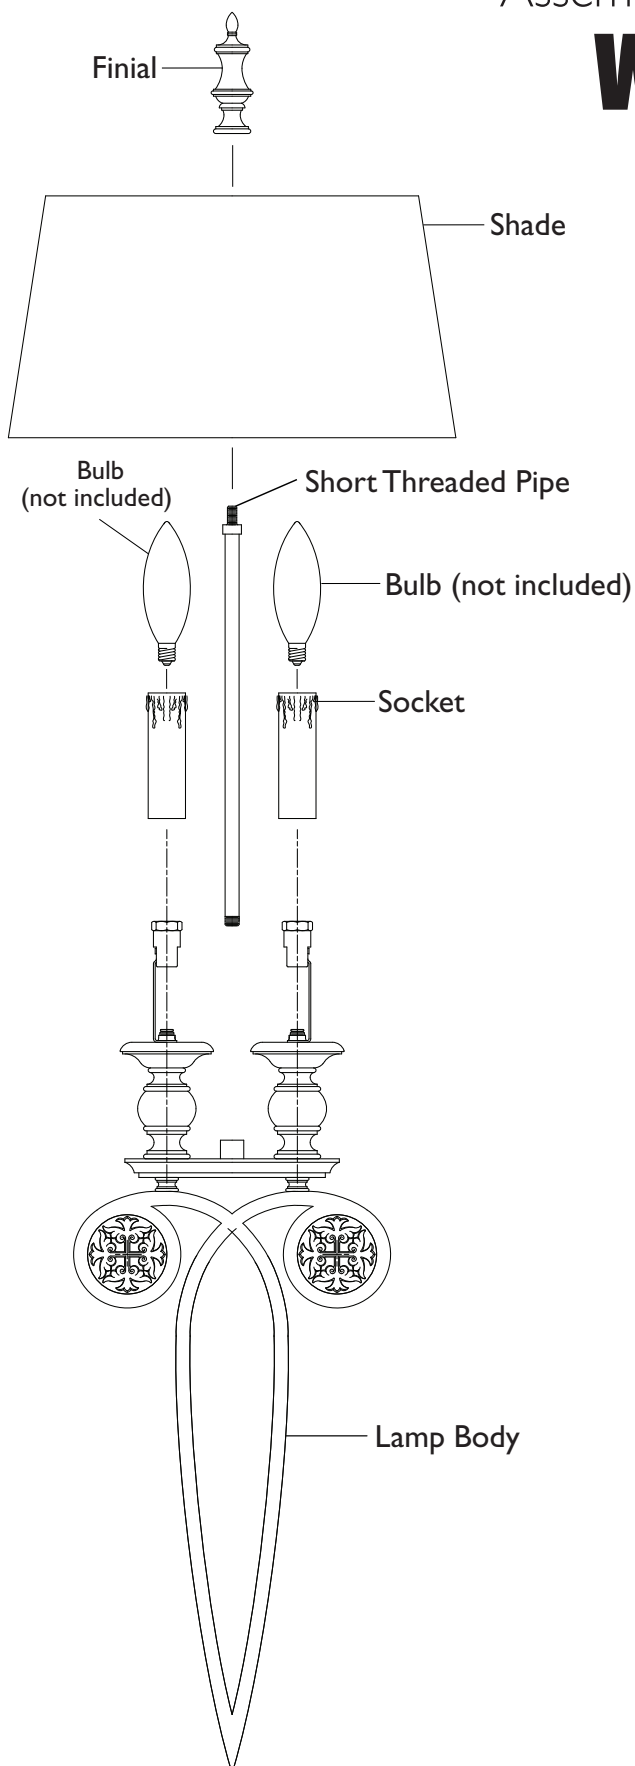

READ ALL INSTRUCTIONS BEFORE ASSEMBLING LAMP

Unpack lamp parts onto carpeted surface or blanket. Be sure to place parts in a line that closely resembles assembled lamp. All wires are connected when unpacking. Be careful handling wires during assembly.


1. Install a Type B, 60 Watt Max. Candelabra Base Bulb (not included) into Socket as noted on relamping label at Socket area.
2. Install Shade onto short threaded pipe and screw finial onto short threaded pipe to secure shade.

3. ELECTRICAL PLUG IN:

Option 1: Plug onto existing wall outlet receptacle: Run wall bracket electrical wire down wall and plug into existing house wall outlet. Attach cord cover assembly to wall using supplied plastic anchor's. (See option 1).

IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

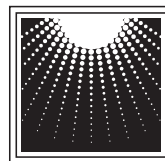

**MURRAY
FEISS**

Generation Brands™