


# Assembly Instructions For


# WB1396 (E) 10/08

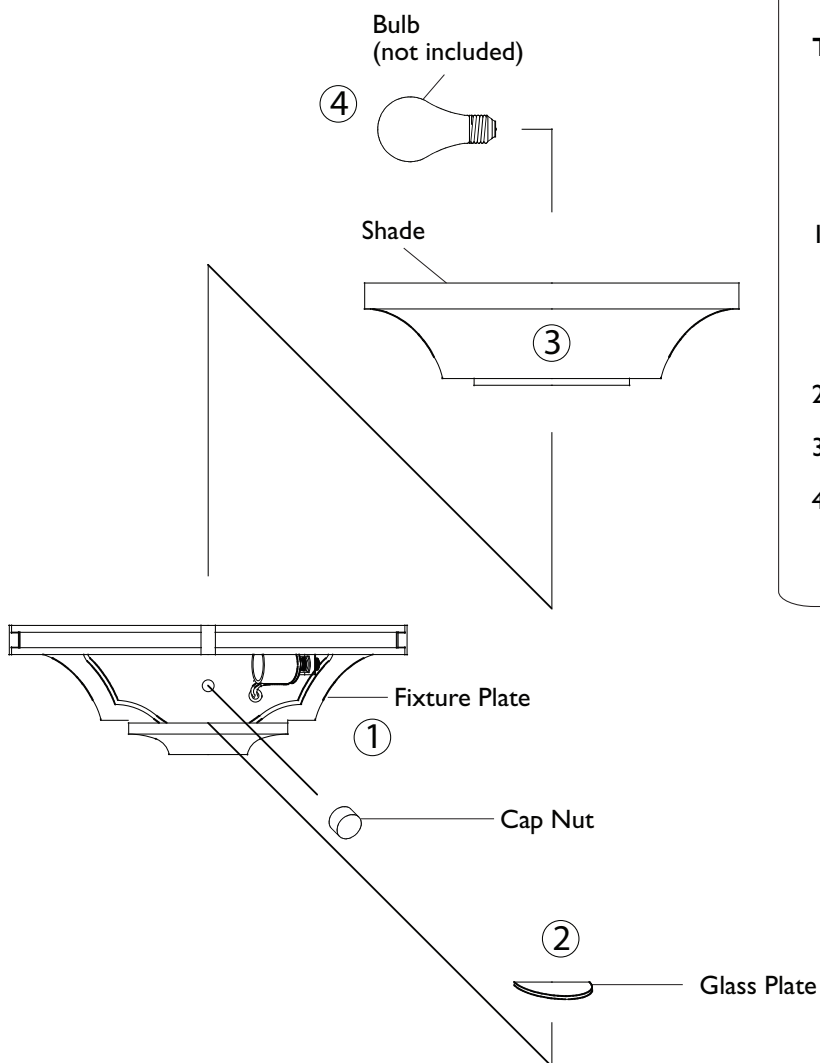

## IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly.  
Bulbs not included.

1. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
2. Place glass plate at bottom inside of the fixture plate.
3. Install shade by slipping inside of the fixture plate.
4. Install bulb (not included). See relamping label located at socket area for type and maximum allowed wattage.

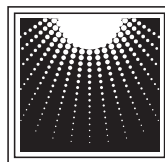

**MURRAY  
FEISS**  
Generation Brands™