#### Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Quoizel, Inc. 6 Corporate Parkway Goose Creek, SC 29445

Customer Service Phone 631.273.2700 Fax 631.231.7102 www.quoizel.com

# Assembly Instruction Sheet #IS-ALZ1404AN For Style ALZ1404AN

**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

**Bulb Recommended:** (4) Medium Base 100W Maximum

Estimated Assembly Time: 20-30 minutes

**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



#### **Warnings and Cautions**


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

### **Package Contents**

Part	Description	Quantity
Α	Crossbar	1 pc.
В	Mounting Screw	2 pcs.
С	Lock Washer	2 pcs.
D	Hex Nut	2 pcs.
Е	Mounting Ball	2 pcs.
F	Socket Collar Tool	1 pc.
G	Socket Collar	4 pcs.
Н	Shade	4 pcs.
I	Fixture Assembly	1 pc.

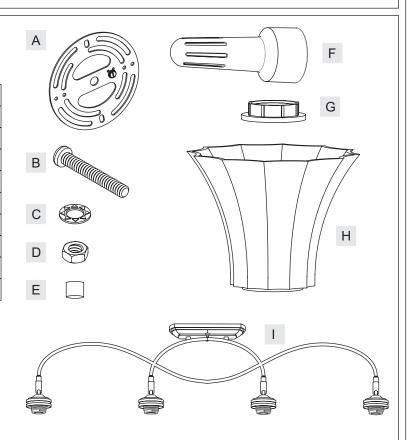


Thank you for purchasing a Quoizel product.


Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

March 2013

#### ALZ1404AN

FINISH: ANTIQUE NICKEL

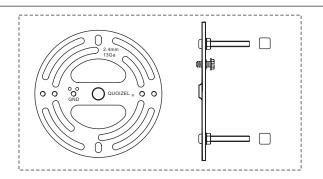

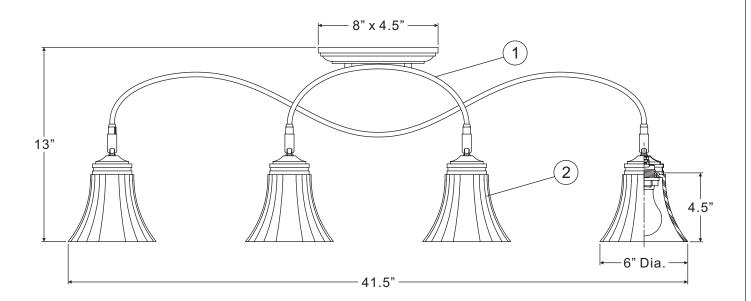



(4)100W Medium Base Bulbs (Not Supplied)

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	11404ANALZ	BASE ANTIQUE NICKEL ALZ1404AN	1
2	G3516SH	GLASS SHADE ETCHED 6"X4.50"	4


2of5

Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

# Assembly Instruction Sheet #IS-ALZ1404AN For Style ALZ1404AN


#### STEP 1 – Attach Mounting Screws, Lock Washers and Hex Nuts to Crossbar

- A. Line up a set of holes on the Crossbar (A) and Holes on the Ceiling Canopy on the Fixture Assembly (I).
- B. Thread Mounting Screws (B) into the holes on the Crossbar (A), pass Lock Washers (C) and thread Hex Nut (D) onto the Mounting Screws (B). Hand tighten until snug.

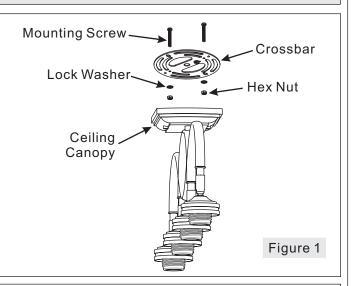

#### STEP 2 - Attach Crossbar to Outlet Box

A. Attach the Crossbar (A) to Outlet Box and secure by threading Outlet Box Screws (not supplied) into the Mounting Holes on the Outlet Box. Tighten until snug.

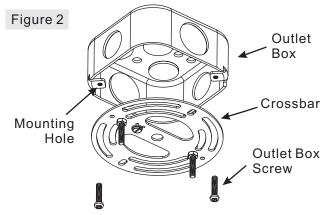


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

# Assembly Instruction Sheet #IS-ALZ1404AN For Style ALZ1404AN

#### STEP 3 - Make Wire Connections


- A. Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
- B. Connect White Supply Wire from the Outlet Box to White Wire from fixture.
- C. Connect Black (or Red) Supply Wire from the Outlet Box to Black Wire from fixture.
- D. Connect Ground Wire from the Outlet Box to Ground Wire from fixture.
- E. Twist connectors until wires are tightly joined together.
- F. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

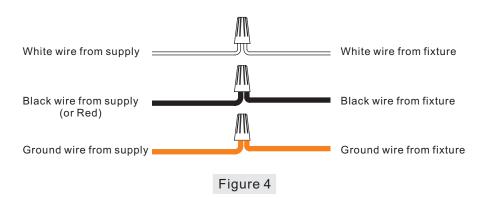



### STEP 4 – Attach Ceiling Canopy to Mounting Screw

A. Place the Ceiling Canopy on the top of the Fixture Assembly (F) over the Mounting Screws (B) and secure with Mounting Balls (E). Hand tighten until snug.

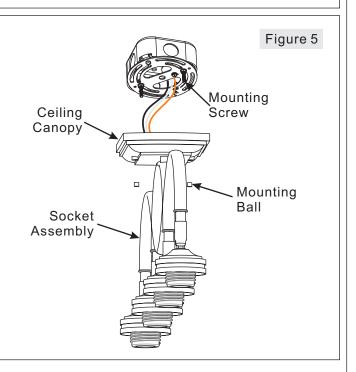

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com


March 2013



### Assembly Instruction Sheet #IS-ALZ1404AN For Style ALZ1404AN

#### STEP 5 - Install Shade


A. Place the Shade (H) over the Socket as shown. By using the Socket Collar Tool (F), thread the Socket Collar (G) onto the Socket. Hand tighten until snug.

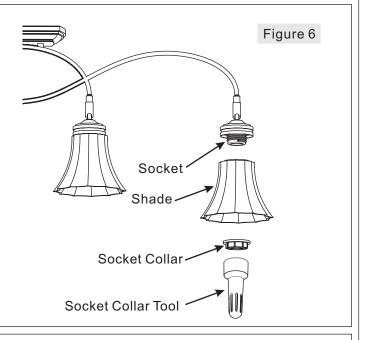

#### STEP 6 - Install Bulb

- A. This fixture uses standard bulb with a standard screw base. Maximum 100 watts.
- B. Insert bulb and screw properly into place.

Your fixture is now assembled and ready to use. Enjoy!

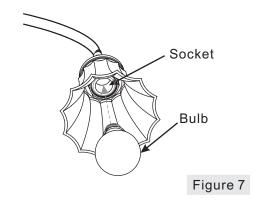

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com