Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Quoizel, Inc. 6 Corporate Parkway Goose Creek, SC 29445

Customer Service Phone 631.273.2700 Fax 631.231.7102 www.quoizel.com

Assembly Instruction Sheet #IS-CKSY44030DL For Style CKSY44030DL

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, gloves, safety glasses.

Bulb Recommended: None.

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the mirror. Contact customer service for replacement parts.




Warnings and Cautions

These instructions are provided for your safety. It is very important you read them completely before installing the mirror. We strongly recommend that a licensed, professional electrician perform the installation.

Package Contents


Part	Description	Quantity
Α	Mirror Hanger	2 pcs
В	Hanger Nail	4 pcs
С	Tab	6 pcs
D	Lock Screw	6 pcs
E	Backing	1 pc
F	Mirror	1 pc
G	Mirror Frame	1 pc

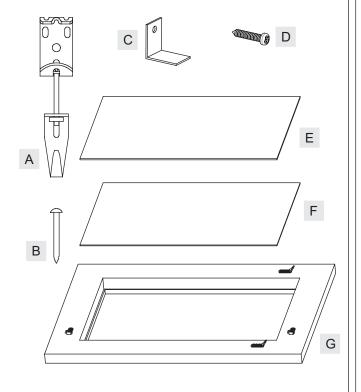

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

© 2012 QuoizelInc. September 2012

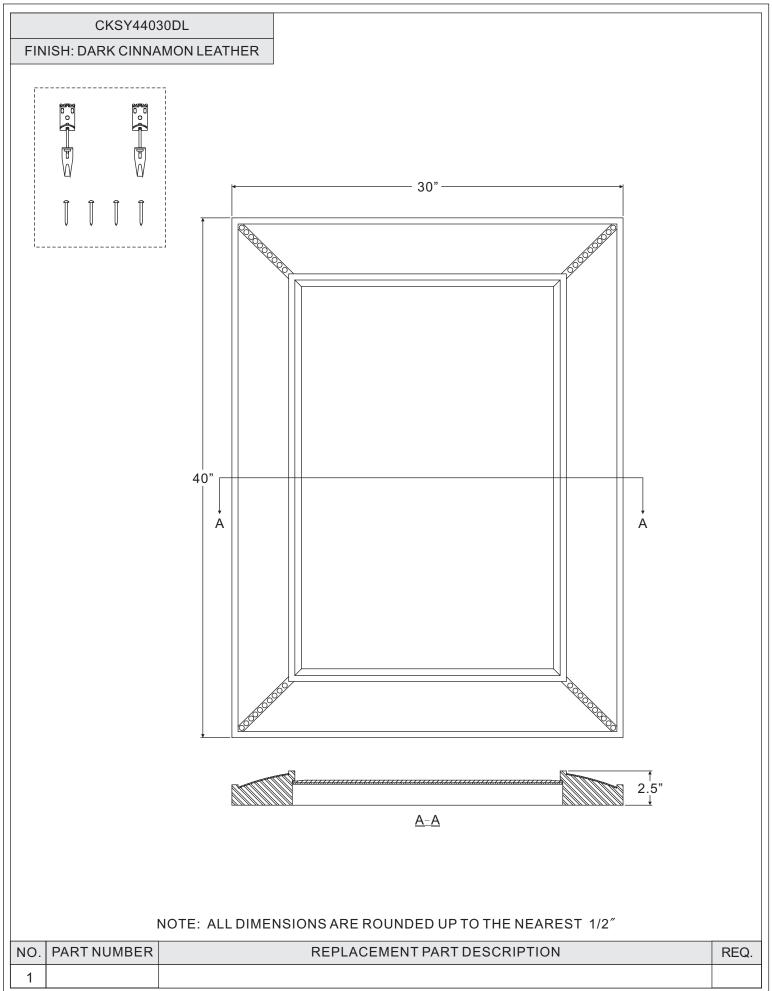


2of5

Q U O I Z E L
6 CORPORATE PARKWAY
GOOSE CREEK, SC. 29445
www. quoizel. com

Assembly Instruction Sheet #IS-CKSY44030DL For Style CKSY44030DL

STEP 1 – Attach Mirror and Backing to Mirror Frame


- A. (Refer to Figure 1) Place the Mirror Frame (G) onto a flat working surface with backing facing you. Place the Mirror (F) and the Backing (E) onto the back of the Mirror Frame (G).
- B. (Refer to Figure 2) Place Tabs (C) onto the Backing (E) and the Mirror Frame (G). Pass Lock Screws (D) through holes on Tabs (C) and thread into the Mirror Frame (G). Hand tighten until snug.

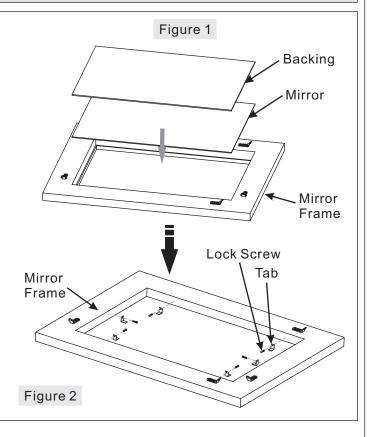

FOR VERTICAL

STEP 2 - Mark Points for Mirror Hangers

- A. Lift and position where the Mirror will reside on the wall surface and with a tape measure, mark distance from floor to the bottom edge of the frame with a pencil. Mark should be located at a point representing ½ of mirror width.
- B. Place the Mirror on a flat surface with back facing you. Measure the distance from the bottom edge of the Mirror Frame to the middle point between two Hangers. This represents distance "B" in the illustration.
- C. With tape measure, add this distance to Mark "A" on wall surface and mark with pencil.
- D. Measure distance between the centerline of (2)
 Hangers. Add this ½ distance from Mark "B" on each
 side and mark with pencil. (Distance "C" in the
 illustration)
- E. Measure 3" up from Mark "C" and mark. These marks are locators for the (2) Mirror Hangers. Check for marks straightness with level.

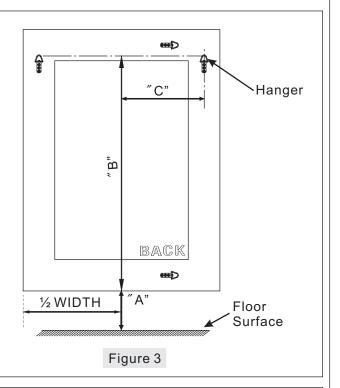

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com


© 2012 Quoizel Inc. September 2012

Assembly Instruction Sheet #IS-CKSY44030DL For Style CKSY44030DL

STEP 3 - Locate Mirror Hangers and Mirror

- A. Locate Mirror Hangers (A) and align the top center with 3" Locator mark. Secure them to wall surface with Hanger Nails (B). Please be noted that the Mirror Hangers are fully adjustable allowing for easy leveling.
- B. With Mirror Hangers properly installed, be sure that the (2) Bracket Catches are approximately equal in length from the top of Mirror Hangers (A). Adjust overall length with Adjustment Screws.
- C. With the help of another person, pass the Hangers at the back of the Mirror over the Mirror Hangers (A) so that the Hangers rest on the inside of the Bracket Catches.


Clean glass with household glass cleaner. Retain this sheet for future reference.

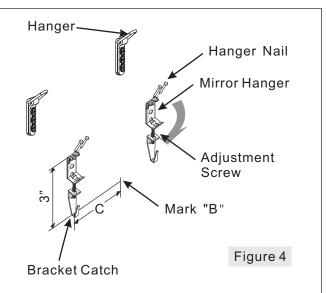

FOR HORIZONTAL

STEP 4 – Mark Points for Mirror Hangers

- A. Lift and position where the Mirror will reside on the wall surface and with a tape measure, mark distance from floor to the bottom edge of the frame with a pencil. Mark should be located at a point representing ½ of mirror width.
- B. Place the Mirror on a flat surface with back facing you.
 Measure the distance from the bottom edge of the
 Mirror Frame to the middle point between two Hangers.
 This represents distance "B" in the illustration.
- C. With tape measure, add this distance to Mark "A" on wall surface and mark with pencil.
- D. Measure distance between the centerline of (2) Hangers. Add this ½ distance from Mark "B" on each side and mark with pencil. (Distance "C" in the illustration)
- E. Measure 3" up from Mark "C" and mark. These marks are locators for the (2) Mirror Hangers. Check for marks straightness with level.

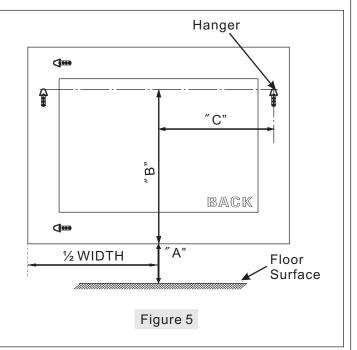

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com

September 2012



Assembly Instruction Sheet #IS-CKSY44030DL For Style CKSY44030DL

STEP 5 – Locate Mirror Hangers and Mirror

- A. Locate Mirror Hangers (A) and align the top center with 3" Locator mark. Secure them to wall surface with Hanger Nails (B). Please be noted that the Mirror Hangers are fully adjustable allowing for easy leveling.
- B. With Mirror Hangers properly installed, be sure that the (2) Bracket Catches are approximately equal in length from the top of Mirror Hangers (A). Adjust overall length with Adjustment Screws.
- C. With the help of another person, pass the Hangers at the back of the Mirror over the Mirror Hangers (A) so that the Hangers rest on the inside of the Bracket Catches.

Clean glass with household glass cleaner. Retain this sheet for future reference.

