

Please go to www.quoizel.com for product cleaning tips. Go to the **Care + Maintenance** selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses, marking pen, 1/16" drill bit, center punch, hammer, drill and wrench.

Light Source: (3) B10 Candelabra Base Bulbs 60W Maximum, bulbs not included.

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to ensure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact your original place of purchase.

⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.


These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents


A Mounting Screw
x 3

B Lock Screw
x 2

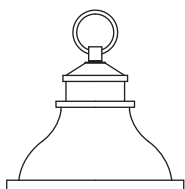

C Fixture Hood
x 1

D Glass Panel
x 4

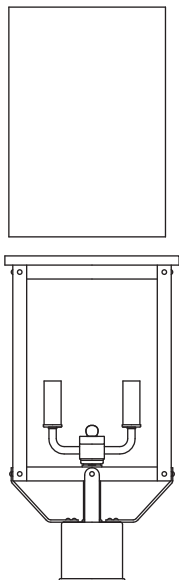

E Fixture Body
x 1

STEP 1 – Install Glass Panels

A. Insert the Glass Panel (D) into the slot of the cage on the Fixture Body (E). Secure by pressing tabs on the top edge of the cage to the top edge of the Glass Panel (D).

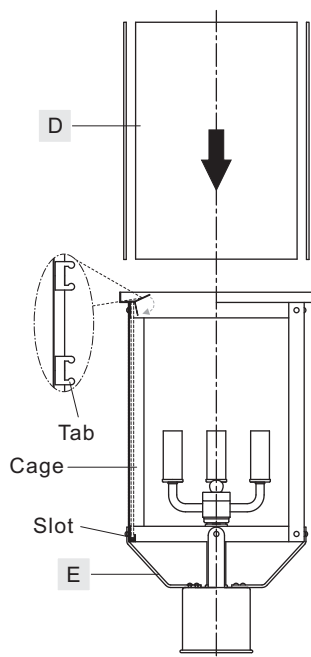


Figure 1

STEP 2 – Install Bulbs and Fixture Hood

A. Insert bulbs into sockets and screw snugly into place.
B. Place the Fixture Hood (C) onto the top edge of the Fixture Body (E) and align mounting holes on the bottom edge of the Fixture Hood (C) to holes on the top edge of the Fixture Body (E). Secure by using Lock Screws (B). Hand tighten until snug with screwdrivers.

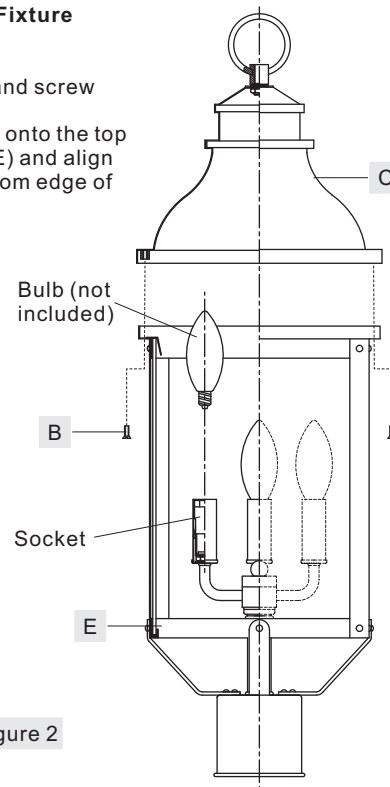


Figure 2

STEP 3 – Mark the Location for the 3 Mounting Holes

A. Place the light fixture onto the post and mark the location of the 3 mounting holes on the fixture fitter onto the post with the marking pen.

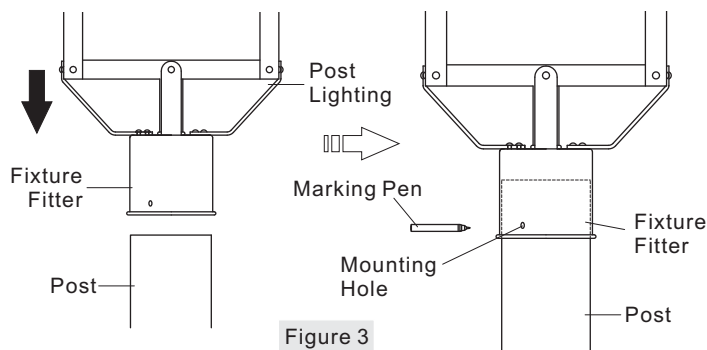


Figure 3

STEP 4 – Marking the Center of Each Mounting Hole

- A. Remove the light fixture. Using the center punch and hammer marking the center of each mounting hole location that is marked with the marking pen.

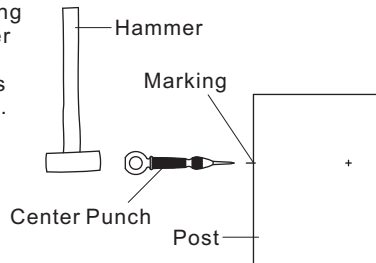


Figure 4

STEP 5 – Drill Holes

- A. Using the 1/16" bit and drill, drill a pilot hole completely through the post at each (3) locations marked in step 4 above.

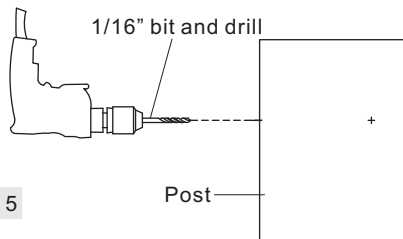


Figure 5

STEP 6 - Wire Connections

- A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

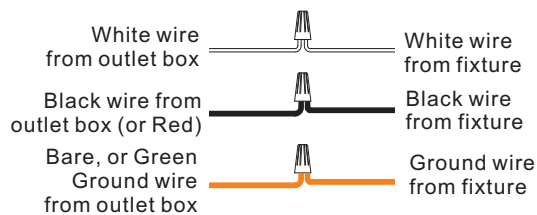


Figure 6

STEP 7 – Attach the fixture to the Post Mount

- A. Place the fixture on the post lining up the mounting holes on the fixture fitter with the holes on the post. Use the Mounting Screws (A) to attach the fixture to the post.

Your fixture is now assembled and ready to use. Enjoy!



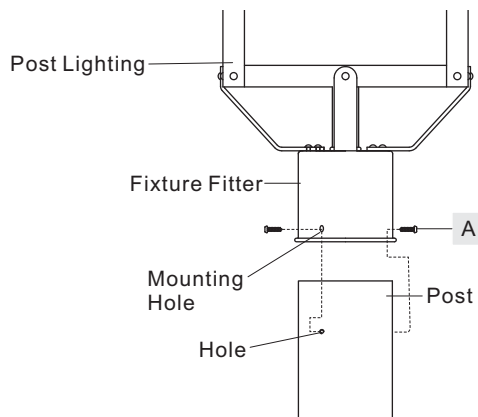


Figure 7

BRS9009AGV

FINISH: AGED VERDE

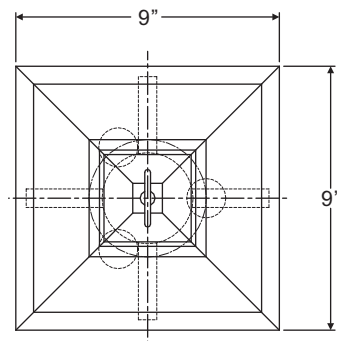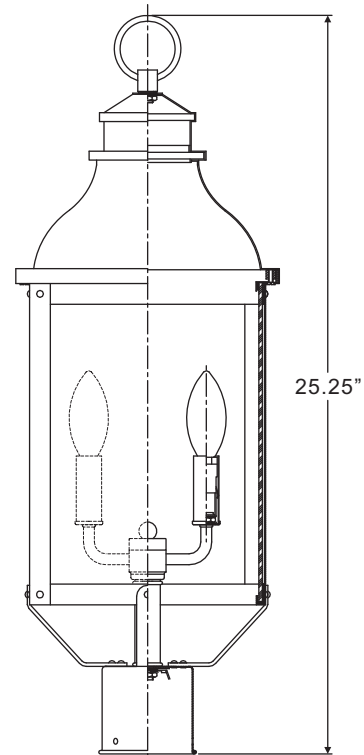

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"