

Assembly Instruction Sheet #IS-CTW8603PK For Style CTW8603PK

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (3) A19 Medium Base Bulbs 100W Maximum

Estimated Assembly Time: 20-30 minutes


Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

△ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.


Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

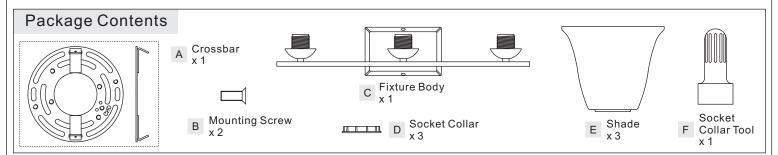

STEP 1 - Install Crossbar


A. Pass the supply wires with ground wire through the Crossbar (A).

Attach the Crossbar (A) to the Outlet Box with the mounting holes on the top and bottom. Secure it with Outlet Box Screws (not included). Tighten until snug.

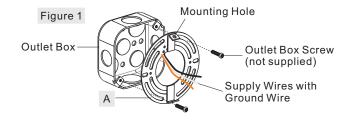

STEP 3 - Install Fixture Body


A. Place the backplate and the Fixture Body (C) over the Crossbar (A) and secure with Mounting Screws (B). Hand tighten until snug with screwdrivers

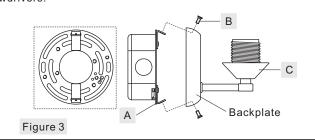

STEP 2 - Wire Connections

© 2017 Quoizel Inc.


- A. Wrap bare or green ground wire around green ground screw on the crossbar, no less than 2 inches from the end of the wire. Tighten the green ground screw.
- B. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

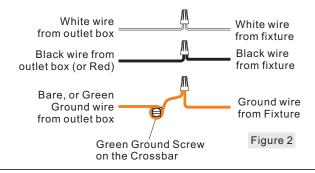

STEP 4 - Install Shades and Bulbs

- A. Place Shade (E) over Socket. By using the Socket Collar Tool (F), thread the Socket Collar (D) onto the socket to secure the Shade (E). Hand tighten until snug.
- B. Insert bulbs onto sockets and screw snugly into place.

Your fixture is now assembled and ready to use. Enjoy!

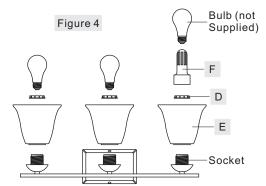

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184 or visit us on-line at www.quoizel.com

