

Please go to [www.quoizel.com](http://www.quoizel.com) for product cleaning tips. Go to the **Care + Maintenance** selection.

**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

**Light Source:** Integrated LED 14W

**Estimated Assembly Time:** 20-30 minutes

**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to ensure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact your original place of purchase.


**Fixture can only be mounted in the direction indicated on page 2.**

### ⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

### Package Contents

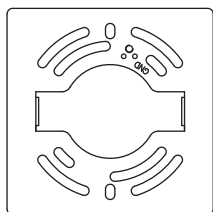


**A** Inner Backplate  
x 1




**B** Mounting Screw  
x 2



**C** Allen Wrench  
x 1

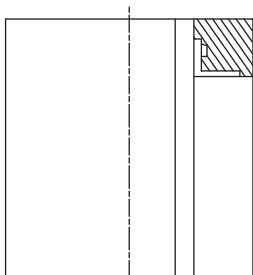


**D** Cement Shade  
x 1

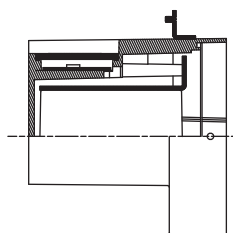

**E** Fixture Body  
x 1

### STEP 1 – Install the Inner Backplate to the outlet box


A. Place the supply wires and ground wire through the Inner Backplate (A). Attach the Inner Backplate (A) to the outlet box with the head of the green ground screw facing you. Secure it with outlet box screws (not included). Tighten until snug with screwdrivers.

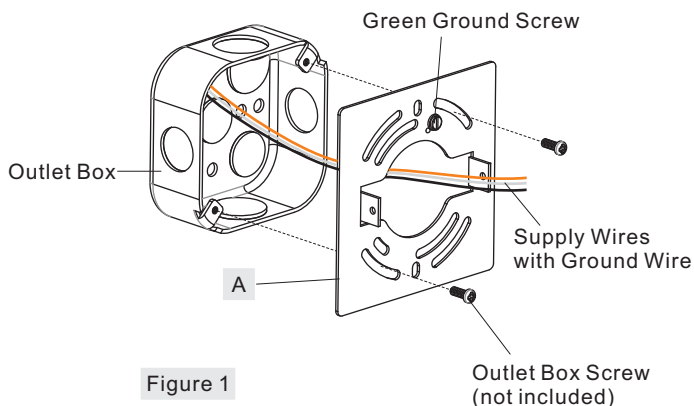

### STEP 2 - Wire Connections


A. Wrap bare or green ground wire around green ground screw on the crossbar, no less than 2 inches from the end of the wire. Tighten the green ground screw.

B. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

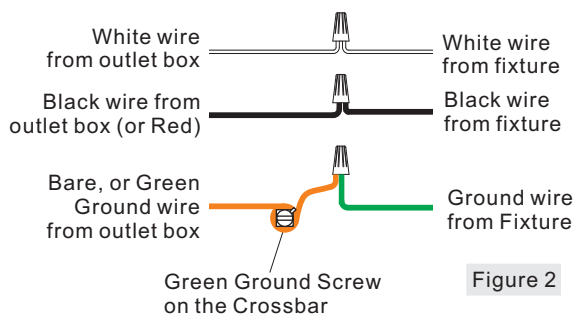

### STEP 3 – Install the Fixture Body

A. Place the backplate of the Fixture Body (E) onto the Inner Backplate (A) and secure with Mounting Screws (B). Tighten until snug with screwdrivers.

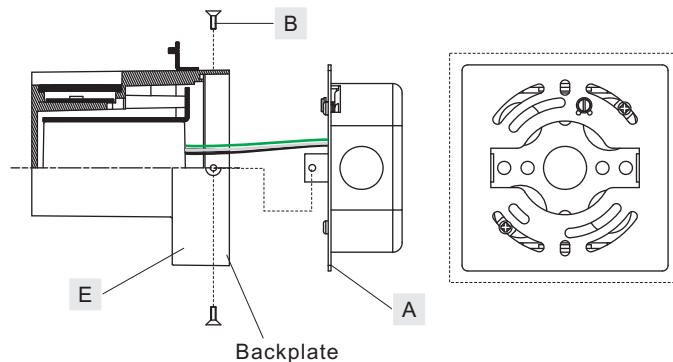

#### STEP 4 - Apply Silicone Sealer

A. Make sure the exterior wall surface and inner backplate are free of dirt before applying caulk. Using exterior grade caulk, caulk over top of inner backplate and down both sides. Do not caulk the bottom of the inner backplate to ensure proper moisture drainage.

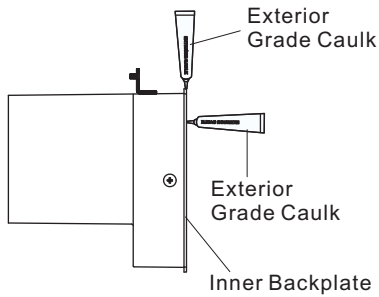


Figure 4

#### STEP 5 - Install the Cement Shade

A. Place the slot on the Cement Shade (D) onto the tab on the top of the Fixture Body (E). By using the Allen Wrench (C), thread the set screw on the tab into the slot to secure the Cement Shade (D).

Your fixture is now assembled and ready to use. Enjoy!




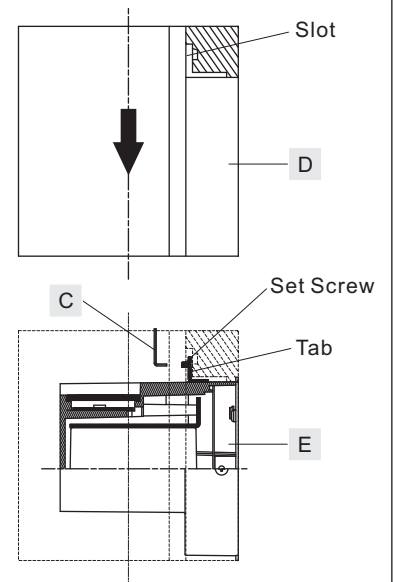


Figure 5

DTR8405CCG

FINISH: CONCRETE GREY

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"

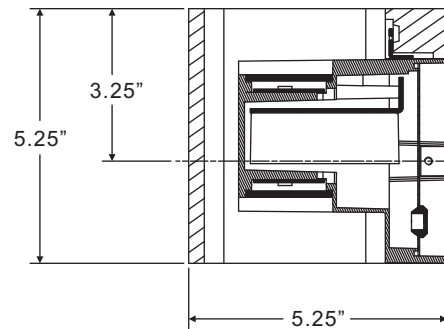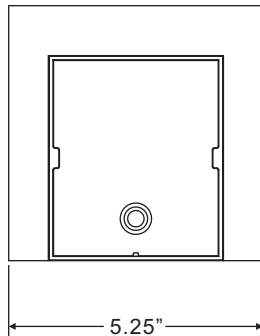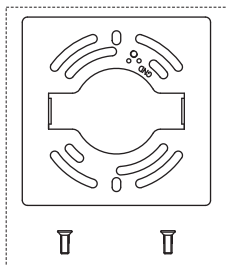

Fixture can only be mounted in the direction indicated

