

# Assembly Instruction Sheet #IS-PCPE8536BN For Style PCPE8536BN

 $Please go to {\color{red} www.quoizel.com} for product cleaning tips. Go to the {\color{red} Care + Maintenance} selection.$ 

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: Integrated 12W LED

Compatible Dimmer Switches: Lutron AYCL-153P or Lutron DVCL-153P.

Estimated Assembly Time: 20-30 minutes


**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

## **A** Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.


These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

### **Package Contents**



A Backplate x 1





#### STEP 1 - Install Inner Backplate and Fixture Body


- A. Pass the supply wires and ground wire through the Inner Backplate (A). Attach the Inner Backplate (A) to Outlet Box with the head of Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.
- B. Refer to Step 2 for wiring connections.
- C. Attach the backplate of the Fixture Body (C) over the Inner
  Backplate (A) and secure
  with Mounting Screws (B).
  Tighten until snug with
  screwdrivers.

  Supply Wires and
  Ground Wire
  Outlet
  Box

  Outlet Box
  Screw (not
  supplied)

#### How To Replace Shade


- A. By using Phillips screwdriver unscrew Screws from Fixture Body. Remove Cap and Shade from Fixture Body as shown.
- B. Reverse above steps to reinstall replacement Shade onto fixture.

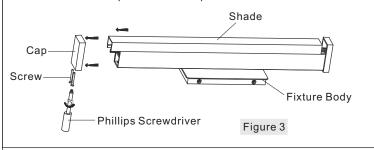

#### **STEP 2 - Wire Connections**

© 2016 Quoizel Inc.

A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

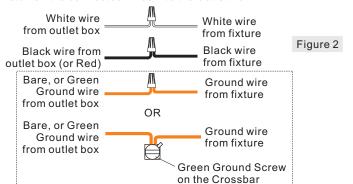

Your fixture is now assembled and ready to use. Enjoy!

PCPE8536BN

FINISH: BRUSHED NICKEL

4.5"

7"

37"

NOTE: ALL DIMENSIONS ARE ROUNDED UP
TO THE NEAREST 1/4"

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184

or visit us on-line at www.quoizel.com