QUOIZEL.

Installation Guide #IS-TVL8410PN For Style TVL8410PN

 $Please go to {\color{blue}www.quoizel.com} for product cleaning tips. Go to the {\color{blue}Care+Maintenance} selection.$

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

 $\textbf{Light Source:} (1) A 19 \, \texttt{Medium Base Bulb } 100 \, \texttt{W} \, \texttt{Maximum, Medium Base T9} \, \texttt{Vintage Bulb is recommended, bulb not included.}$

Estimated Assembly Time: 20-30 minutes


Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to ensure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact your original place of purchase. **Fixture can only be mounted in the direction indicated on page 2.**

Marnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.


Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

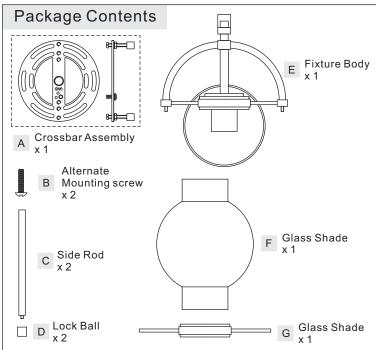

STEP 1 - Install the Glass Shade


- A. Thread Side Rods (C) onto the Fixture Body (E) as shown. Hand tighten until snug.
- B. Place the Glass Holder (G) onto the bottom end of the Glass Shade (F). Lift the Glass Holder with the Glass Shade upward, attach the top end of the Glass Shade (F) to the socket cup and pass the holes on the Glass Holder (G) over nipples on the ends of Side Rods (C). Secure by threading Lock Balls (D) onto Side Rods (C). Hand tighten until snug.



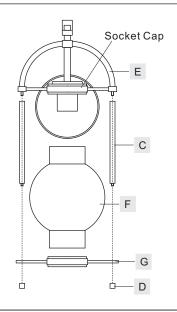


STEP 2 - Installing the Crossbar Assembly

A. Pass the supply wires through the Crossbar Assembly (A). Attach the Crossbar Assembly (A) to the Outlet Box with the head of the Green Ground Screw facing you. Secure the Crossbar Assembly (A) with Outlet Box Screws (not included). Tighten until snug. Note: Use the Alternate Shorter Mounting Screw (B) if your installation requires a shorter mounting screw.

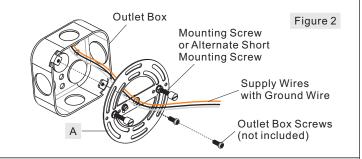

STEP 3 - Test Fit the Backplate to the Crossbar Assembly

A. Remove the mounting balls from the Crossbar Assembly (A). Place the backplate and Fixture Body (E) onto the Crossbar Assembly (A) and secure with mounting balls. Note: The backplate and Fixture Body (E) should be snug against the wall and held tight with the mounting balls. If it is not, adjust the length of the mounting screws or alternate short mounting screws on the Crossbar Assembly (A) by unscrewing the preassembled hex nut and lock washer and then screwing the mounting screws or alternate short mounting screws in or out of the crossbar until the correct length is achieved. Once the backplate and Fixture Body (E) is secure, remove the mounting ball and Fixture Body (E) and proceed to Step 4.

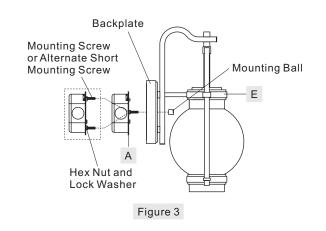


©2018 Quoizel Inc.

visit us on-line at www.quoizel.com

Released Date: 2018-09-19


STEP 4 - Wire Connections

- A. Wrap bare or green ground wire around green ground screw on the crossbar, no less than 2 inches from the end of the wire. Tighten the green ground screw.
- B. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

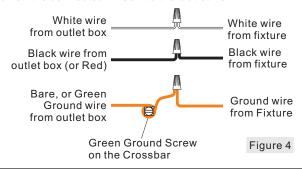

STEP 5 - Install the Fixture Body


A. Position the backplate and Fixture Body (E) onto the Crossbar Assembly (A). Place the holes in the backplate over the mounting screws or alternate short mounting screws. Secure the Fixture Body (E) by using the mounting balls and hand tighten the mounting balls until snug.

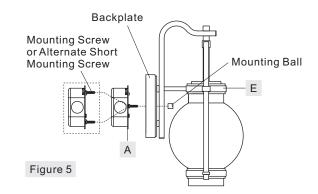

STEP 6 - Install the Bulb and Apply Silicone Sealer


- A. Insert the bulb onto socket and screw snugly into place.
- B. Make sure the exterior wall surface and fixture backplate are free of dirt before applying caulk. Using exterior grade caulk, caulk over top of backplate and down both sides. Do not caulk the bottom of the fixture backplate to ensure proper moisture drainage.


Your fixture is now assembled and ready to use. Enjoy!

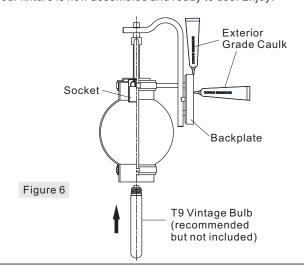

TVL8410PN

FINISH: PALLADIAN BRONZE



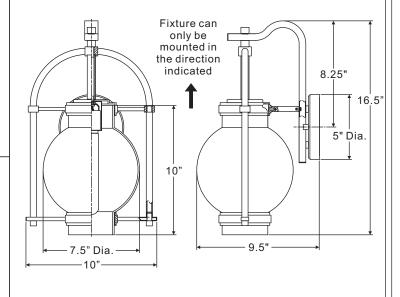

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"