


PACKAGE CONTENTS

ISSUED 02-2008

Revised 2009-12-10

Part	Description	Quantity
A	Knurled Nut	1pc
B	Check Ring	1pc
C	Spacer Tube	1pc
D	Stem	1pc
E	Finial	1pc
F	Tube	1pc
G	Tube with Nipple	1pc
H	Shade	1pc
I	Center Column	1pc
J	Base	1pc

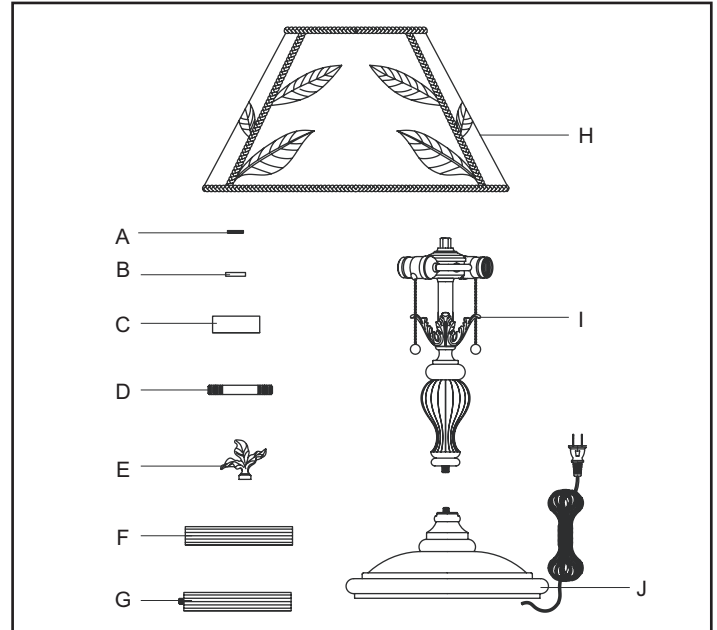

WARNINGS AND CAUTIONS

CAUTIONS:

- These instructions are provided for your safety. It is very important that they are read completely before the installation of your fixture.
- We are strongly recommend that a professional electrician install the fixture.
- Disconnect fixture from the power source before replacing the bulb(s), making sure the bulb(s) had sufficient time to cool down. DO NOT subject the lamp to any shock while lit as shattering of lamp may result.


PREPARATION

- Before beginning installation of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement part.
- Estimated Assembly Time: 10-15 minutes
- Tools Required for Assembly(not included): Pliers, Safety Glasses , (2) 75 Watt, Type-A Medium Base Bulbs.

ASSEMBLY INSTRUCTIONS


STEP 1:

- Place Base onto a flat floor surface.
- Thread one end of Tube onto the nipple on top center of the Base. Hand tighten until snug.

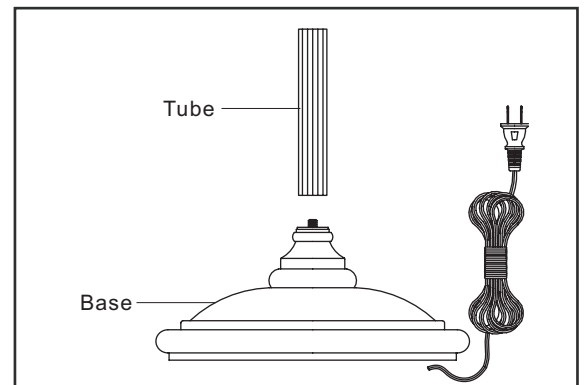


STEP 2:

- a. Thread the Tube, the Tube with Nipple and the Center Column together as shown. Hand tighten until snug.

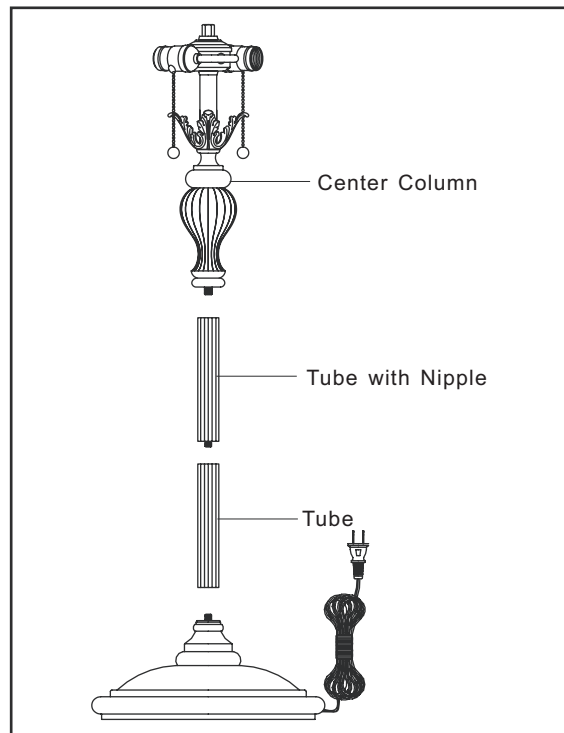


STEP 3:

- a. Thread one end of Stem into Hex Coupling on the top center of Socket Cluster Assembly. Hand tighten until snug.
- b. Place Spacer Tube over Stem onto the top of the Socket Cluster Assembly. And then place Check Ring over the Stem and secure with Knurled Nut. Tighten until snug.

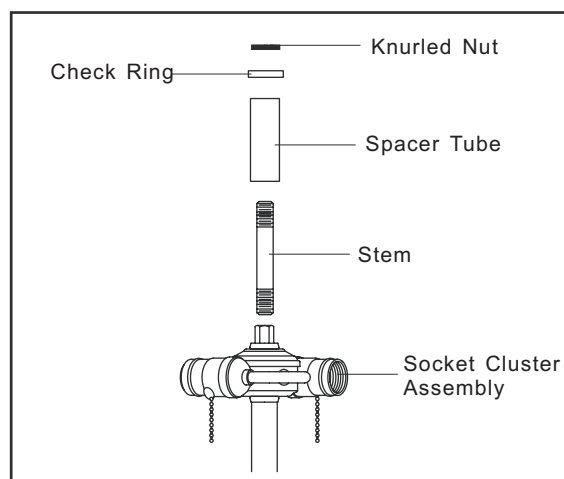

STEP 4:

- a. Place the Shade over the top end of the stem and secure with the Finial. Hand tighten until snug.

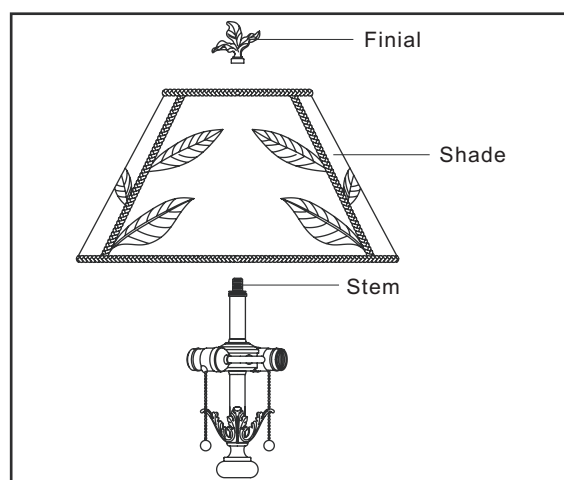

STEP 5:

- a. Install correct wattage Bulbs referring to the fixture markings and/or labels for maximum wattage.

Your assembly is completed now. Plug the plugs into the Wall Outlet Box.