

Quoizel, Inc.
6 Corporate Parkway
Goose Creek, SC
29445

Customer Service
Phone 631.273.2700
Fax 631.231.7102
www.quoizel.com

Assembly Instruction Sheet #IS-Q1206FBN For Style Q1206FBN

Tools Required: None

Bulb Recommended: (2) Medium Base 75W Maximum

Estimated Assembly Time: 15-20 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Package Contents

Part	Description	Quantity
A	Shade	1 pc.
B	Finial	1 pc.
C	Stem with Hex Nut	1 pc.
D	Base	1 pc.

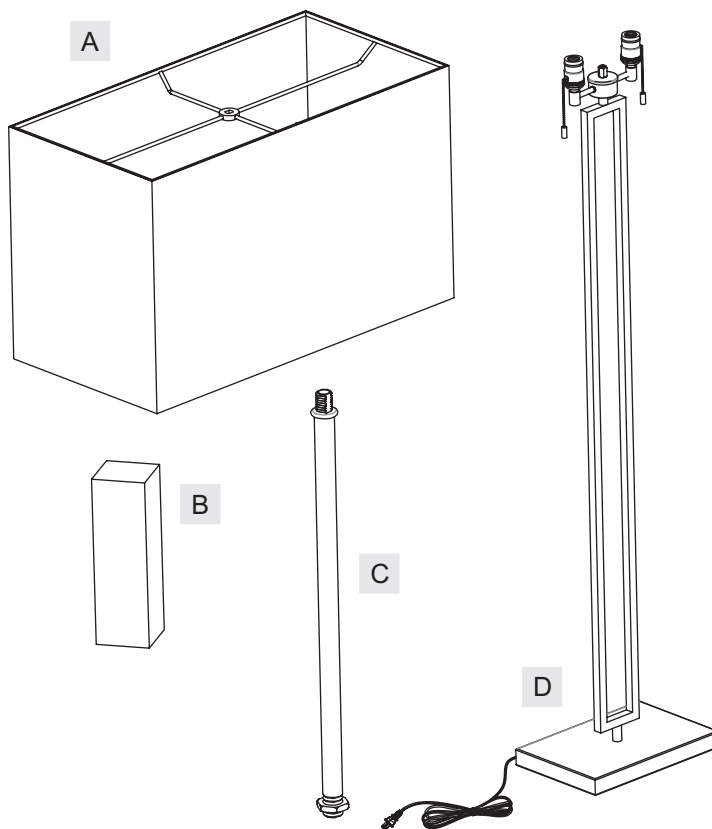


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

Q1206FBN

FINISH: BRUSHED NICKEL

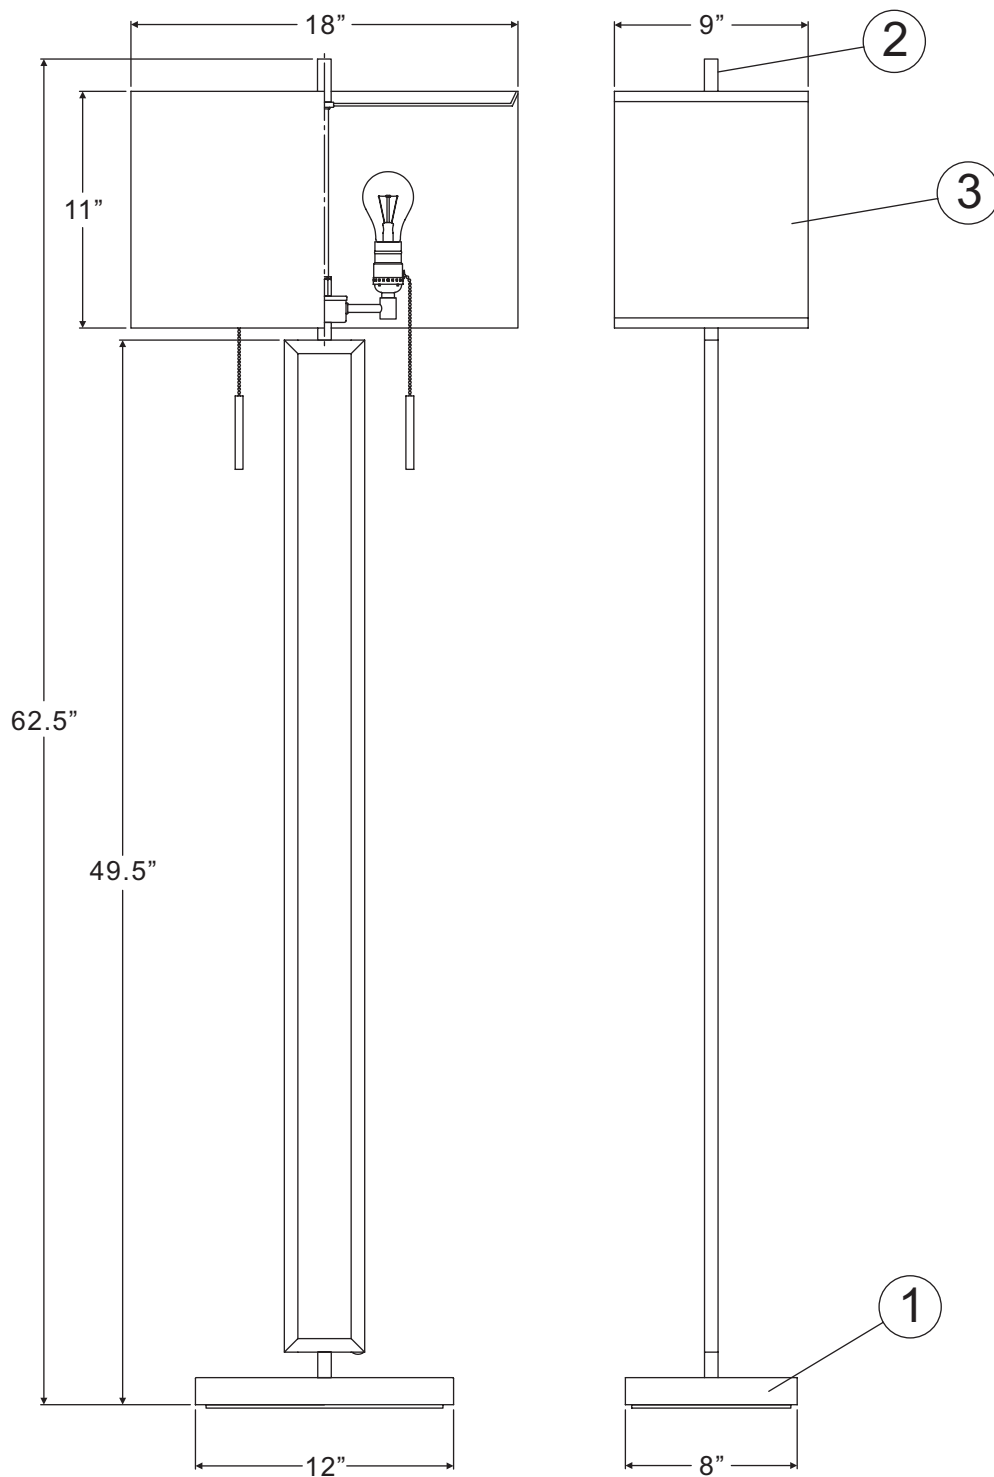

(2)75W Medium
Base Bulbs
(Not Supplied)

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	11206QFBN	BASE BRSH NIKL Q1206FBN	1
2	M2256FI	FINIAL BRSH NIKL 2"H X 0.62"SQ	1
3	S1316OW	SHADE OFF WHITE 9/18-9/18-11	1

Assembly Instruction Sheet #IS-Q1206FBN

For Style Q1206FBN

STEP 1 – Attach Stem with Hex Nut

- Thread the Hex Nut end of the Stem (C) into the Hex Coupling on the top center of the Base (D). Line up the Flat Surface on the top end of the Stem (C) and front surface of the Base (D).
- Thread the Hex Nut on the bottom end of the Stem (C) against the Hex Coupling on the top center of the Base (D). Hand tighten until snug.

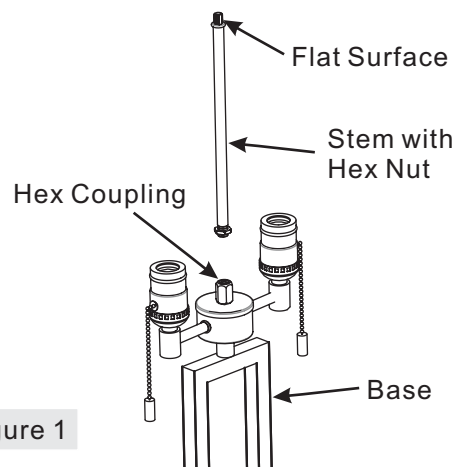


Figure 1

STEP 2 – Attach Shade and Finial

- Place the Shade (A) over the top end of the Stem (C) and secure with the Finial (B). Hand tighten until snug.

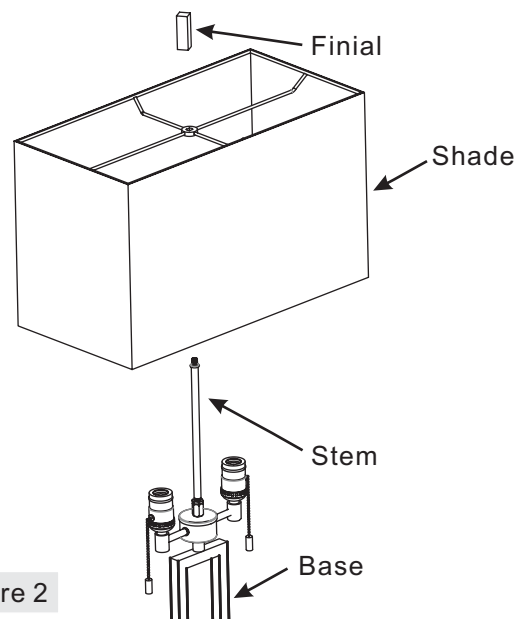


Figure 2

STEP 3 – Install Bulb

- This fixture uses standard bulb with standard screw base . Maximum 75 watts.
- Insert bulb and screw snugly into place.

Your floor lamp is now assembled and ready to use.
Enjoy!

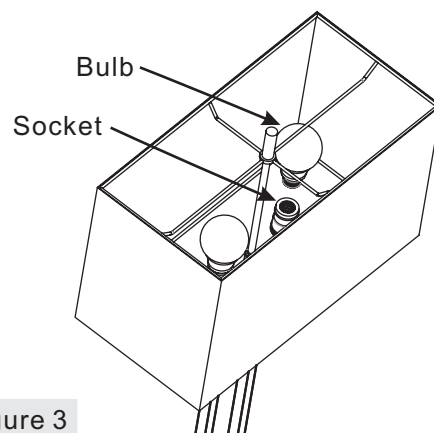


Figure 3

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com