

# QUOIZEL

6 CORPORATE PARKWAY  
GOOSE CREEK, SC. 29445  
[www.quoizel.com](http://www.quoizel.com)

Quoizel, Inc.  
6 Corporate Parkway  
Goose Creek, SC  
29445

Customer Service  
Phone 631.273.2700  
Fax 631.231.7102  
[www.quoizel.com](http://www.quoizel.com)

## Assembly Instruction Sheet #IS-TF9152Z For Style TF9152Z

**Tools Required:** None

**Bulb Recommended:** (1) T3 Bi Pin Bulb 50W Maximum (Supplied)

**Estimated Assembly Time:** 15-20 minutes

**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



### Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.


These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering October result.

Do not touch the bulb with bare hands use a cloth or glove.

### Package Contents

Part	Description	Quantity
A	Socket Assembly	1 pc.
B	Tube	1 pc.
C	Base	1 pc.
D	Shade	1 pc.
E	Lock Ball	2 pcs.
F	Diffuser	1 pc.
G	T3 Bulb	1 pc.


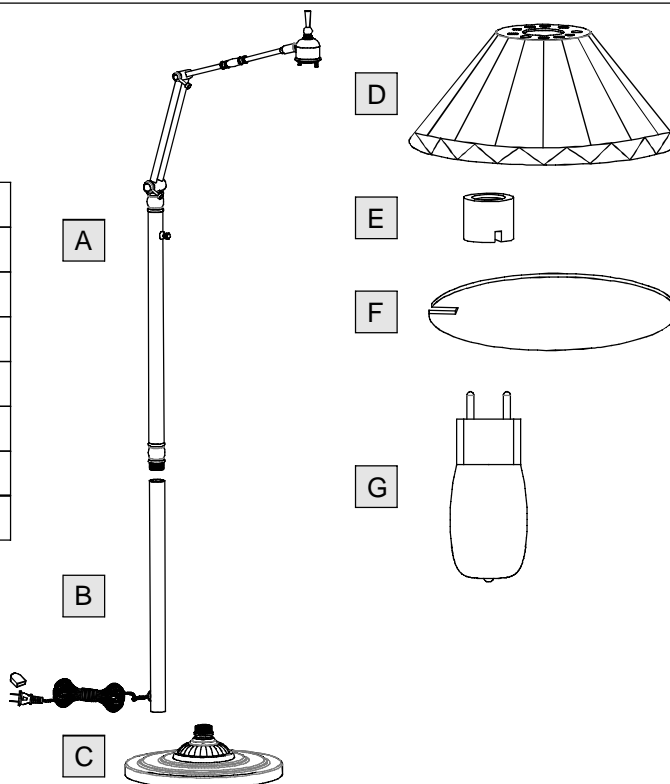


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)

TF9152Z

FINISH: MEDICI BRONZE

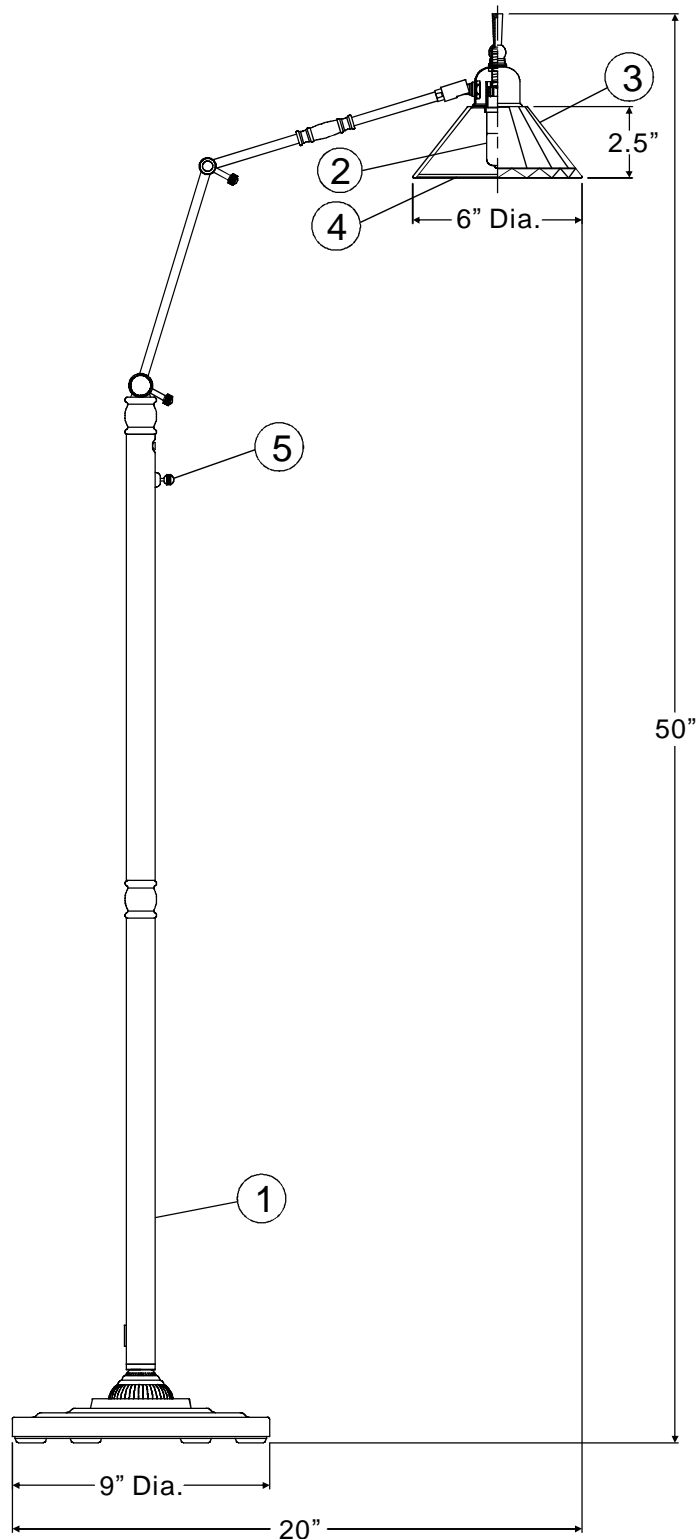

(1) 50W T3 BI  
PIN BULB  
(Supplied)

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	99152ZTF	BASE HALOGEN FLOOR LAMP BRONZE	1
2	I816SC	BULB 50W 120V HALOGEN GY6.35 CLEAR	1
3	G6220SH1	GLASS TIFFANY TASK W/TABS	1
4	K142SWB	HI-LO-OFF SWITCH POLISHED BRASS REPLACEMENT	1
5	G262LEX	LENS GLASS 4-7/8X1/8 SAFETY	1

# Assembly Instruction Sheet #IS-TF9152Z For Style TF9152Z

## STEP 1 - Assemble Rod and Socket Assembly

- A. Thread the Tube (B) and Socket Assembly (A) to the Base (C) as shown. Hand tighten until snug.

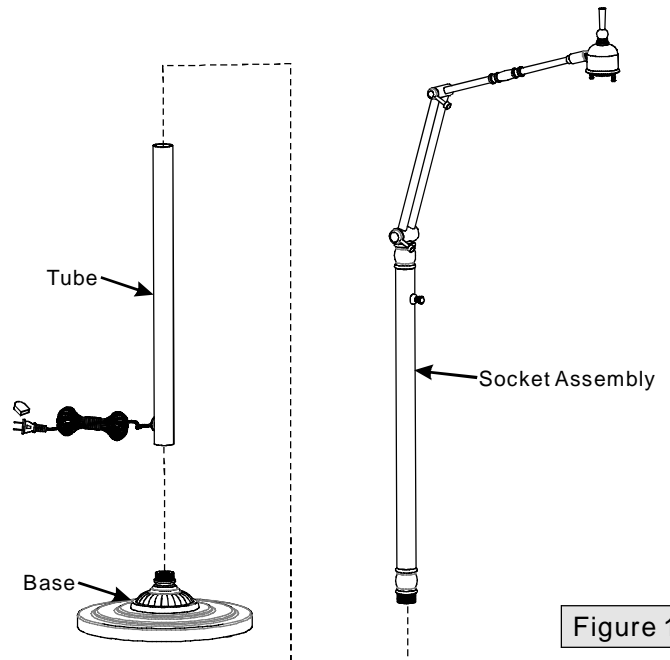


Figure 1

## STEP 2 - Install Shade

- A. Attach the Shade (D) to the Socket Assembly. Pass the Bolts on the Socket Assembly through the Small Holes on the bottom of the Shade (D). Secure by threading the Lock Balls (E) onto the Bolts. Hand tighten until snug.

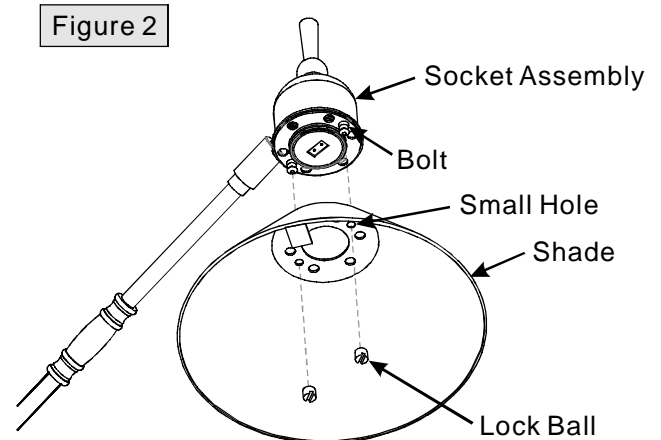


Figure 2

## STEP 3 - Install Bulb

- A. This fixture uses T3 Bi Pin bulb. Maximum 50 watts.  
B. Insert bulb and push snugly into place.

**IMPORTANT:** Do not touch the bulb with bare hands use a cloth or glove.

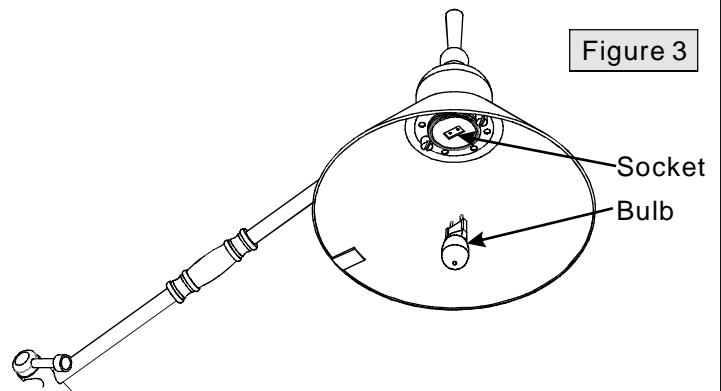


Figure 3

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)


# Assembly Instruction Sheet #IS-TF9152Z

## For Style TF9152Z

### STEP 4 - Install Diffuser to Shade

- A. Pass the Gaps on the Diffuser (F) over the Tabs on the Shade (D) and then rotate the Diffuser (F). Do not free your hands until the diffuser is seated onto the tabs.

Your fixture is now assembled and ready to use.  
Enjoy!

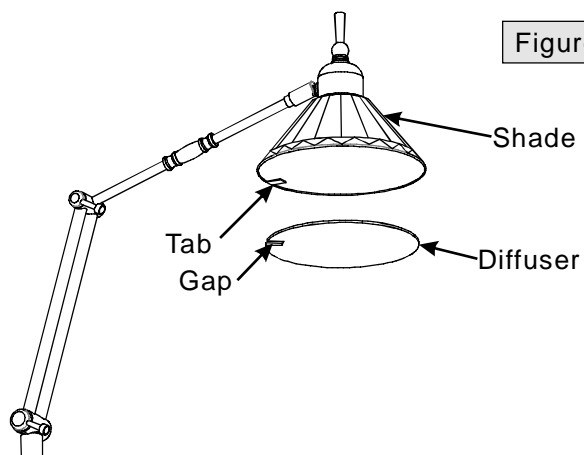

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)