

Quoizel, Inc. 6 Corporate Parkway Goose Creek, SC 29445

Customer Service Phone 631.273.2700 Fax 631.231.7102 www.quoizel.com

Assembly Instruction Sheet #IS-VTHR43224C For Style VTHR43224C

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, gloves, safety glasses.

Bulb Recommended: None.

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the mirror. Contact customer service for replacement parts.




Warnings and Cautions

These instructions are provided for your safety. It is very important you read them completely before installing the mirror. We strongly recommend that a licensed, professional electrician perform the installation.

Package Contents

Part	Description	Quantity
А	Mirror Hanger	2 pcs
В	Hanger Nail	4 pcs
С	Lock Screw	4 pcs
D	Washer	4 pcs
E	Mirror	1 pc
F	Backing	1 pc
G	Mirror Frame	1 pc
Н	Crossbar A	1 pc
I	Crossbar B	1 pc

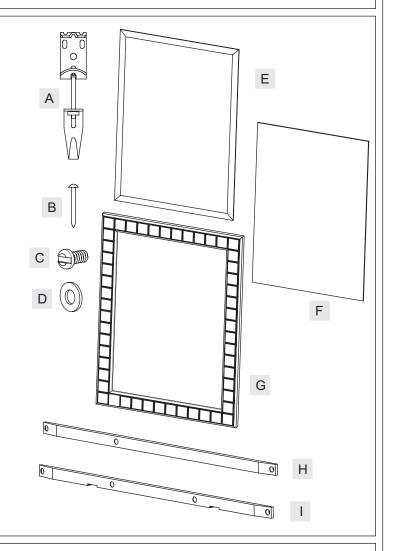


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com

September 2011

1of5

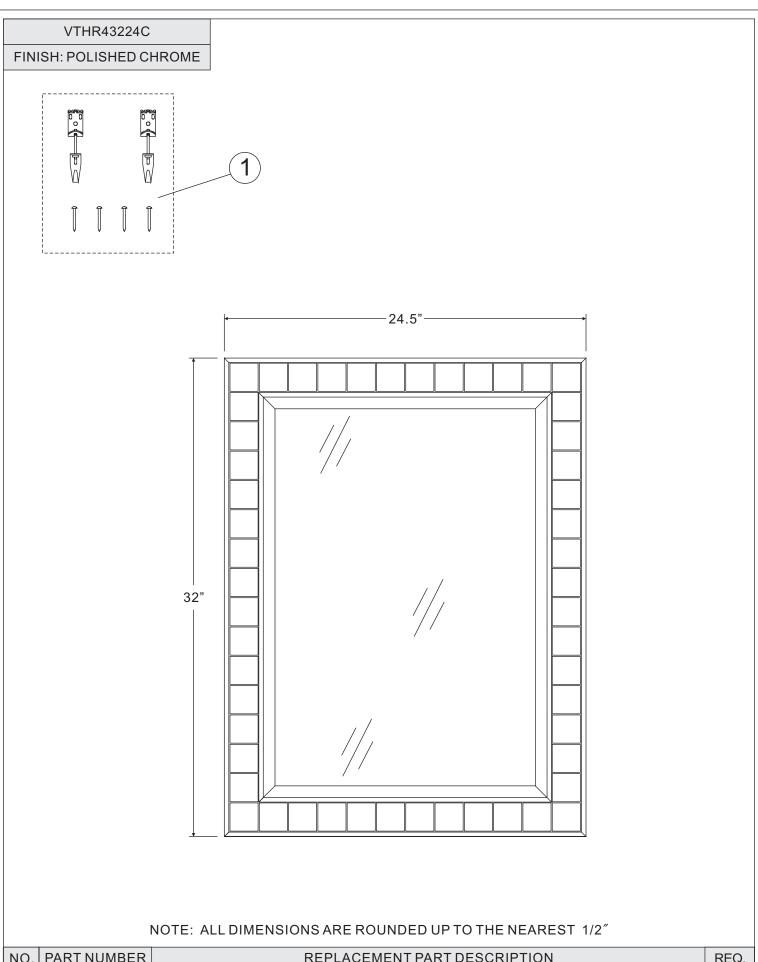

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.	



Assembly Instruction Sheet #IS-VTHR43224C For Style VTHR43224C

STEP 1 - Attach Backing and Mirror to Mirror Frame

- A. Place the Mirror Frame (G) onto a flat working surface with the back facing you. Carefully place the Mirror (E) and Backing (F) to the Mirror Frame (G).
- B. Place the Crossbars (H/I) to the back of the Mirror Frame (G), match the holes on both ends of Crossbars (H/I) to the Mounting Holes on the back of the Mirror Frame (G). Please be sure the holes on the side of the Crossbars (H/I) against each other during the assembly.
- c. Pass Washers (D) over Lock Screws (C) and then thread Lock Screws (C) into the Mounting Holes on the back of the Mirror Frame (G) to secure the mirror. Handtighten gently until snug.


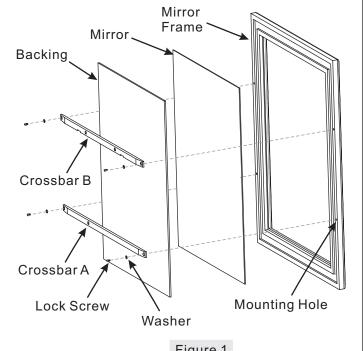


Figure 1

FOR VERTICAL

STEP 2 - Mark Points for Mirror Hangers

- a. Lift and position where the Mirror will reside on the wall surface and with a tape measure, mark distance from floor to the bottom edge of the frame with a pencil. Mark should be located at a point representing ½ of mirror width.
- b. Place the Mirror on a flat surface with back facing you. Measure the distance from the bottom edge of the Mirror Frame to the middle point of (2) side holes on Crossbar B (I). This represents distance "B" in the illustration.
- c. With tape measure, add this distance to Mark "A" on wall surface and mark with pencil.
- d. Measure distance between (2) side holes on Crossbar B (I). Add this ½ distance from Mark "B" on each side and mark with pencil. (Distance "C" in the illustration)
- e. Measure 3" up from Mark "C" and mark. These marks are locators for the (2) Mirror Hangers (A). Check for marks straightness with level.

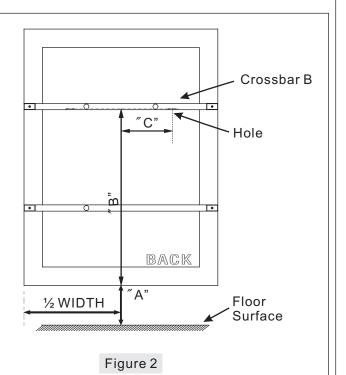

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com © 2011 Quoizel Inc. September 2011




Assembly Instruction Sheet #IS-VTHR43224C For Style VTHR43224C

STEP 3 - Locate Mirror Hangers and Mirror

- A. Locate Mirror Hangers (A) and align the top center with 3" Locator mark. Secure them to wall surface with Hanger Nails (B). Please be noted that the Mirror Hangers are fully adjustable allowing for easy leveling.
- B. With Mirror Hangers properly installed, be sure to make sure that the (2) Bracket Catches are approximately equal in length from the top of Mirror Hangers. Adjust overall length with Adjustment Screws.
- C. With the help of another person, pass the side holes on Crossbar B (I) over the Mirror Hangers (A) so that the Crossbar B (I) rest on the inside of the Bracket Catches.


Clean glass with household glass cleaner. Retain this sheet for future reference.

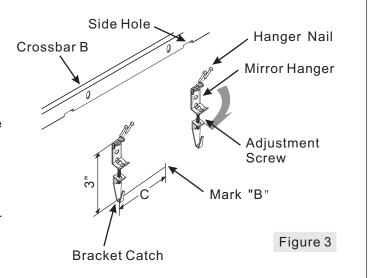

FOR HORIZONTAL

STEP 4 - Mark Points for Mirror Hangers

- A. Lift and position where the Mirror will reside on the wall surface and with a tape measure, mark distance from floor to the bottom edge of the frame with a pencil. Mark should be located at a point representing ½ of mirror width.
- B. Place the Mirror on a flat surface with back facing you. Measure the distance from the bottom edge of the Mirror Frame to the middle point of (2) Holes on the Crossbars (A&B). This represents distance "B" in the illustration.
- C. With tape measure, add this distance to Mark "A" on wall surface and mark with pencil.
- D. Measure distance between (2) Holes on Crossbar (A&B). Add this ½ distance from Mark "B" on each side and mark with pencil. (Distance "C" in the illustration)
- E. Measure 3" up from Mark "C" and mark. These marks are locators for the (2) Mirror Hangers (A). Check for marks straightness with level.

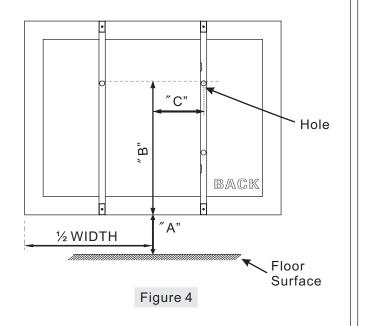

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com

September 2011



Assembly Instruction Sheet #IS-VTHR43224C For Style VTHR43224C

STEP 4 – Locate Mirror Hangers and Mirror

- A. Locate Mirror Hangers (A) and align the top center with 3" Locator mark. Secure them to wall surface with Hanger Nails (B). Please be noted that the Mirror Hangers are fully adjustable allowing for easy leveling.
- B. With Mirror Hangers properly installed, be sure to make sure that the (2) Bracket Catches are approximately equal in length from the top of Mirror Hangers. Adjust overall length with Adjustment Screws.
- C. With the help of another person, pass the Holes on the Crossbars (A&B) over the Mirror Hangers (A) so that the Crossbars (A&B) rest on the inside of the Bracket Catches.

Clean glass with household glass cleaner. Retain this sheet for future reference.

