


ASSEMBLY INSTRUCTIONS FOR YOUR ADDISON WALL SCONCE

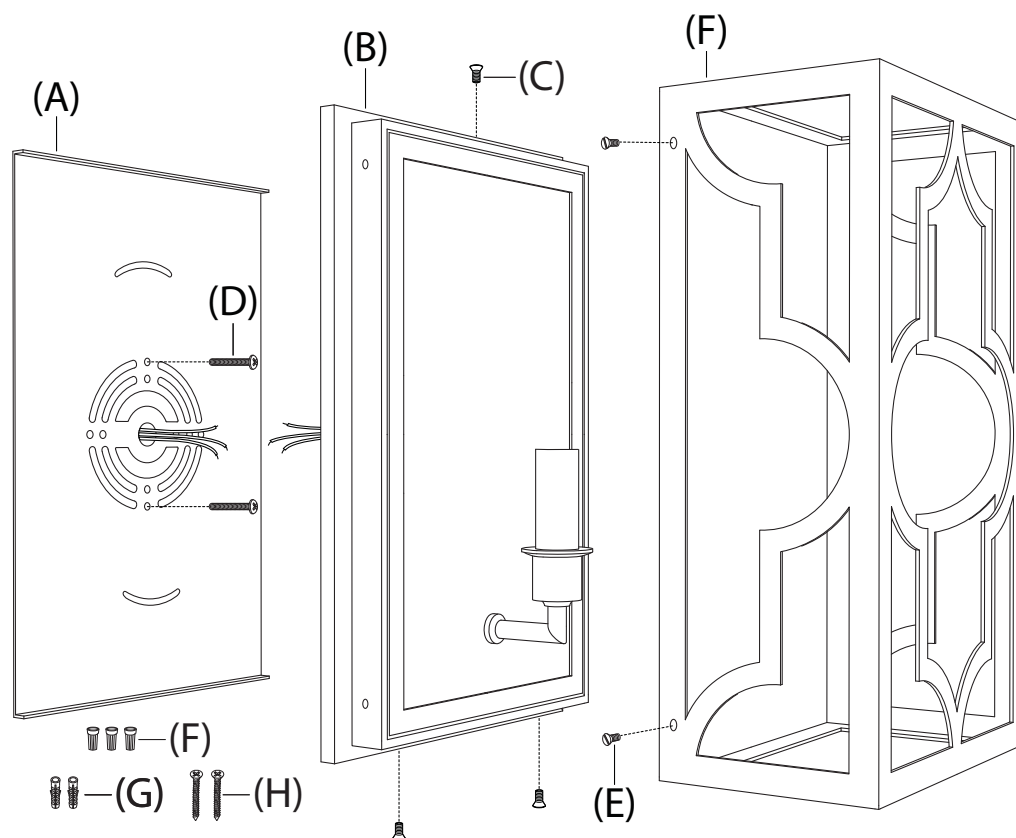

IMPORTANT SAFETY INSTRUCTIONS:

- * These instructions are provided for your safety.
- * It is very important that they are read completely before beginning the installation of your fixture.
- * **WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.**
- * Turn off power at switch before replacing bulbs, making sure fixture has had sufficient time to cool down.

ASSEMBLY INSTRUCTIONS:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/ CIRCUIT BREAKER.
2. Remove all parts from carton and discard packing materials. Place the parts on a level surface.
3. Remove mounting plate (A) from backplate (B) by unthreading screws (C). Set screws (C) aside.
4. Align mounting plate (A) with wall outlet box. Hold mounting plate (A) in a level position against the wall. Using a pencil, mark the location of the holes at the top and bottom of mounting plate (A) onto the wall.
5. Drill small holes at marked locations on the wall. Holes should be sized so they accommodate wall anchors (G), provided. Insert wall anchors into drilled holes. Affix mounting plate (A) to the wall outlet box with screws (D). For additional support, thread mounting screws (H) through holes at the top and bottom of mounting plate (A) and into wall anchors (G).
6. Lift backplate (B) to mounting plate (A) and make the proper electrical connections noted in steps 7 through 9.
A LICENSED ELECTRICIAN IS RECOMMENDED.
7. Attach ground wire from fixture (green or copper in color) to ground wire from outlet box. Fasten wires together with wire nut (F) and tightly wrap connection with electrical tape.
8. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (F) and tightly wrap connection with electrical tape.
9. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (F) and tightly wrap connection with electrical tape. Gently push wire connections back into the wall outlet box.
10. Place backplate (B) over mounting plate (A). Use screws (C) to secure the fixture to the mounting plate.
11. Remove shade (F) from backplate (B) by unthreading screws (E). Set screws (E) aside.
12. Install one 60W MAX. B10.5, Candelabra base bulb into the socket.
13. Use screws (E) to attach shade (F) to backplate (B).
14. Reconnect main electrical supply at the fuse box/ circuit breaker and test the fixture.

** To clean, use soft cloth only. Do not use any chemical or abrasive cleaners. **