


Robert Abbey, Inc.

ASSEMBLY INSTRUCTIONS FOR YOUR

ALVIN PHARMACY FLOOR LAMP

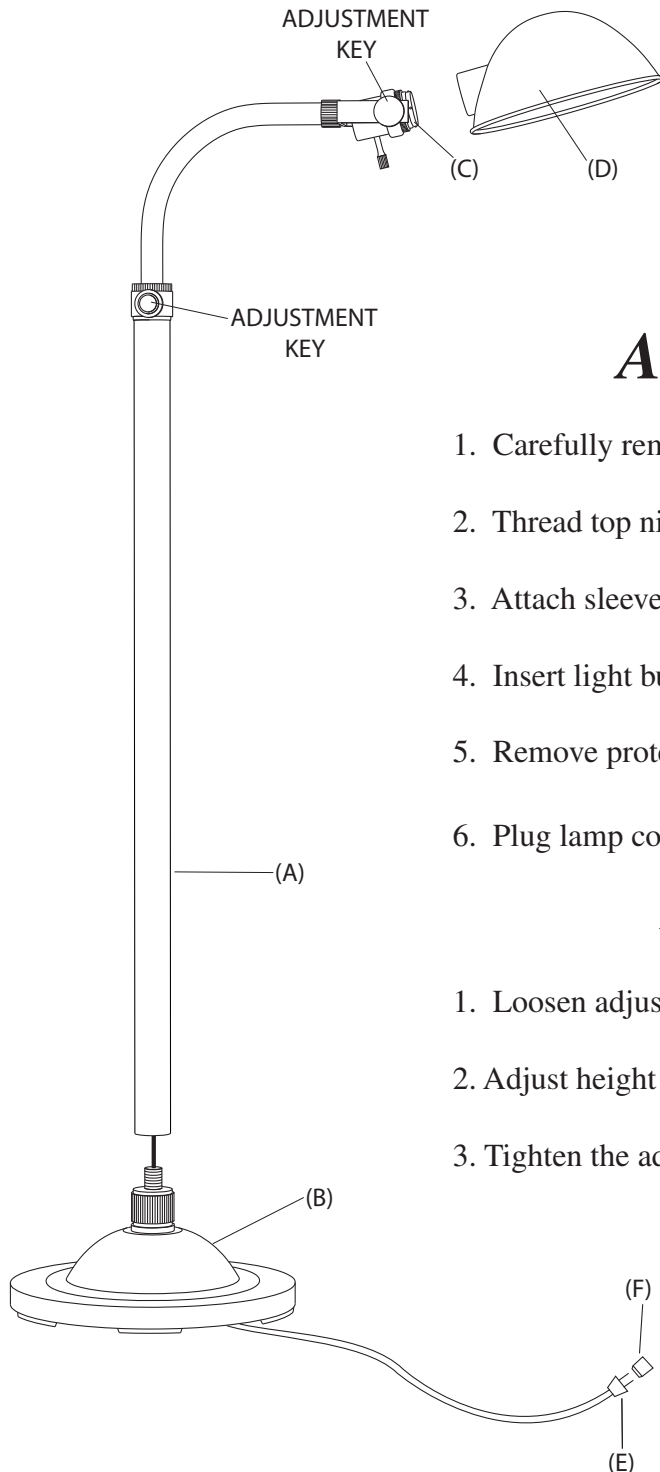

Assembly Instructions:

1. Carefully remove all parts from the box.
2. Thread top nipple of base (B) into bottom threaded opening of pole (A).
3. Attach sleeve of shade (D) onto socket cover (C).
4. Insert light bulb Type A, maximum 60 watt into socket.
5. Remove protective plastic (F) from electrical plug (E).
6. Plug lamp cord into wall outlet.

ADJUSTMENT INSTRUCTIONS

1. Loosen adjustment keys found on lamp stem.
2. Adjust height to desired position.
3. Tighten the adjustment keys.