


ASSEMBLY INSTRUCTIONS FOR YOUR CHASE WALL SCONCE

***WE STRONGLY RECOMMEND INSTALLATION OF THIS LIGHT-
ING FIXTURE BE DONE BY A LICENSED ELECTRICIAN***

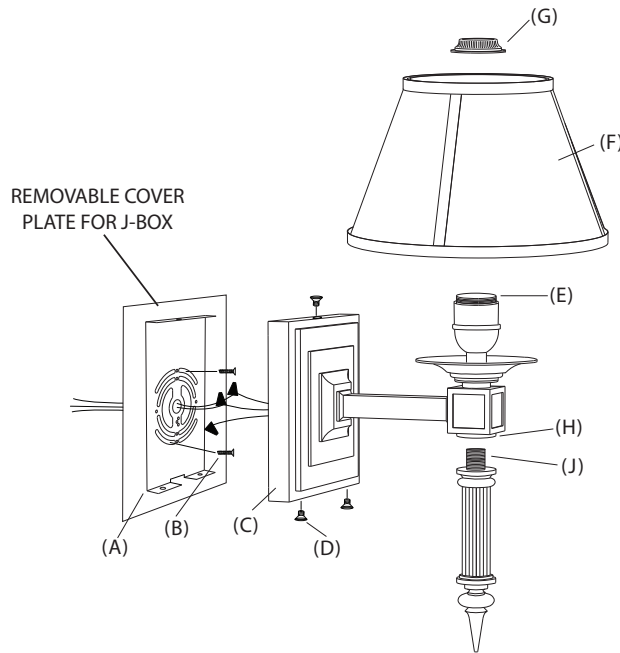

DIRECT WIRE ASSEMBLY INSTRUCTIONS

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
2. Remove the back plate (A) from the base of the lighting fixture (C) by removing the base screws (D).
3. Gently pull the wiring from the wall outlet box and allow the wires to hang. Thread the wires through the center hole in the back plate (A).
4. Affix the mounting plate to the wall outlet box with the back plate screws provided (B).
5. To connect the wire, remove the plastic protector. Connect the ground wire (GREEN) to the ground wire from the outlet box (usually green) and tighten with screwdriver. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME IS PROPERLY GROUNDED.
6. Connect the neutral (white) fixture wire coming from the lamp fixture base to the neutral (usually white) outlet wire. Fasten both wires together with a plastic wire connector and tightly wrap the wire connector with electrical tape.
7. Repeat this procedure with the hot (black) wires. Always make sure that no wire strands are left outside the connectors. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTORS OR SAFETY WILL BE COMPROMISED.
8. Attach the lighting fixture base (C) to the affixed back plate by aligning the holes and inserting the base screws (D). Tighten with a screwdriver.
9. Remove socket ring (G) from threaded socket (E), attach shade (F) over threaded socket (E), and tighten with socket ring (G).
10. Screw threaded nipple of part (J) onto threaded opening of part (H).
11. Insert light bulb Type B, maximum 60 watt into socket.