


ASSEMBLY INSTRUCTIONS FOR YOUR FRANCESCO PENDANT

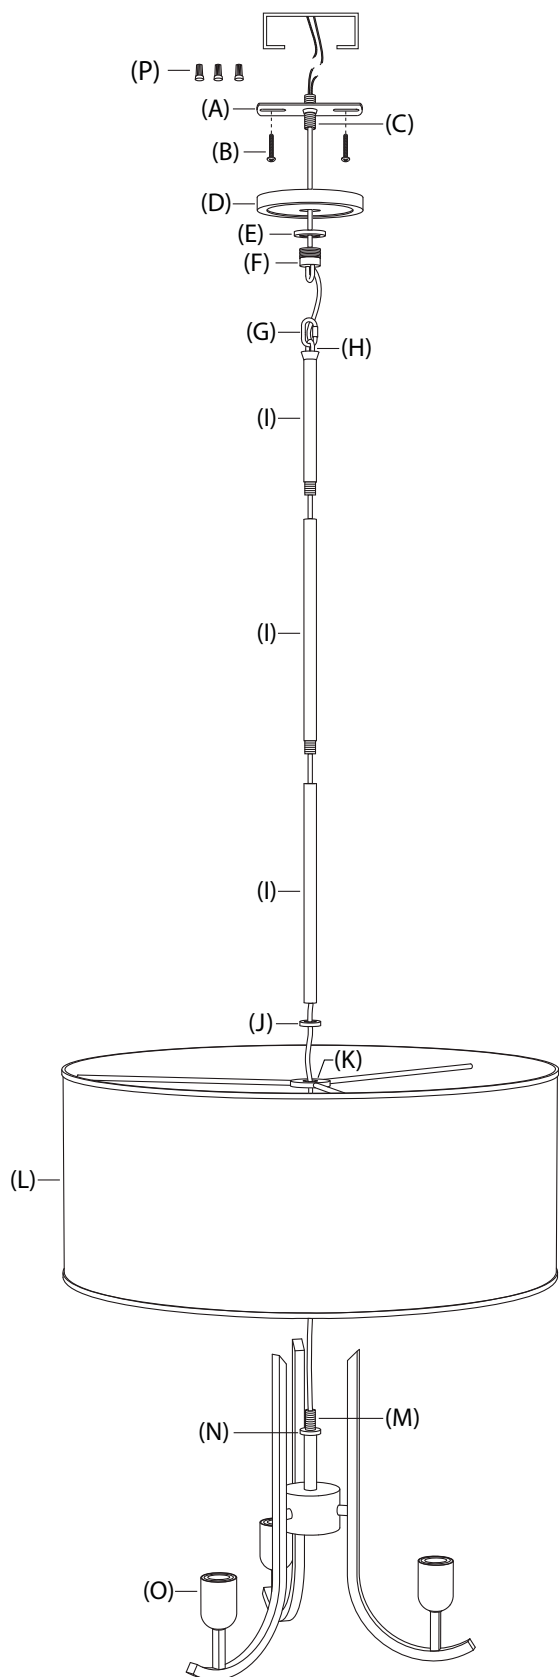

IMPORTANT SAFETY INSTRUCTIONS:

*These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

***We STRONGLY recommend installation by a licensed electrician.**

*Turn off power at switch before replacing bulbs.

*This fixture is UL rated for dry locations.

ASSEMBLY INSTRUCTIONS:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY AT FUSE BOX/ CIRCUIT BREAKER.
2. Remove all parts from carton. Do not throw away any parts.
3. Place the base of the pendant on a soft, level surface. Carefully place shade (L) over the base of the pendant so shade ring (K) slips over threaded tube (M) and rests on shade washer (N).
4. To lock the shade into place, thread shade washer (J) onto tube (M) and rotate it until it rests tightly against shade ring (K).
5. Remove quick link (G) from hang straight (F). Keep quick link (G) attached to loop (H).
6. Remove cross bar (A) (with threaded tube (C) and hang straight (F) attached) from canopy (D). Do this by unthreading collar (E) from hang straight (F). Set collar (E) and canopy (D) aside.
7. Affix cross bar (A) (with threaded tube (C) and hang straight (F) attached) to ceiling outlet box using screws (B) provided.
8. Measure desired drop for fixture to hang and add/remove extension tubes (I) to reach desired position. Guide wiring through extension tubes before threading tubes together.
- **TO ADD/ REMOVE EXTENSIONS: (Un)Thread the threaded tube of one extension out of/ into the threaded opening of the next extension. Make sure wiring is pulled tight when threading extensions together to prevent damage to the wire.****
9. Thread bottom extension tube (I) onto threaded tube (M).
10. Thread the wire exiting top extension (I) through the center of collar (E). Slip the collar over the quick link (G) and carefully move it down extensions (I) until it rests on shade washer (J).
11. Thread the wire exiting top extension (I) through the center of canopy (D). Slip the canopy over the quick link (G) and carefully move it down extensions (I) until it rests on collar (E).
12. Lift fixture to ceiling and secure quick link (G) to hang straight (F). Carefully guide the wire exiting the top extension tube through the center of hang straight (F) and threaded tube (C) and into ceiling outlet box. Pull the fixture wires and the wires from the outlet box to one side of the cross bar and make the proper electrical connections described in steps 13 - 15.
- *A LICENSED ELECTRICIAN IS RECOMMENDED.***
13. Attach ground wire from fixture (green or silver in color) to ground wire from outlet box. Fasten wires together with wire nut (P) and tightly wrap connection with electrical tape.
14. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (P) and tightly wrap connection with electrical tape.
15. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (P) and tightly wrap connection with electrical tape.
16. Carefully push wire connections back into the ceiling outlet box. Slide canopy (D) up extension tubes (I) and hold firmly against ceiling. Slide collar (E) up extension tubes (I) and thread onto hang straight (F), securing canopy (D) against the ceiling.
17. Install three (3) 100W MAX Type A, medium base bulbs into sockets (O).
18. Reconnect main electrical supply from the fuse box/ circuit breaker and test the fixture.

To clean, use soft cloth only. Do not use any chemical or abrasive cleaners.