


ASSEMBLY INSTRUCTIONS FOR YOUR ALBERT TASK FLOOR LAMP

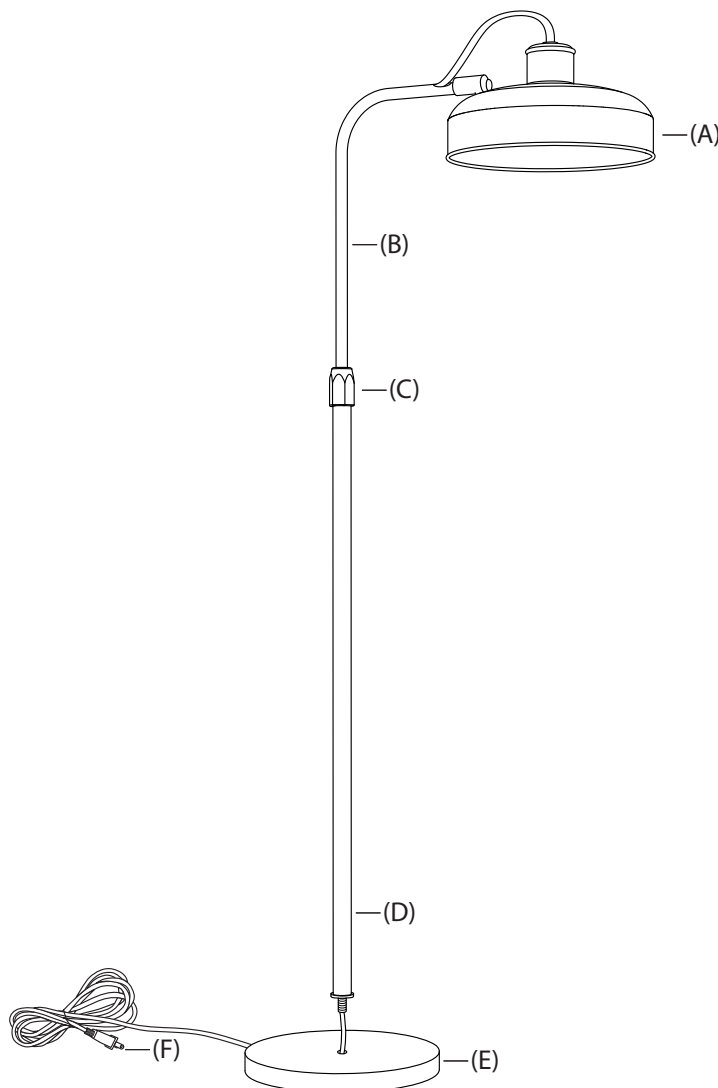

IMPORTANT SAFETY INSTRUCTIONS:

- * This lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do NOT alter the plug.
- * Do not use with an extension cord unless the plug from the lamp can be fully inserted into the extension cord receptical.
- * Switch power off and remove plug from the wall outlet before replacing the bulb.

ASSEMBLY INSTRUCTIONS:

NOTE: Do not connect electricity until lamp is fully assembled.

1. Unpack all parts and place them on a level work surface. Remove and discard all packing materials.
2. Thread column (D) into base (E). Pull cord taught from below base (E) when threading parts together to prevent damage to the wire.
3. Loosen collar (C) and move column (B) to desired height. Tighten collar (C) to secure position of column (B).
4. Insert one 100W Max. Type A, medium base bulb into the socket, located inside shade (A).
5. Insert polarized plug (F) into wall outlet.

** To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners. **