




ASSEMBLY INSTRUCTIONS

ITEM NO.: 6-372-5-56

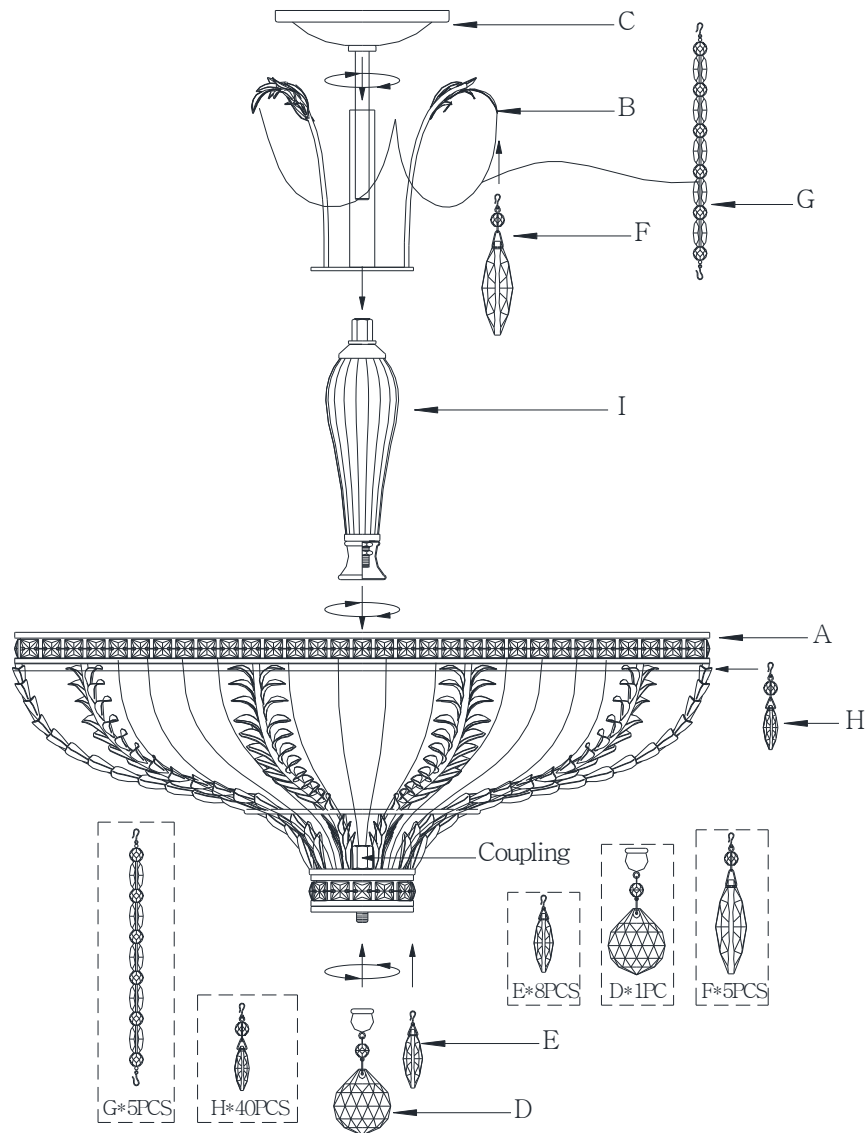

I → A → B → C → D → E → F → G → H

1. Carefully unpack and identify all parts referring to the illustration for parts identification.
2. Turn power to the installation point **OFF**.
3. Thread the bottom of center column (I) onto the coupling at top center of fixture body (A). Hand tighten until snug.
4. Pass the center hole of deco frame (B) over the coupling at top of the center column (I) and secure with canopy assembly (C).
5. Referring to the installation instruction with the product for the wiring and installation.
6. Install proper bulbs (not provided) to sockets referring to the markings and/or labels on the fixture for maximum wattage.
7. Turn the finial (D) into the nipple at bottom of the fixture body (A).
8. Attach the crystal (E), (F), (G), (H) to the holes of the fixture body (A) and deco frame (B).
9. Restore power to the installation point **ON**. Retain this sheet for future reference.