




ASSEMBLY INSTRUCTIONS

ITEM NO.: 7P-966-1-69 & 7P-966-1-13

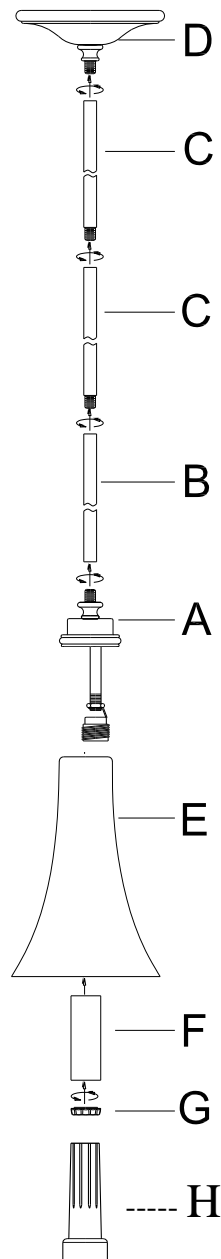

B→A→C→D→E→F→G

1. Carefully unpack and identify all parts referring to illustration of the parts identification.
2. Turn the power to the installation point OFF.
3. Thread the round tube (B), (C) into the protruding nipple at the socket (A).
4. Thread the round tube (C) into the protruding nipple at the bottom of the canopy (D).
5. Pass the shade (E), candle sleeve (F) over the socket (D), secure with the socket ring (G) by using the socket collar tool (H).
6. Install proper bulb (not provide) to the socket according the markings and labels on the fixture body (A) for the maximum wattage.
7. Referring to the installation instruction with the product for the wiring and installation.
8. Restore the power to the installation point ON.
9. The assembly is completed. Retain this sheet for future reference.