


Instructions for electrician STEPS 2 - 13

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

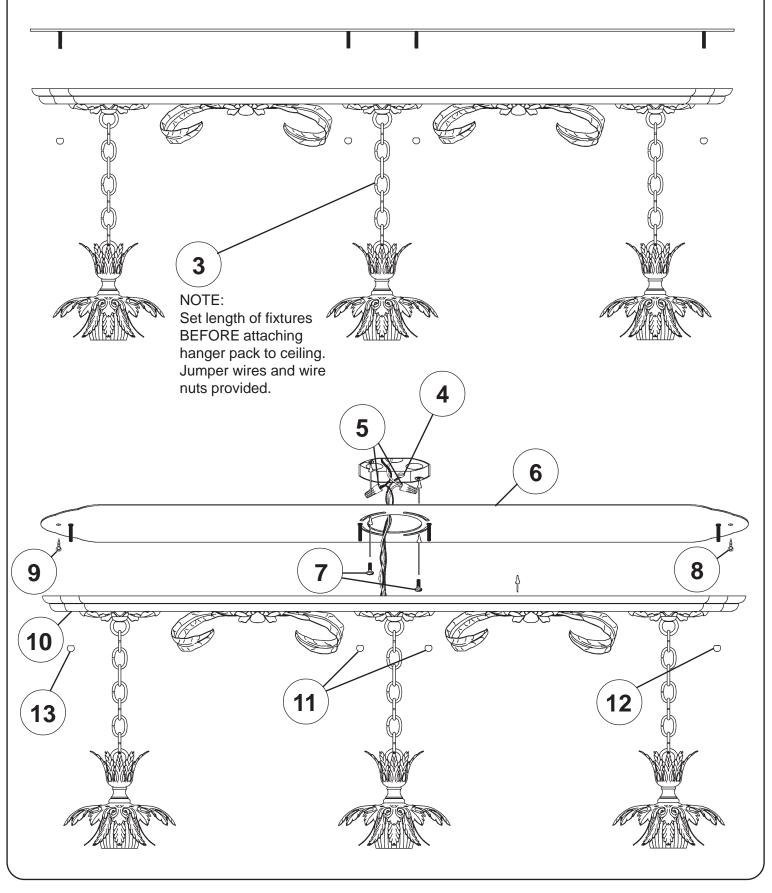

### CHANDELIER 1258- TRIM DIAGRAM

(Finish Option) (Trim Option)




This design is the proprietary trade dress/trademark of schonbek worldwide lighting inc.

3 Lights
Diameter: 36"
Body Length: (as shown) 20"
Hanging Weight: 10 lbs.


# **SCHONBEK**®

See diagram on back page Follow steps in exact order Save this trim diagram for future reference

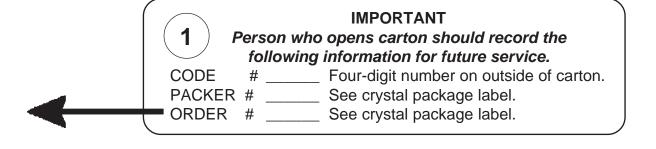

SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE: #D504,191

#### Instructions for crystal trimming **STEPS 14 - 21**



14 3 - Type A 25 Watts Recommended (supplied) 100 Watts Max

Install bulbs and test fixture BEFORE trimming.

#### NOTE:

When trimming a "AM", "AT", "OL", "SM" or "TO" alternate hanging "A & A1".


When trimming a "SJ" hang one of each color.

## NOTE:

**Pinch connector** shut to prevent crystal from

NOTE: When trimming

Soft Jewel Tones<sup>™</sup>"SJ", for best appearance, alternate hanging trim so that similar colors are NOT next to each other.

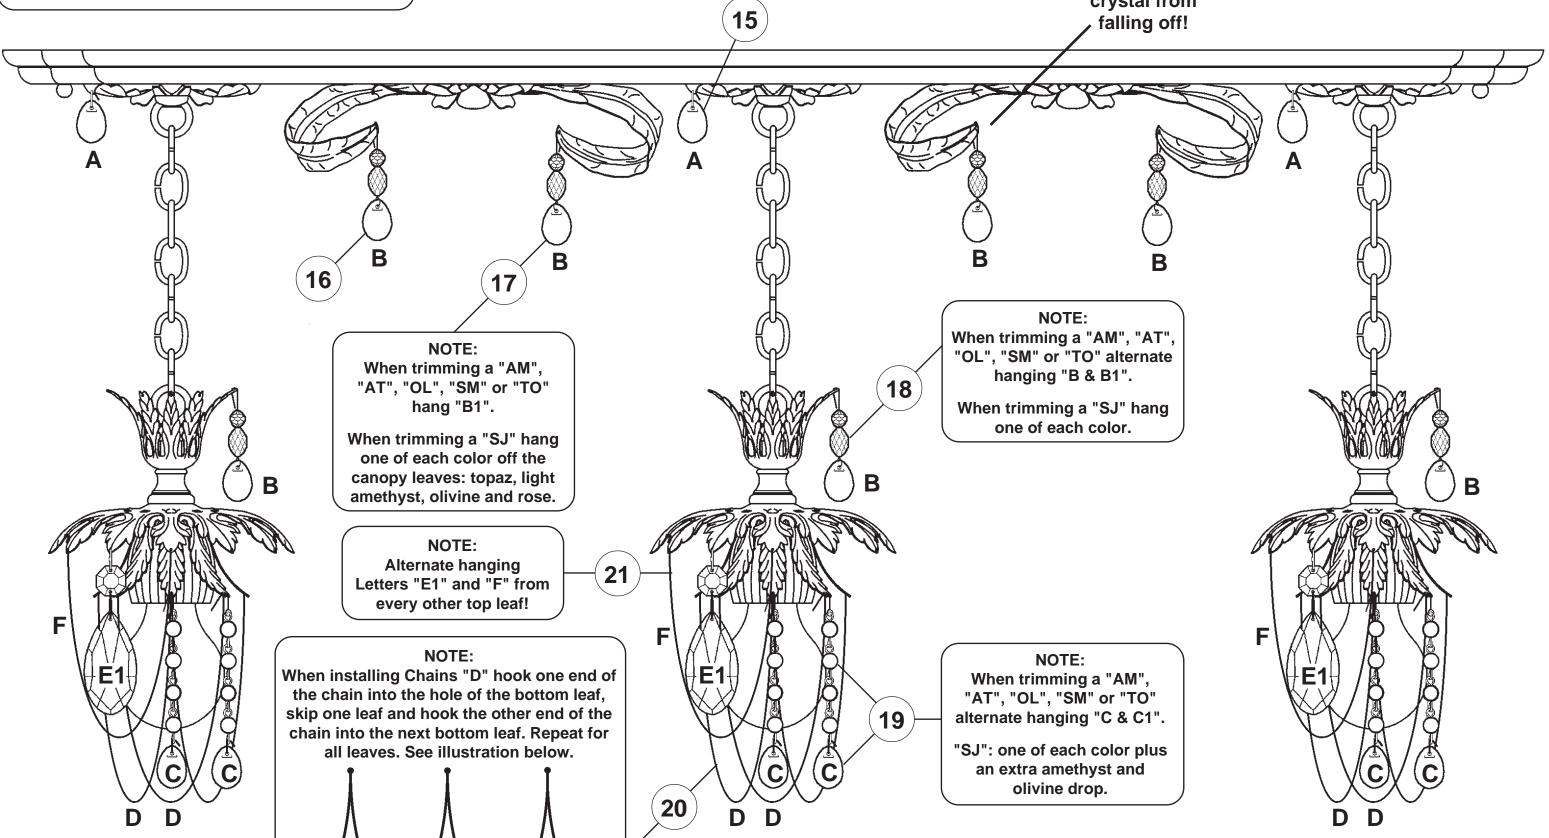



1258-