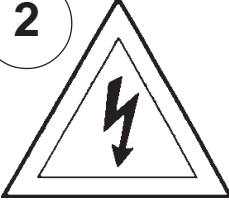
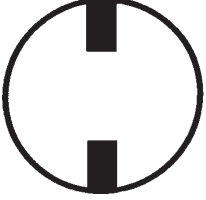










Instructions for electrician
STEPS 2 - 11

WARNING:


2  

Electrical Danger Turn Power Off

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

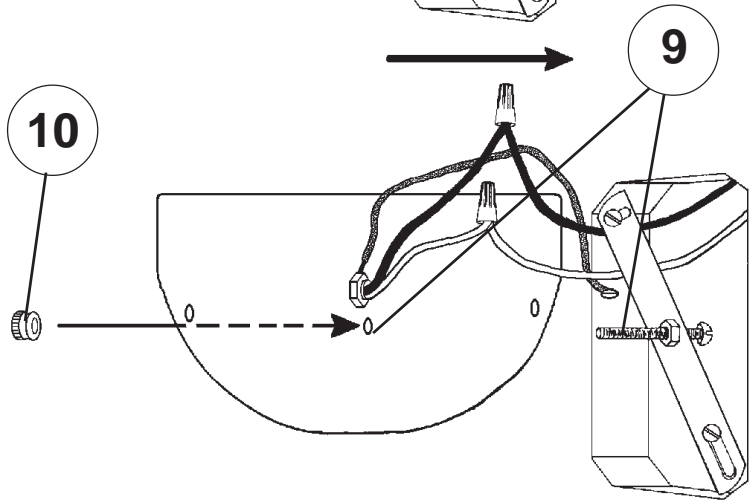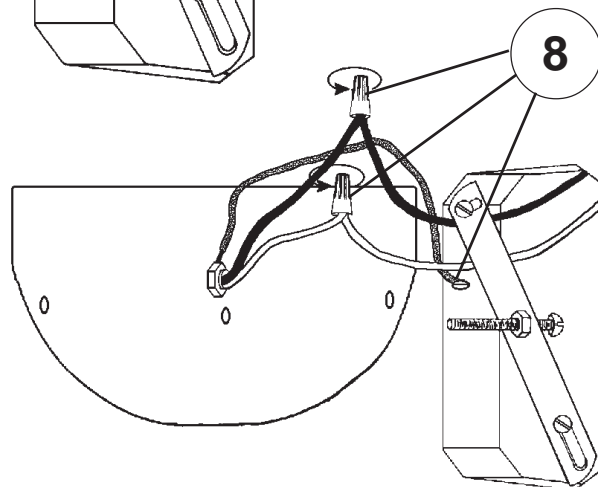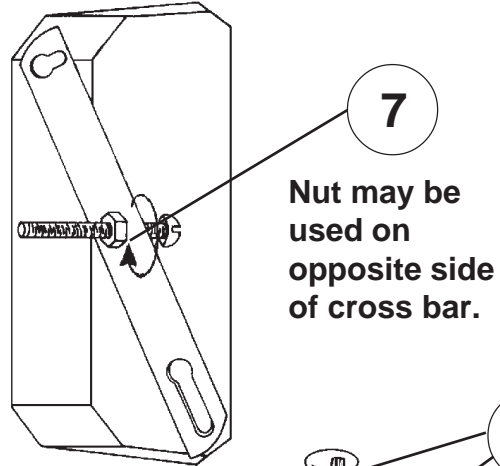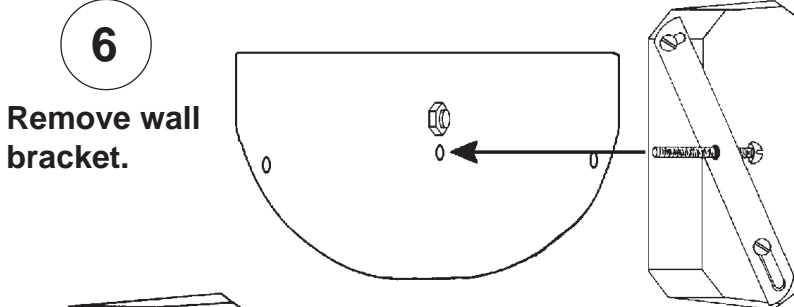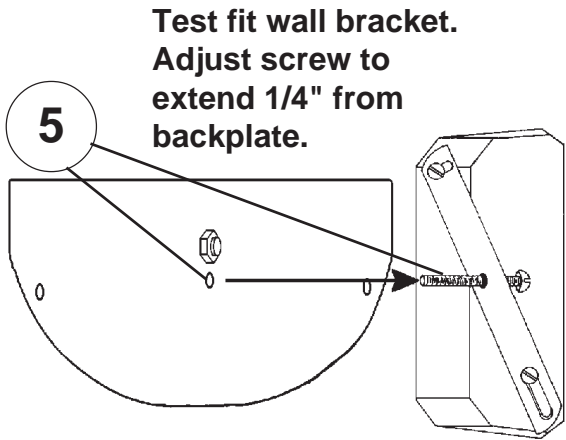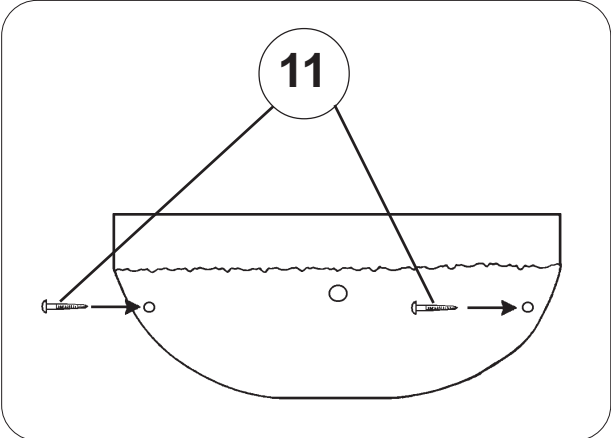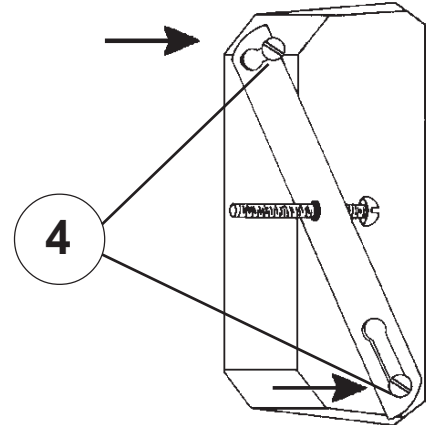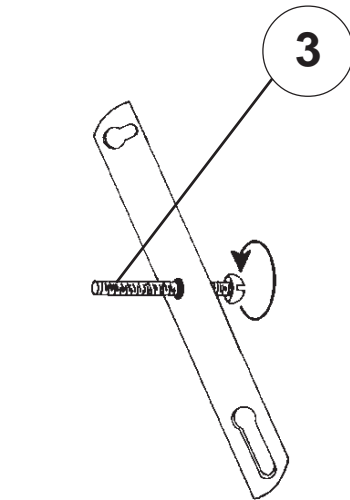

CHANDELIER 3708- _____ A TRIM DIAGRAM
(Finish Option)

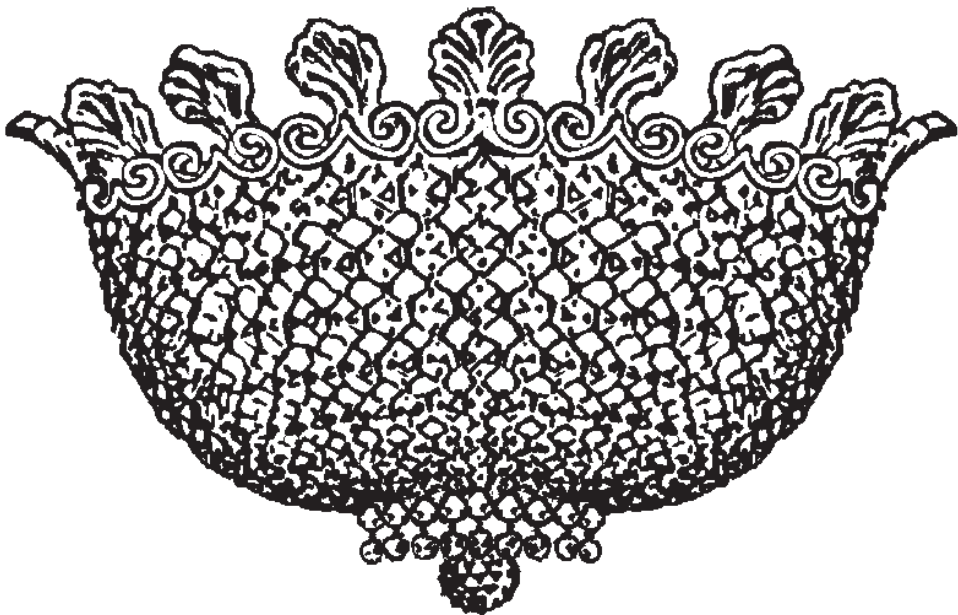

THIS DESIGN IS THE PROPRIETARY
TRADE DRESS/TRADEMARK OF
SCHONBEK WORLDWIDE LIGHTING INC.

3 Lights
Diameter: 15"
Body Length: 8-1/2"
Extension: 7"
Hanging Weight: 4 lbs.

SCHONBEK®


See diagram on back page
Follow steps in exact order
Save this trim diagram for future reference

1 **IMPORTANT**
Person who opens carton should record the following information for future service.

CODE #	_____	Four-digit number on outside of carton.
PACKER #	_____	See crystal package label.
ORDER #	_____	See crystal package label.

SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE:
#D5,222,805, #D5,588,744 & #D373,441

Instructions for crystal trimming
STEPS 12 - 16




12

You will need 3 - C10
25 Watts Recommended
40 Watts Max

Install bulb and be sure to
test fixture **BEFORE** trim-
ming.

- Install leaves with half ball.
1. Screw half ball onto running thread.
 2. Slide running thread thru gallery and leaf.
 3. Adjust leaf to sit up and down (make sure leaf doesn't lean right or left).
 4. Tighten leaf to gallery using thumb nut onto running thread.

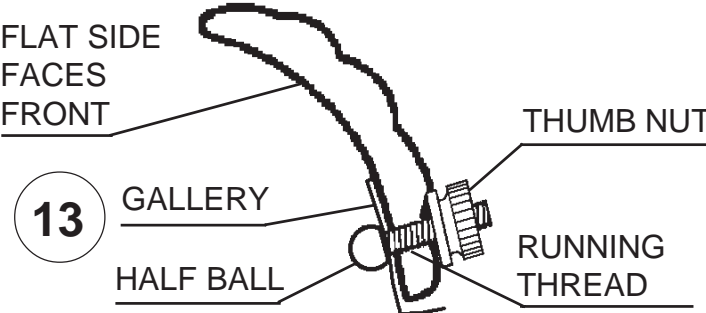

13

#9580/56



Large Jewel
At Top

16

A

Small Jewel
At Bottom

B

15

C

14

Bottom Rings:

A

B