



Instructions for electrician STEPS 2 - 8

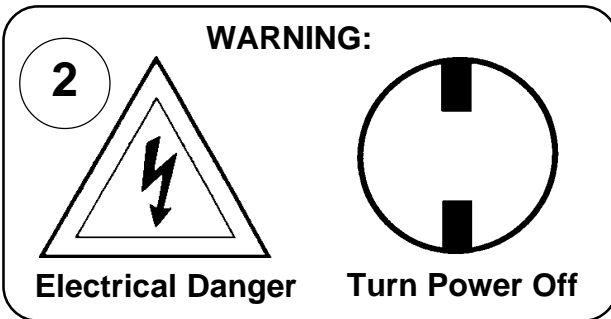

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

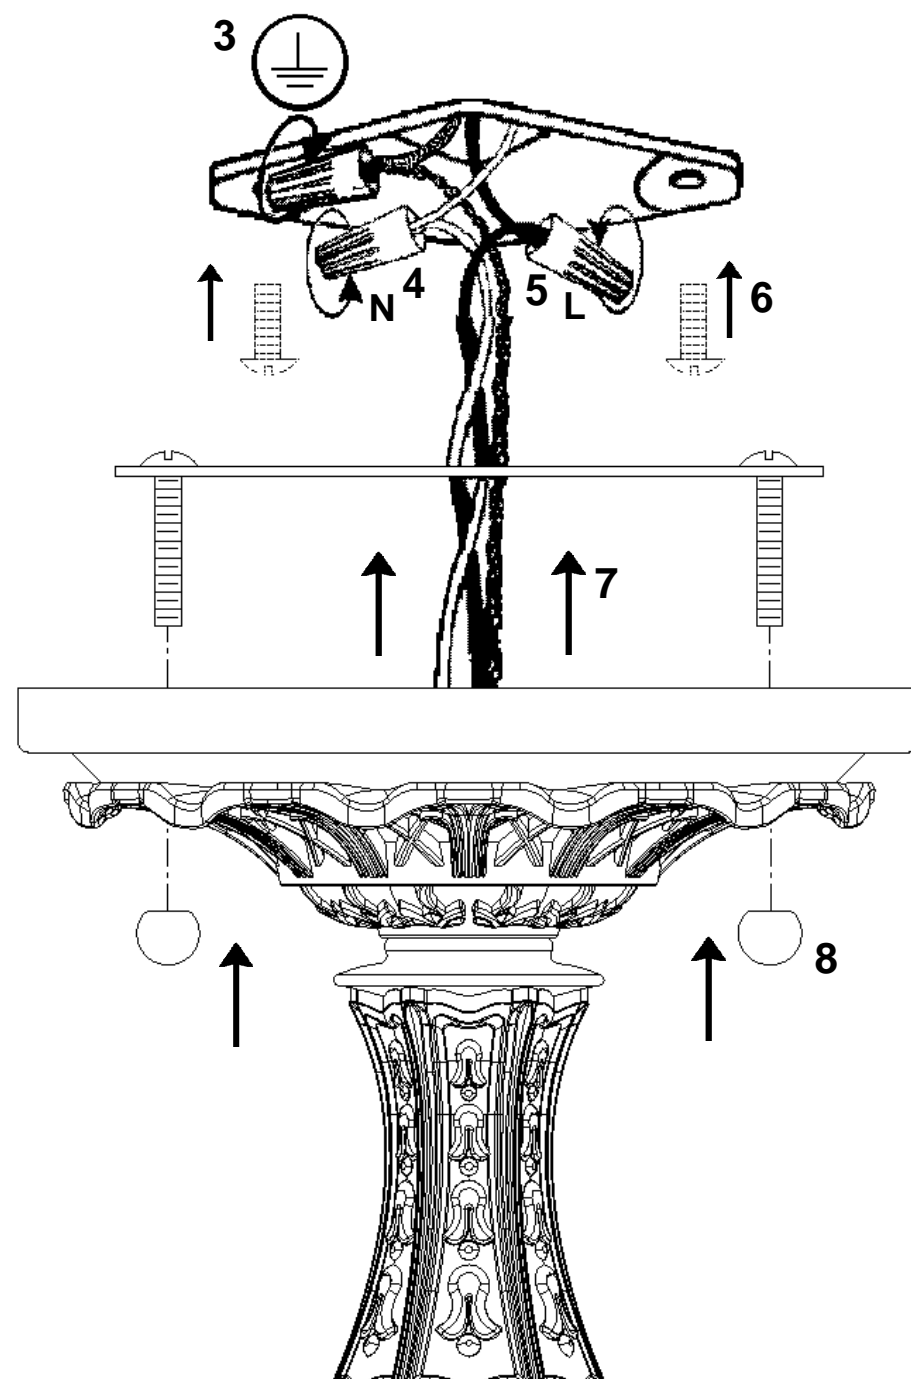

CHANDELIER 5645- _____ TRIM DIAGRAM

(Finish Option) (Trim Option)



THIS DESIGN IS THE PROPRIETARY
TRADE DRESS/TRADEMARK OF
SCHONBEK WORLDWIDE LIGHTING INC.

3 Lights
Diameter: 12"
Body Length: 16"
Hanging Weight: 12lbs.

SCHONBEK®

**See diagram on back page
Follow steps in exact order
Save this trim diagram for future reference**

1

IMPORTANT

Person who opens carton should record the following information for future service.



CODE # _____ Four-digit number on outside of carton.
PACKER # _____ See crystal package label.
ORDER # _____ See crystal package label.

Instructions for crystal trimming STEPS 9 - 13



You will need 3 - B10
25 Watts Recommended
60 Watts Max
MIN 90°C SUPPLY
CONDUCTORS

Install bulbs and be
sure to test fixture
BEFORE trimming.

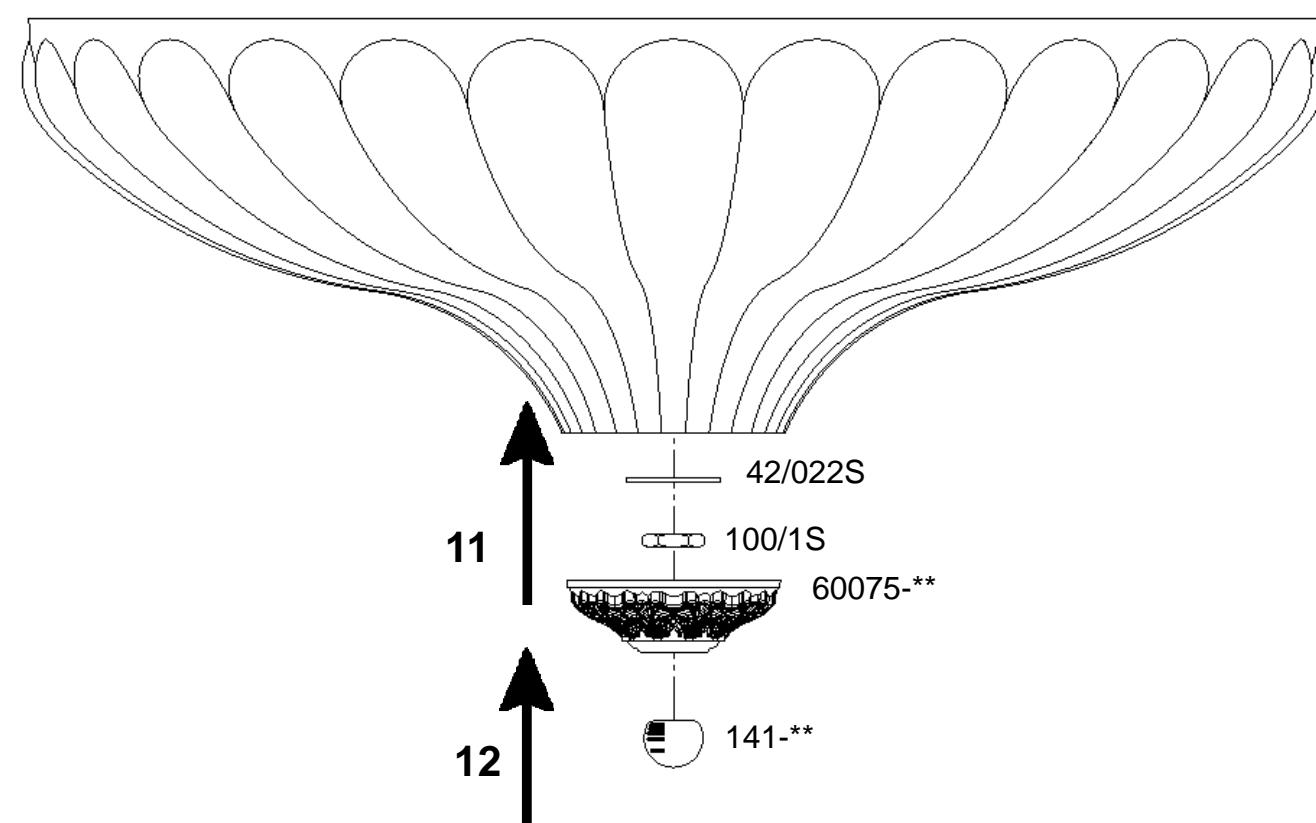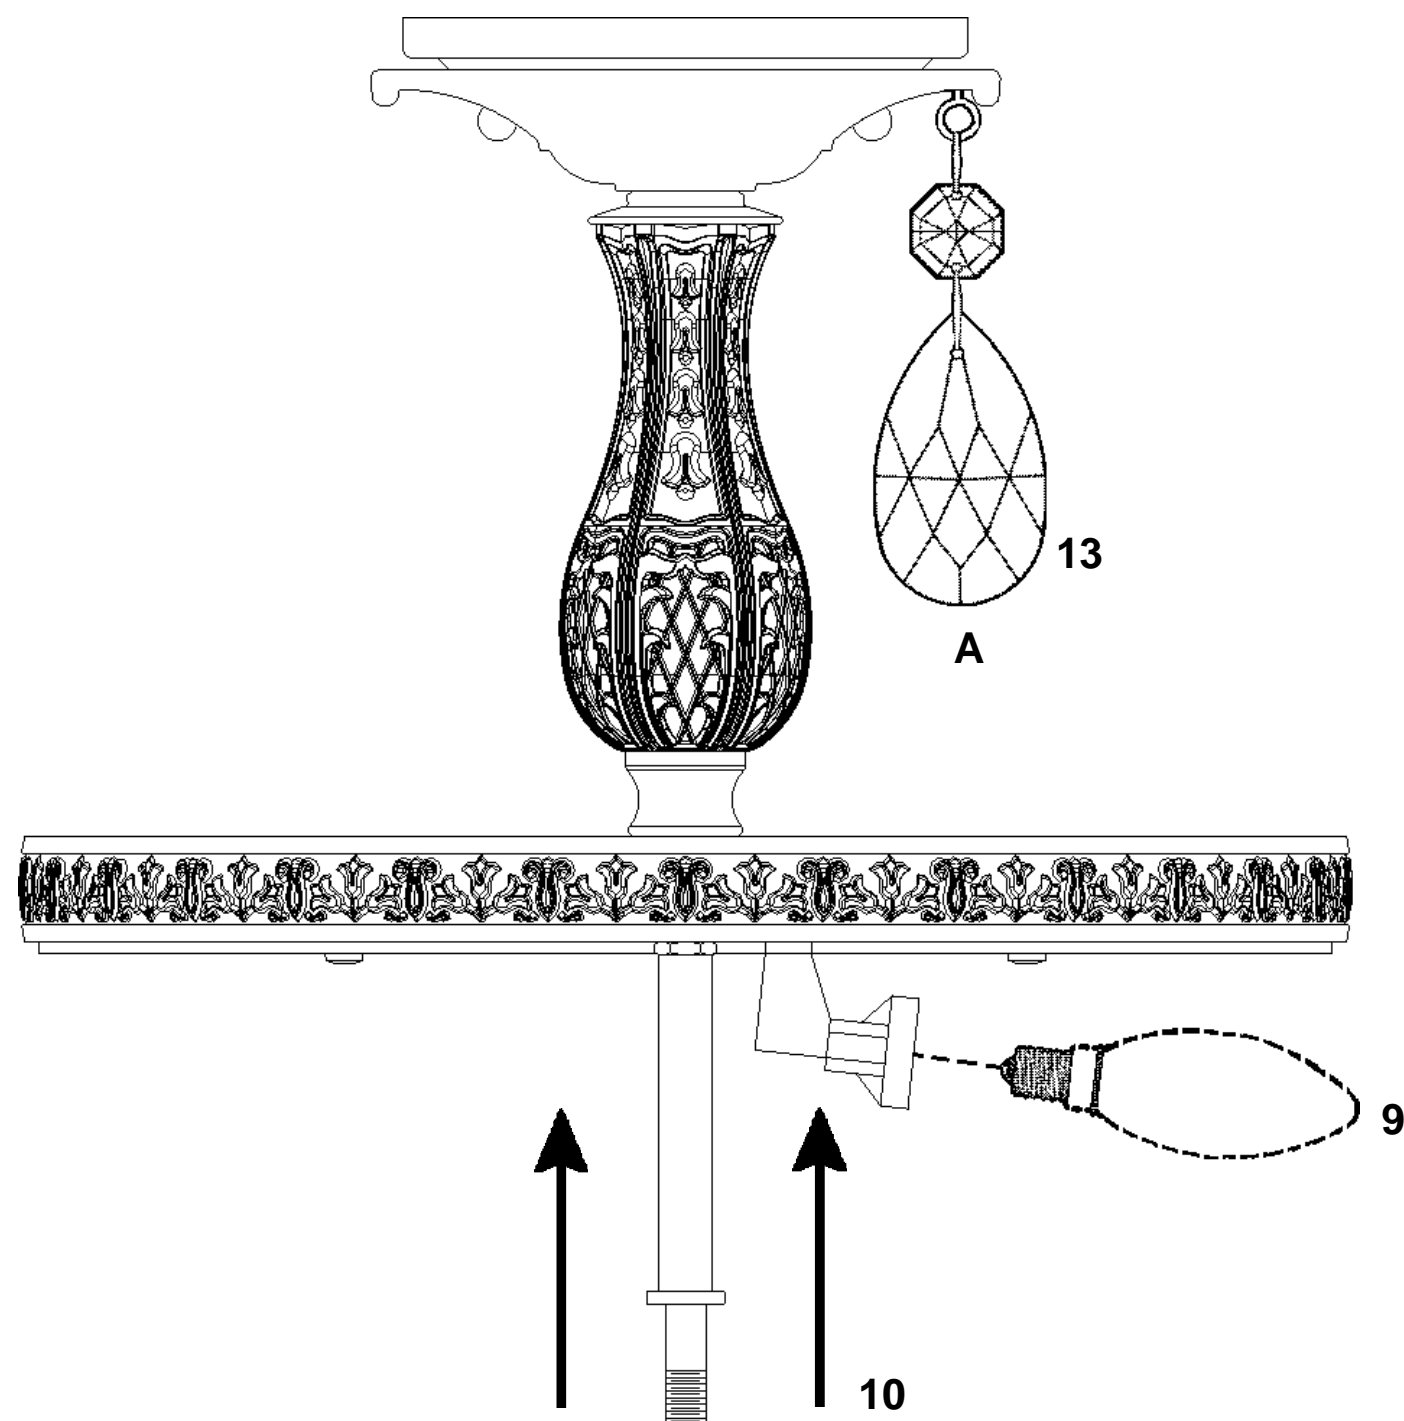

90315/305