



## Instructions for electrician STEPS 2 - 8

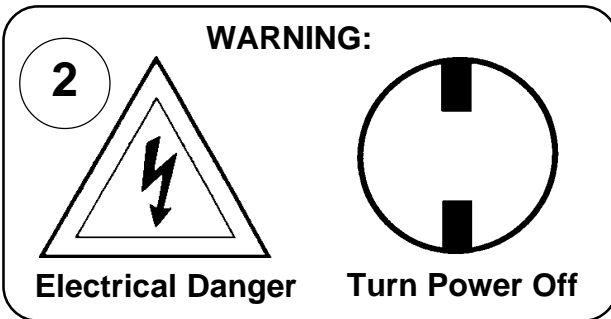


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

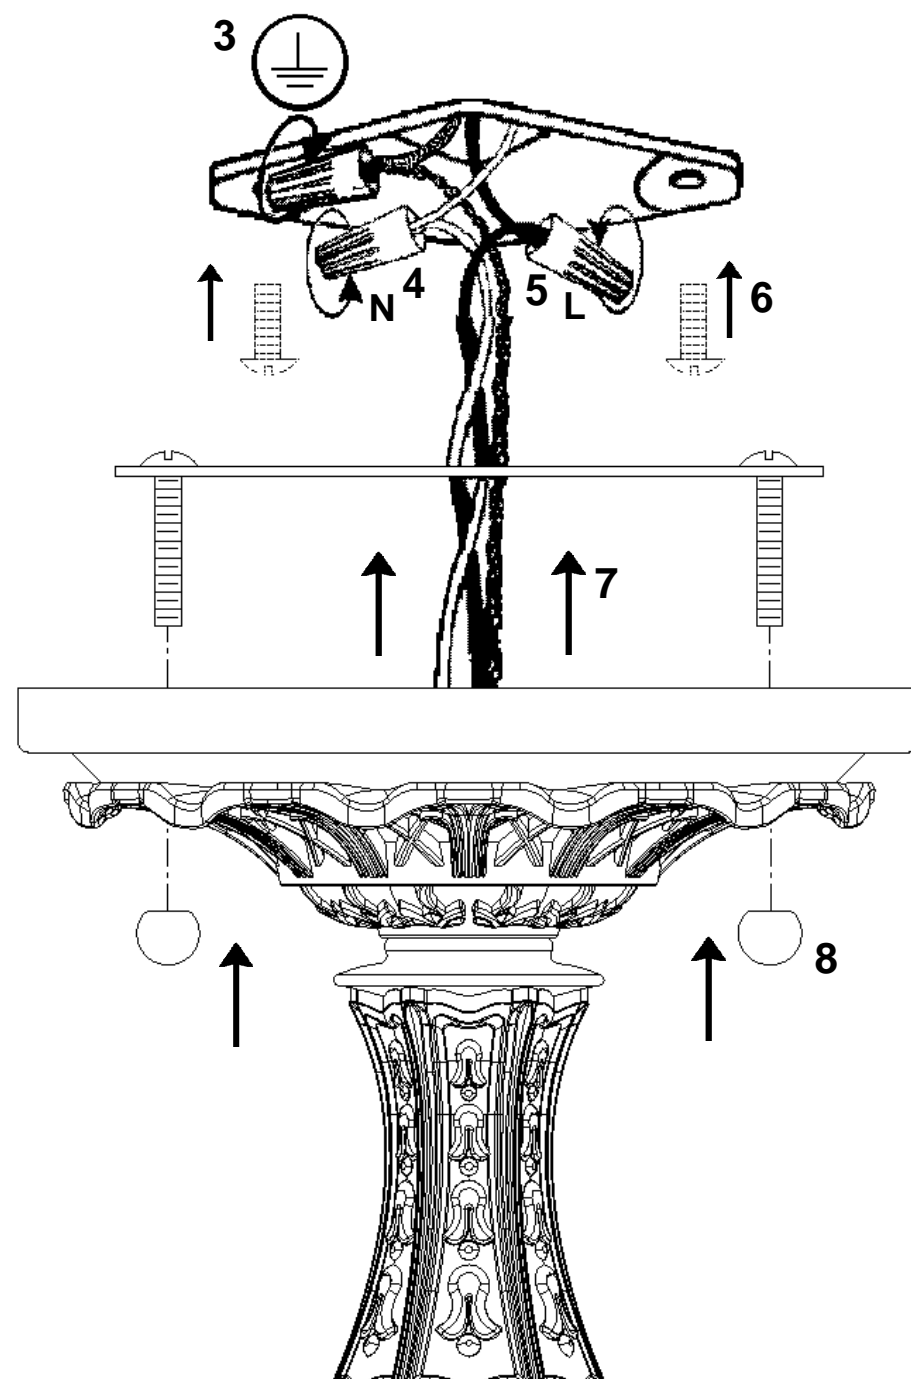

## CHANDELIER 5650- \_\_\_\_\_ TRIM DIAGRAM

(Finish Option) (Trim Option)

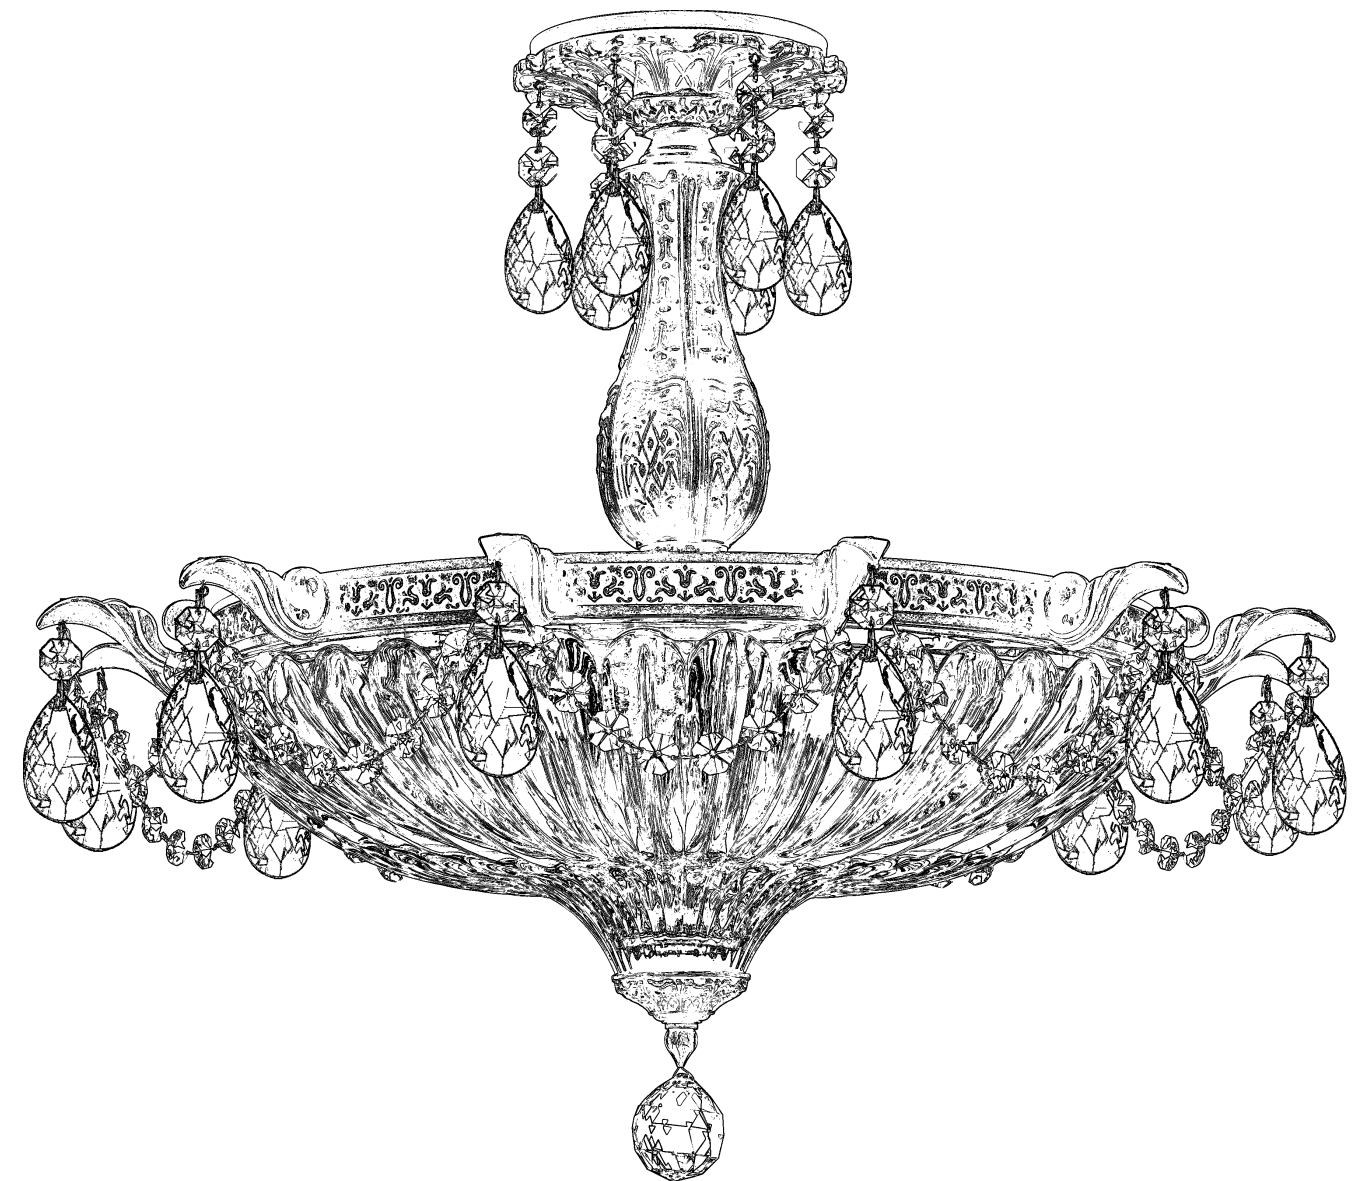

**T**HIS DESIGN IS THE PROPRIETARY  
TRADE DRESS/TRADEMARK OF  
SCHONBEK WORLDWIDE LIGHTING INC.

4 Lights  
Diameter: 22-1/2"  
Body Length: 19-1/2"  
Hanging Weight: 25lbs.

# SCHONBEK®

See diagram on back page  
Follow steps in exact order  
Save this trim diagram for future reference


**1**

### IMPORTANT

*Person who opens carton should record the following information for future service.*

CODE # \_\_\_\_\_ Four-digit number on outside of carton.  
PACKER # \_\_\_\_\_ See crystal package label.  
ORDER # \_\_\_\_\_ See crystal package label.

Instructions for crystal trimming  
STEPS 9 - 16

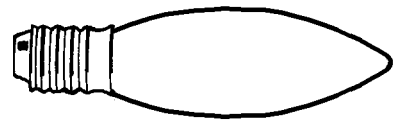

You will need 4 - B10  
25 Watts Recommended  
60 Watts Max  
MIN 90°C SUPPLY  
CONDUCTORS

Install bulbs and be  
sure to test fixture  
BEFORE trimming.

