


SCHONBEK®

SCHONBEK IS A WORLD LEADER IN CHANDELIER
DESIGN. PATENTS INCLUDE:
#D5,109,325

CHANDELIER 5852S TRIM DIAGRAM

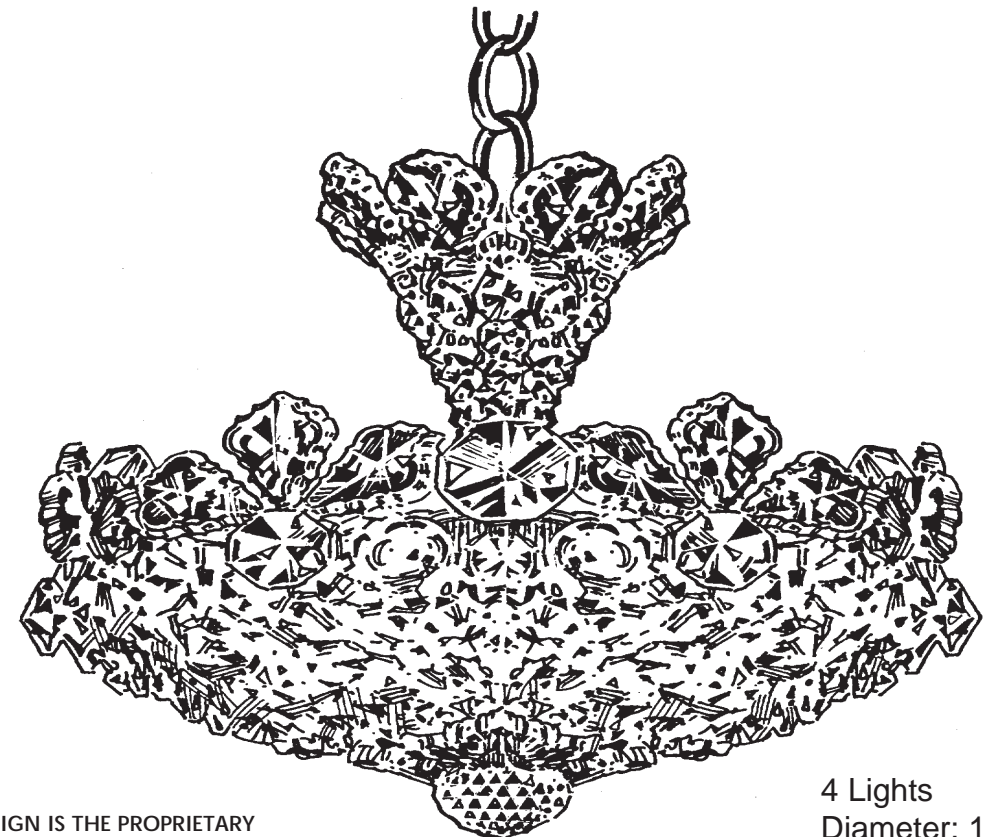

THIS DESIGN IS THE PROPRIETARY
TRADE DRESS/TRADEMARK OF
SCHONBEK WORLDWIDE LIGHTING INC.

4 Lights
Diameter: 11"
Body Length: 10-1/2"

SCHONBEK®

This fixture was designed and manufactured in Plattsburgh, N.Y. Our high-quality crystal fixtures are made with state-of-the-art manufacturing equipment. If you have any questions about this or any of our more than 450 crystal products, contact your nearest authorized Schonbek distributor.

CAUTION... RISK OF ELECTRICAL SHOCK. Make sure the electrical supply to the chandelier is turned off at the main fuse or circuit breaker before doing any installation. All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

HANGING WEIGHT: 8 pounds.

BULBS: (4) Candle shaped candelabra base C10 bulbs, recommend 25 watts for best appearance.
60 - Watts Maximum


WARNING: This chandelier meets UL/CSA requirements. Any tampering will void UL/CSA certification.

Follow steps in exact order
Save this trim diagram for future reference

IMPORTANT

Please record the following information for future service.

CODE	#	_____	Four-digit number on outside of carton.
PACKER	#	_____	See crystal package label.
ORDER	#	_____	See crystal package label.

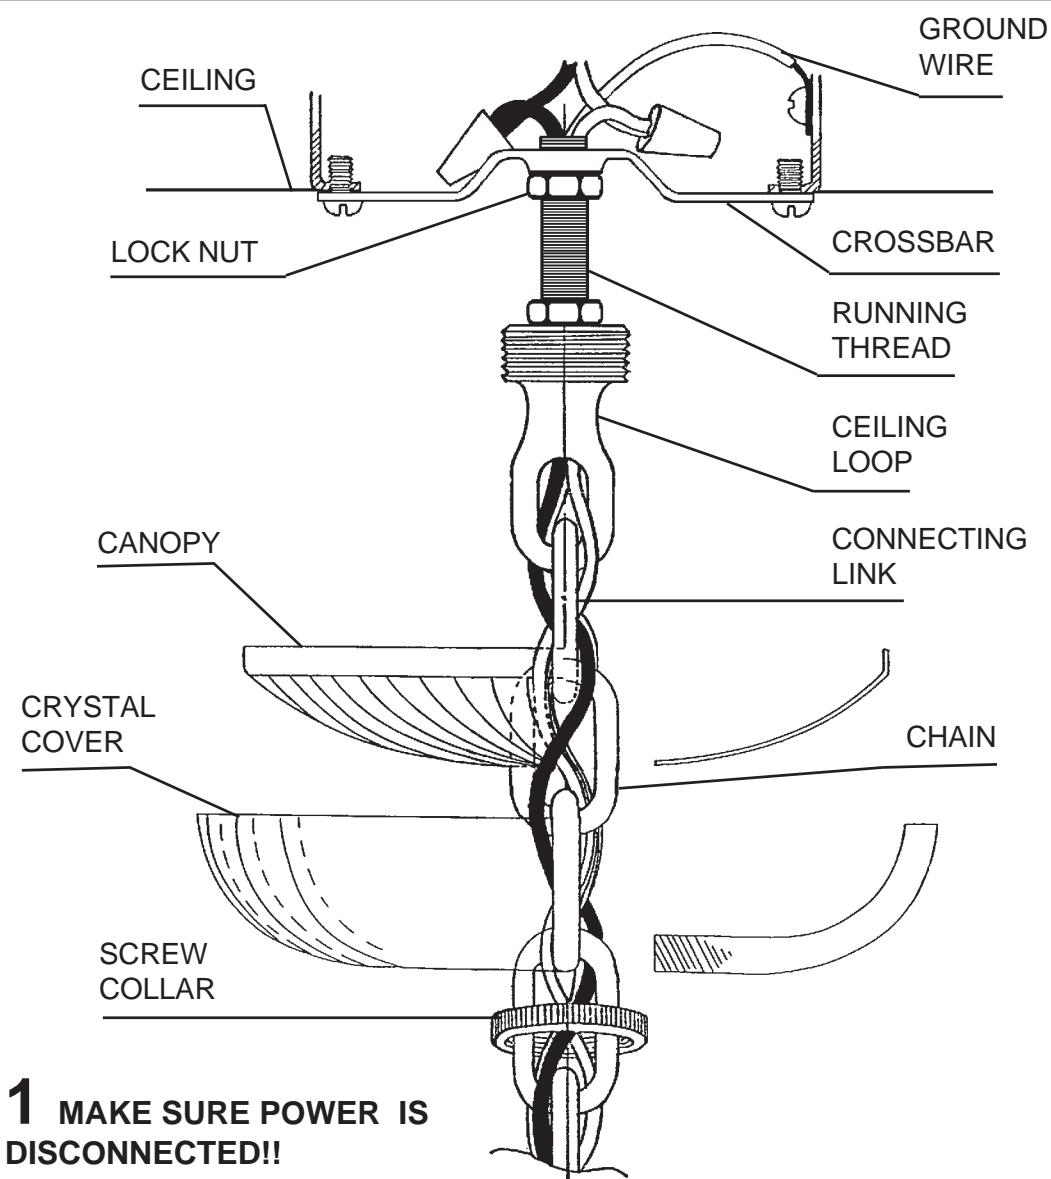

1 MAKE SURE POWER IS DISCONNECTED!!

2 Attach crossbar to outlet box.

3 Slip screw collar, crystal cover and metal canopy over chain and then determine at what length the fixture is to be suspended. Join the required length of fixture chain to connecting link on stem of fixture and loop attached to ceiling canopy at other end.

4 Feed stem wires through chain, through loop at canopy end, and attach to power wires in outlet box. Fixture **MUST** be grounded.

5 Check distance from ceiling to loop to assure canopy assembly will be flush against ceiling.

6 Attach canopy to ceiling with screw collar, thereby retaining complete assembly against ceiling.
Screw bulbs into all sockets. Test power to insure proper wiring before hanging trim from fixture.

MAINTENANCE:

Use a soft, lint - free cloth to clean the metal frame.

UNDER NO CIRCUMSTANCES SHOULD METAL POLISHES, CLEANERS, ABRASIVES OR AEROSOL SPRAYS BE USED.

While the latest finishing techniques have been used on the metal frame, such finish cannot be unconditionally guaranteed. The main cause of deterioration, apart from certain atmospheric conditions, is improper cleaning.


To clean the crystals, polish with a damp chamois.

You are cleaning delicate jewelry... Take the greatest care.

IMPORTANT:


Do not clean crystals in a dishwasher. The finish of the metal clips and hangers will be ruined and the crystals may be damaged.

Installation of Crystal "J" and "K"

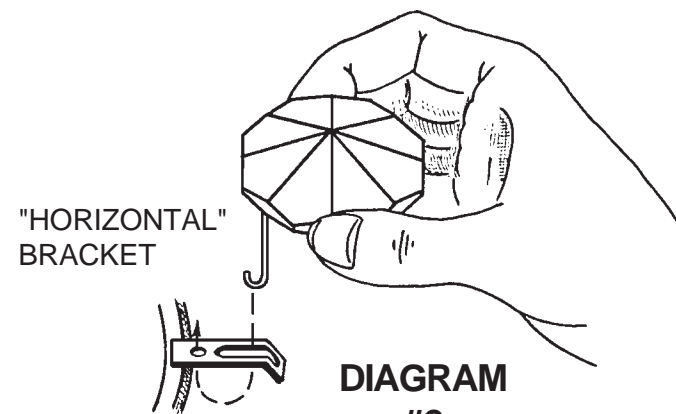


Position the crystal above the "horizontal" bracket so that the end of the hook enters the slot, gently push toward the center of the fixture and raise the crystal making sure that the end of the hook comes up through the hole, in line with the slot.

With the hook in the bracket, as shown, pivot the crystal downwards so that the hook rests in the end of the outer slot.

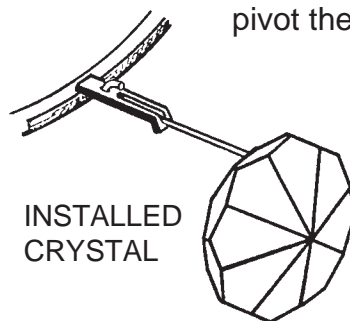

Installation of Crystal "B"

Pendaloques are installed in much the same manner. Slide the end of the hook through the slot of the bracket and up through the hole. Pivot the Pendaloque until the hook rests in the end of the slot.

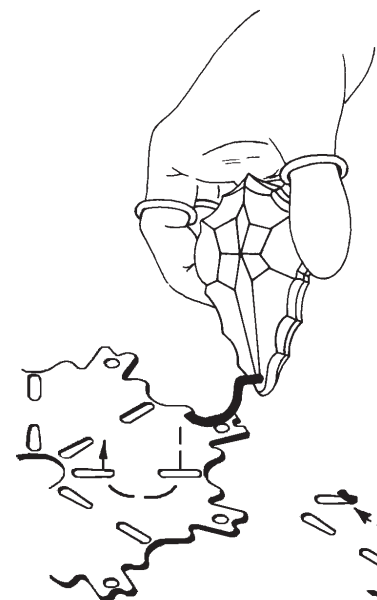









INSTALLED
PENDALOQUE

Cleaning Instructions:

Chains "A":
DO NOT REMOVE! The lower washer moves freely, allowing enough slack to clean the crystals.

Pendaloques "B":
To remove, it is necessary to gently lift the outer end of the pendaloque up while pressing down on the end of the hook.


TRIM ID SHEET FOR ORDERING SPARE PARTS. PLEASE SAVE FOR CLEANING FIXTURE!

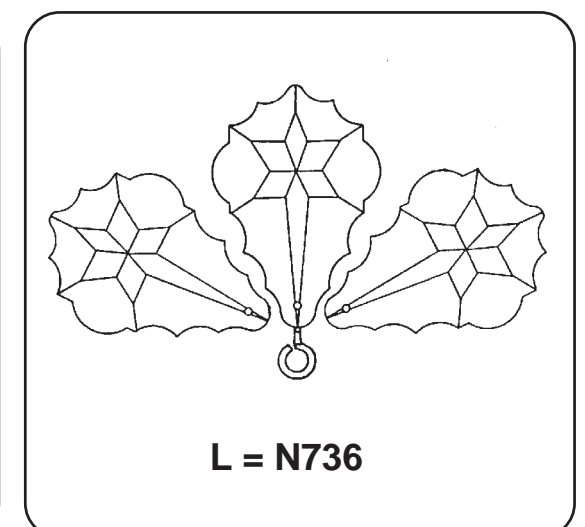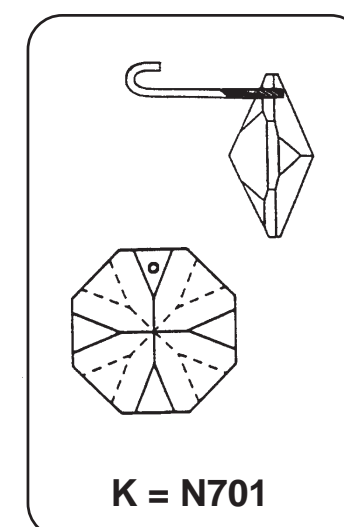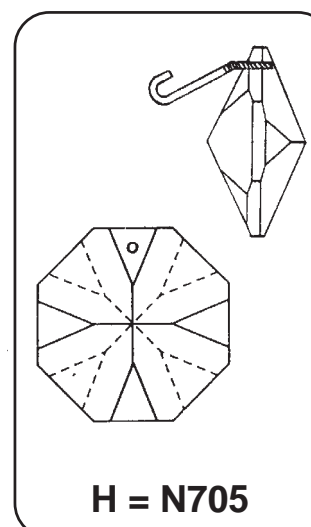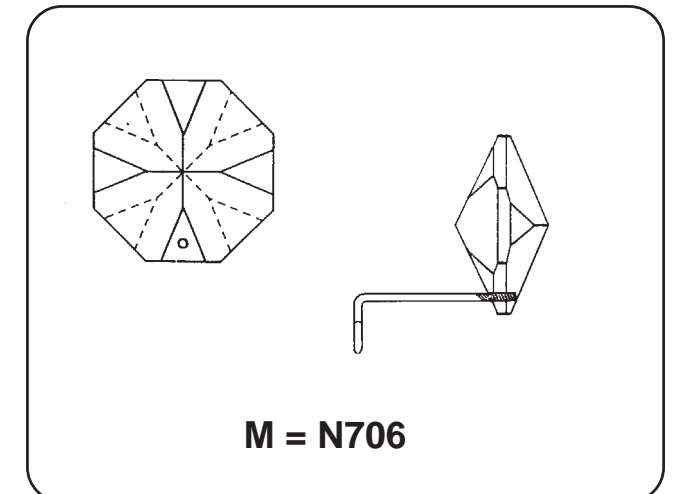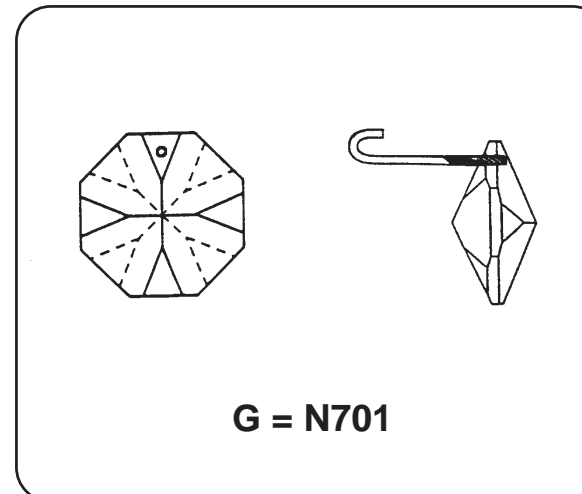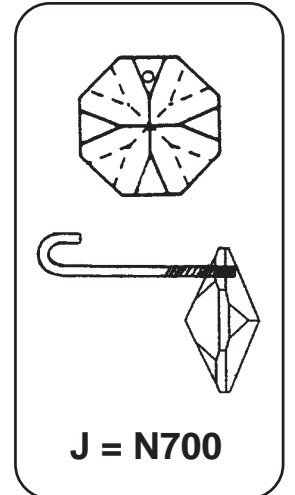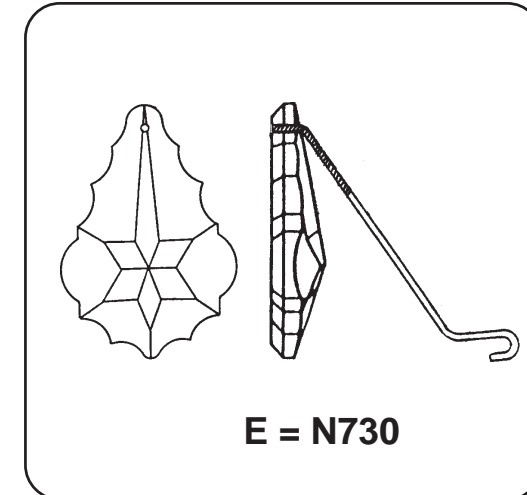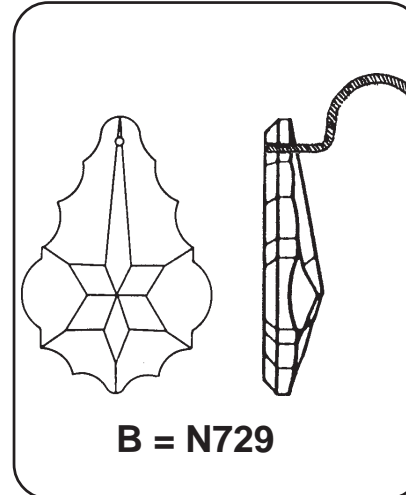

7 Carefully remove packing material protecting Chains "A".

8 Hook Crystal "B" into every bracket of the crown at the top. See diagram #3 on page 6.

9 Screw Ball "N" onto the bottom of the frame. Tighten set screw with supplied tool to lock ball into position.

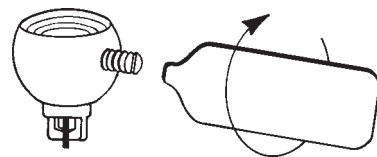

10 Hook Pendaloques "E" into the holes from the inside of brackets located under the body.

Hook Drops "F" into the holes of Ring #1. Hook Drops "F" into the holes of Ring #3.

Hook Jewels "G" into the holes from the inside of Ring #2. NOTE: Jewels "G" are identical to Jewels "K".

Hook Jewels "H" into the holes from the inside of Ring #4.

11 Hook Jewels "J" into Ring #5 brackets located directly above Jewels "H". See Diagram #2 on page 6 for detailed instructions. Hook Jewels "K" into the remaining Ring #5 brackets. Jewels "K" will be between Jewels "H" and Jewels "J". See Diagram #2 on page 6 for detailed instructions.

12 Remove the knurled knobs attached to screws on the inside of the outer ring #5. Install Fan Ornaments "L" to every second screw of Ring #5. Slide the loop of the hook over the screw and secure in place, using the knurled knobs. See diagram #1. Slide the loops of the hook of Jewels "M" over the remaining screws of Ring #5 and secure in place, using the knurled knobs. See diagram #1.

