

MAINTENANCE:

Use a soft, lint - free cloth to clean the metal frame.

**UNDER NO CIRCUMSTANCES
SHOULD METAL POLISHES, CLEANERS,
ABRASIVES OR AEROSOL SPRAYS
BE USED.**

While the latest finishing techniques have been used on the metal frame, such finish cannot be unconditionally guaranteed. The main cause of deterioration, apart from certain atmospheric conditions, is improper cleaning.

To clean the crystals, polish with a damp chamois.

You are cleaning delicate jewelry... Take the greatest care.

IMPORTANT:

Do not clean crystals in a dishwasher. The finish of the metal clips and hangers will be ruined and the crystals may be damaged.

SCHONBEK®

SCHONBEK IS A WORLD LEADER IN CHANDELIER
DESIGN. PATENTS INCLUDE:
#D5,109,325

CHANDELIER 5853S TRIM DIAGRAM



THIS DESIGN IS THE PROPRIETARY
TRADE DRESS/TRADEMARK OF
SCHONBEK WORLDWIDE LIGHTING INC.

6 Lights
Diameter: 16"
Body Length: 13"

SCHONBEK®

This fixture was designed and manufactured in Plattsburgh, N.Y. Our high-quality crystal fixtures are made with state-of-the-art manufacturing equipment. If you have any questions about this or any of our more than 450 crystal products, contact your nearest authorized Schonbek distributor.

CAUTION... RISK OF ELECTRICAL SHOCK. Make sure the electrical supply to the chandelier is turned off at the main fuse or circuit breaker before doing any installation. All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

HANGING WEIGHT: 14 pounds.

BULBS: (6) Candle shaped candelabra base C10 bulbs, recommend 25 watts for best appearance.
60 - Watts Maximum


WARNING: This chandelier meets UL/CSA requirements. Any tampering will void UL/CSA certification.

**Follow steps in exact order
Save this trim diagram for future reference**

IMPORTANT

Please record the following information for future service.

| | | | |
|--------|---|-------|---|
| CODE | # | _____ | Four-digit number on outside of carton. |
| PACKER | # | _____ | See crystal package label. |
| ORDER | # | _____ | See crystal package label. |

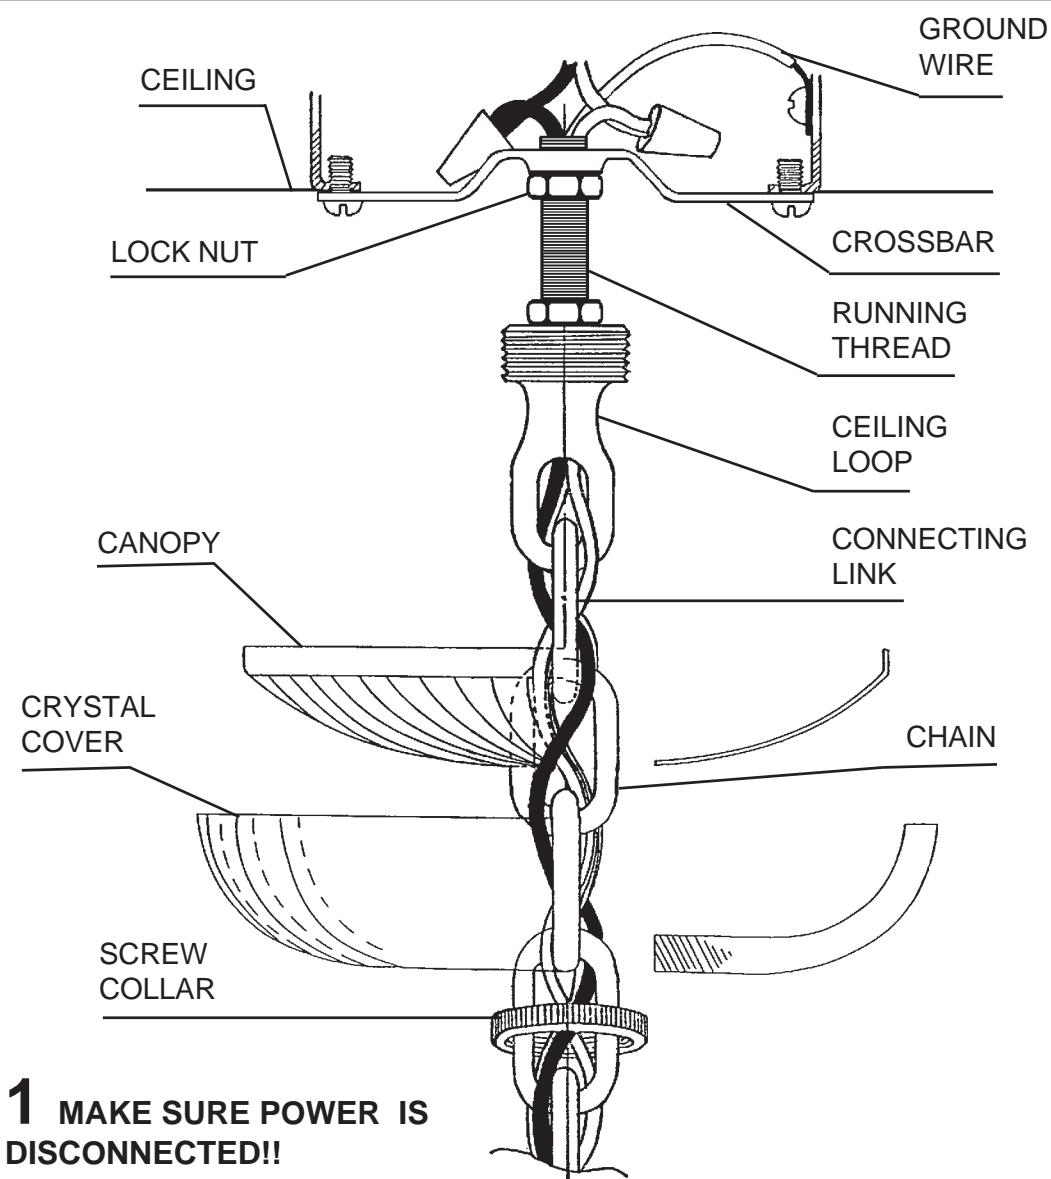

1 MAKE SURE POWER IS DISCONNECTED!!

2 Attach crossbar to outlet box.


3 Slip screw collar, crystal cover and metal canopy over chain and then determine at what length the fixture is to be suspended. Join the required length of fixture chain to connecting link on stem of fixture and loop attached to ceiling canopy at other end.

4 Feed stem wires through chain, through loop at canopy end, and attach to power wires in outlet box. Fixture **MUST** be grounded.

5 Check distance from ceiling to loop to assure canopy assembly will be flush against ceiling.

6 Attach canopy to ceiling with screw collar, thereby retaining complete assembly against ceiling. Screw bulbs into all sockets. Test power to insure proper wiring before hanging trim from fixture.

DIAGRAM #7

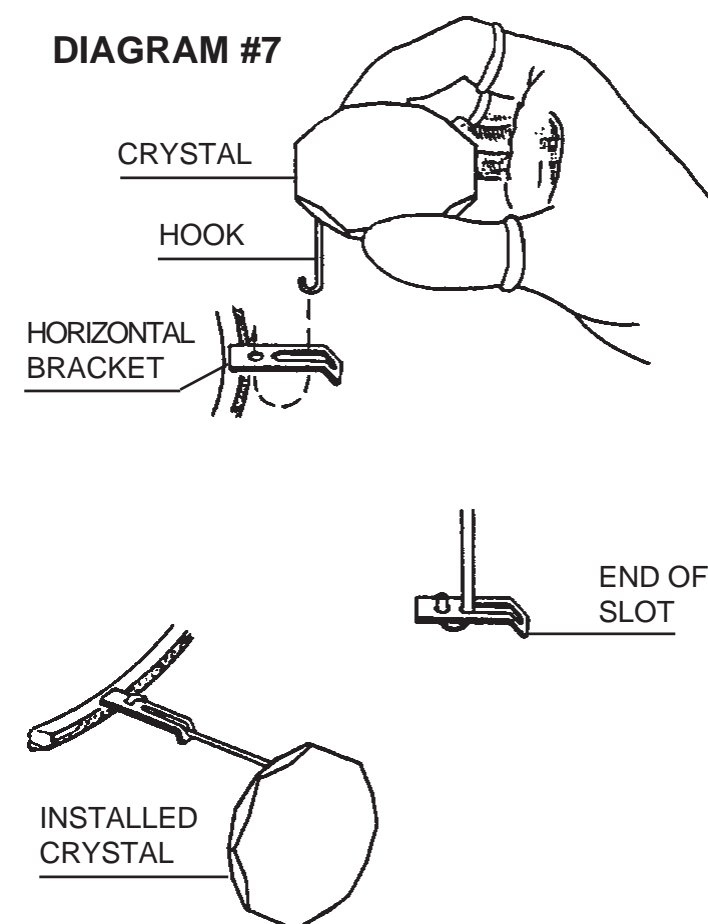

Installation of Crystal "K" and "L"

Hold crystal by the sides between thumb and forefinger. Position the crystal above the bracket so that the end of the hook enters the slot, gently push toward the center of the fixture and raise the crystal making sure that the end of the hook comes up through the hole, in line with the slot.

With the hook in the bracket, as shown, pivot the crystal downwards so that the hook rests in the end of the slot.

Cleaning instructions for Crystal "A", "C", "D" & "M"

The crystals, with the exception of Chains "A", should be removed before cleaning. Keep each similar crystal (each letter) together for ease of retrimming fixture.


Chains "A" should not be removed to clean the crystals. The lower washer moves freely, allowing enough slack to clean the crystals.

Crystals "C" & "D" need to be gently removed. Do this by lifting the outer end of the crystal up while pressing down on the end of the hook.


Crystal "M" were shipped assembled, ready to be installed. One of the hooks may come loose during cleaning. Tighten the nut with wrench.

NOTE: Hold the wire in position and do NOT hold the crystal!

If any of the crystals should need replacing, the reference number **MUST** be used. The new crystal can be replaced in the same manner as tightening a loose crystal.

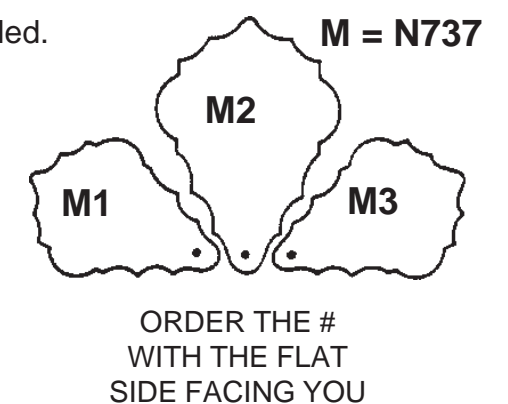

Installation of Crystal "B1"

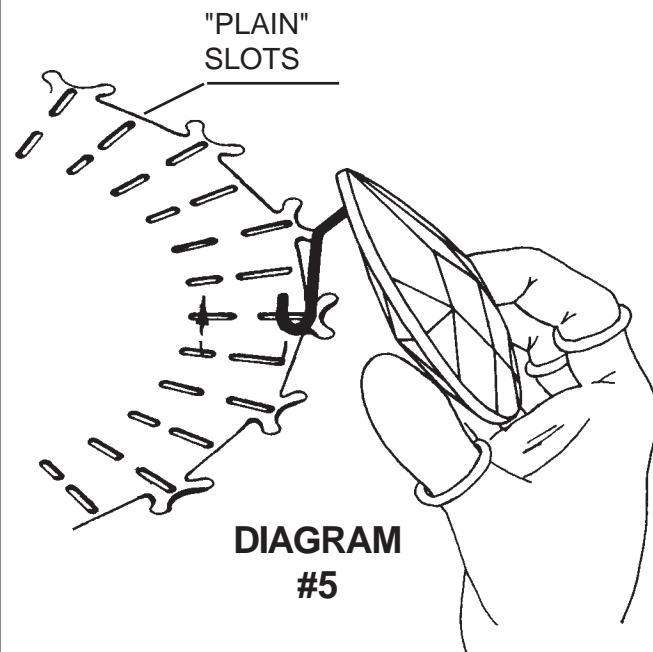


Position the crystal above the "plain" slots so that the end of the hook enters the slot, gently push toward the center of the fixture and raise the crystal making sure that the end of the hook comes up through the inner slot, in line with the outer slot.

With the hook in the inside slot, as shown, pivot the crystal downwards so that the hook rests in the end of the outer slot.




DIAGRAM #6

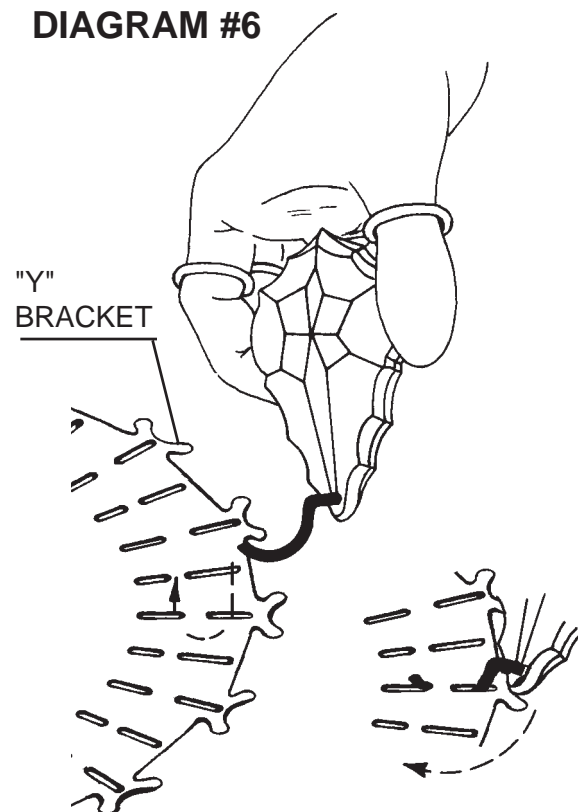


Installation of Crystal "C" and "D"

Position the crystal above the "Y" bracket so that the end of the hook enters the long slot, gently push toward the center of the fixture and raise the crystal making sure that the end of the hook comes up through the short slot, in line with the slot.


With the hook in the bracket, as shown, pivot the crystal downwards so that the hook rests in the end of the long slot.

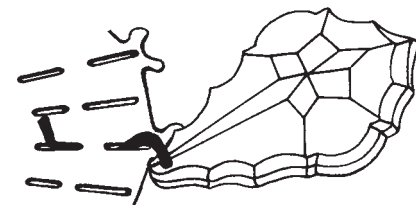


TRIM ID SHEET FOR ORDERING SPARE PARTS. PLEASE SAVE FOR CLEANING FIXTURE!

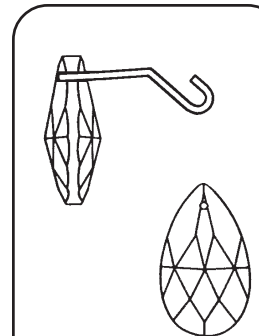


B1 = N720

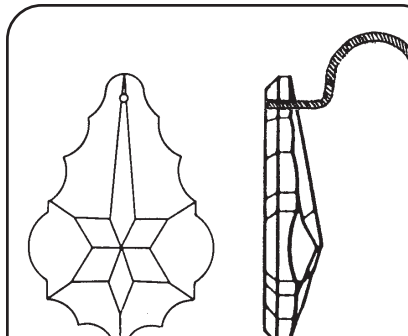


C = N729

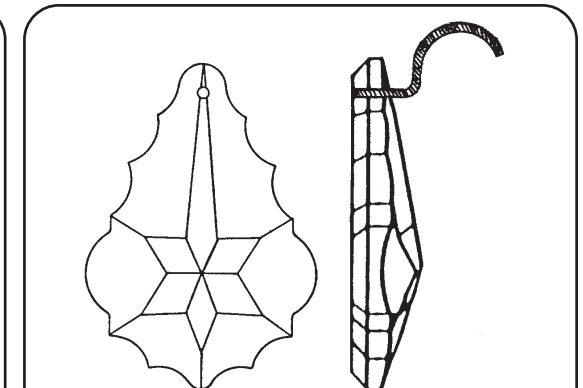


D = N732

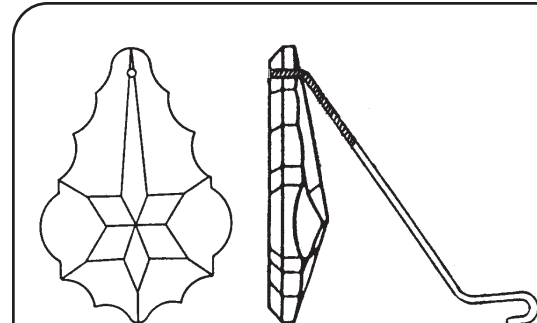

G = N730

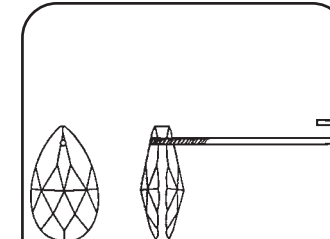


F = N718

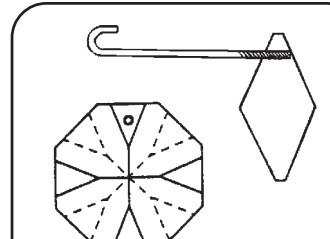


L = N702



N = N707

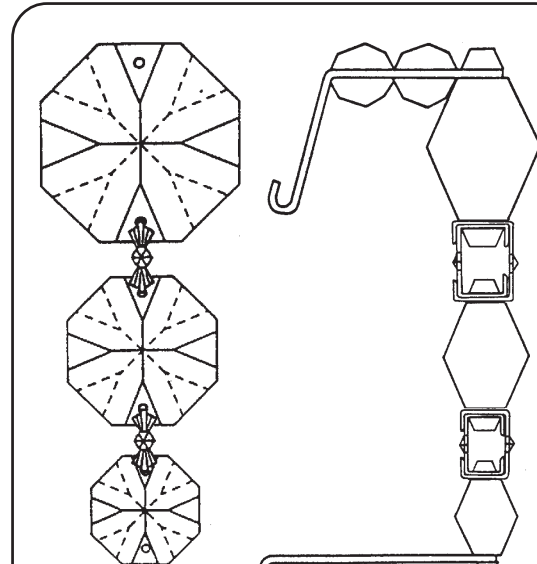

K = N715

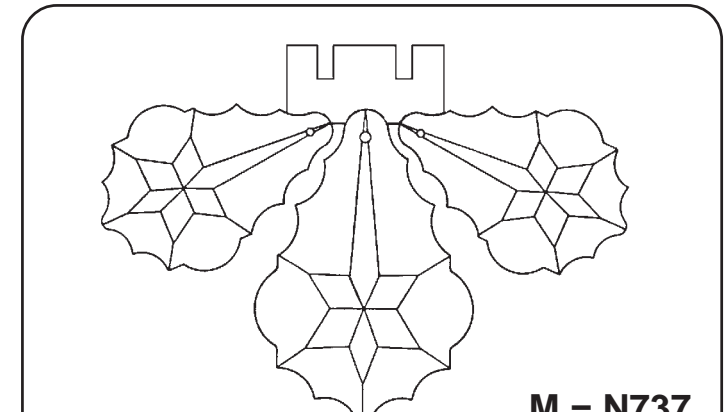


M = N737

7 Carefully remove packing material protecting Chains "A".

8 Hook Crystal "B1" into the "plain" slot of the crown at the top. See diagram #5 on page 6.
Hook small Crystal "C" into every second "Y" slot of the crown. See diagram #6 on page 6.
Hook large Crystal "D" into the remaining "Y" brackets of the crown. See diagram #4 on page 6.

9 Screw Ball "O" onto the bottom of the frame. Tighten set screw with supplied tool to lock ball into position.

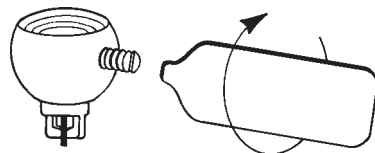

10 Hook Crystal "F" into the holes from the inside of the inner ring #1.
Hook Crystal "G" into the holes from the inside of ring #2.

11 Hook Crystal "H" into the holes of ring #3 and #4. Hold hook with index finger and thumb. Slide hook from behind metal ring, see diagram #1. Insert opening of hook into the hole and slide forward, see diagram #2. Allow Crystal "H" to hang in vertical position and to hang freely, see diagram #2.
Hook Crystal "J" into the small brackets located beneath the large outer ring, ring #5.

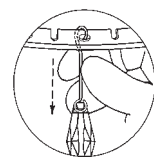
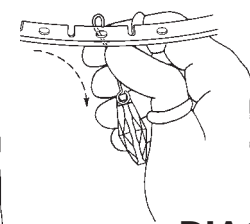
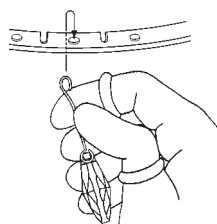


DIAGRAM #1

DIAGRAM #2

12 Insert bent wires of the large jewels of Crystals "K" into the horizontal brackets on ring #5, located between Crystals "J". See diagram #7 on page 7 for detailed instructions. Hook the other end of the crystal into the long slots of ring #3.

Hook Crystal "L" into the remaining horizontal brackets of ring #5, located above Crystals "J". See diagram #7 on page 7 for detailed instructions.

13 Remove the knurled knobs attached to screws on the inside of the outer ring #5. Install Fan Ornaments "M" to every second screw of ring #5 directly above Crystal "J" and behind Crystal "L" and tighten with knurled knob. See diagram #3 detailed instructions. Attach Crystal "N" between Fan Ornaments "M" and tighten with knurled knob. See diagram #4 for detailed instructions.

