

CHANDELIER 6863- _____ S TRIM DIAGRAM

(Finish Option)



T HIS DESIGN IS THE PROPRIETARY
TRADE DRESS/TRADE MARK OF
SCHONBEK WORLDWIDE LIGHTING INC.

3 Lights
Diameter: 8"
Body Length: 12"

SCHONBEK®

This crystal chandelier was designed and manufactured in Plattsburgh, N.Y. Our high-quality crystal fixtures are made with state-of-the-art manufacturing equipment. If you have any questions about this or any of our more than 450 crystal products, contact your nearest authorized Schonbek distributor.

CAUTION... RISK OF ELECTRICAL SHOCK. Make sure the electrical supply to the chandelier is turned off at the main fuse or circuit breaker before doing any installation. All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

HANGING WEIGHT: 4 pounds

BULBS: 3 - Candle shaped candelabra base C10 bulb, recommend 25 watts for best appearance.
40 -Watts Maximum

WARNING: This chandelier meets UL/CSA requirements. Any tampering will void UL/CSA certification.

MAINTENANCE:

Use a soft, lint-free cloth to clean the metal frame.

**UNDER NO CIRCUMSTANCES SHOULD METAL POLISHES, CLEANERS,
ABRASIVES OR AEROSOL SPRAYS BE USED.**

While the latest finishing techniques have been used on the metal frame, such finish cannot be unconditionally guaranteed. The main cause of deterioration, apart from certain atmospheric conditions, is improper cleaning.

To clean the crystals, polish with a damp chamois.

You are cleaning delicate crystal... Take the greatest care.

IMPORTANT:

Do not clean crystals in a dishwasher. The finish of the metal clips and hangers will be ruined and the crystals may be damaged.

1

IMPORTANT

Please record the following information for future service.


CODE	# _____	Four-digit number on outside of carton.
PACKER	# _____	See crystal package label.
ORDER	# _____	See crystal package label.

CAUTION: Glass parts are fragile. To Avoid breakage use care when assembling or cleaning.

2 MAKE SURE THAT POWER TO THE OUTLET BOX IS DISCONNECTED!!


3 Attach crossbar to outlet box.

4 Slip screw collar, canopy and prismatic cover over chain. Determine the suspension length of the fixture and cut chain, if necessary. Use two connecting links to attach chain to chandelier loop and ceiling loop.

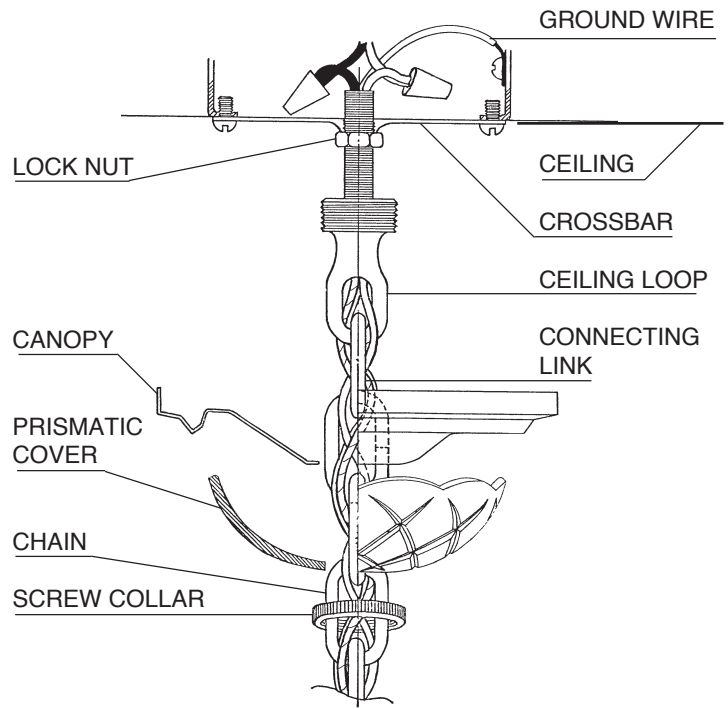

5 Insert stem wire through chain and ceiling loop. Connect wires. Fixture **MUST** be grounded.

6 Check distance from ceiling to loop to assure canopy assembly will be flush against ceiling.
7 Attach canopy to ceiling with screw collar.

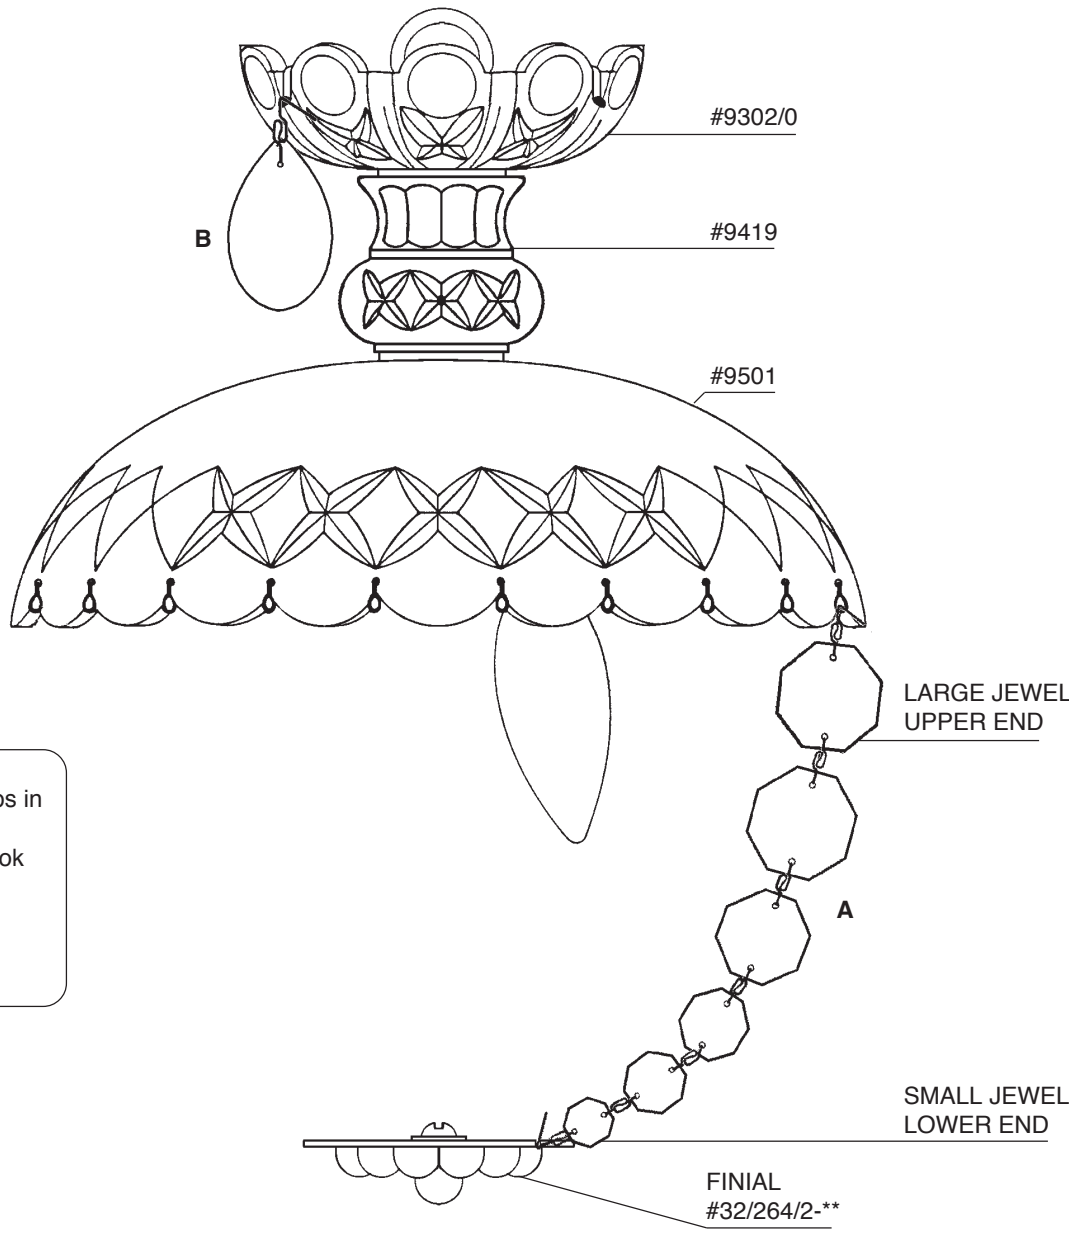

8 Hang Crystal Chains "A" from loops in the large column bobeche so that the large jewels are on the upper end. Hook other end with small jewels into finial.
9 Hang Crystal "B" into bracket on upper column bobeche.