

Instructions for electrician **STEPS 2 - 21**

#7863360


11

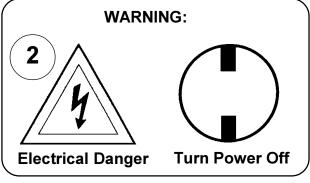


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

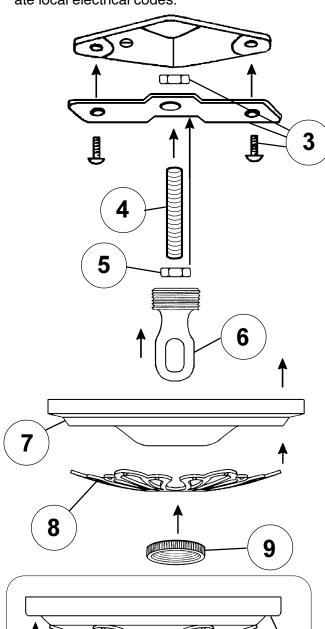

19

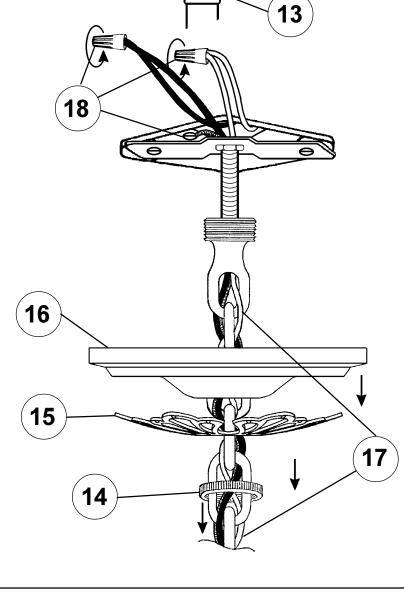


CHANDELIER 7866- ____ A TRIM DIAGRAM

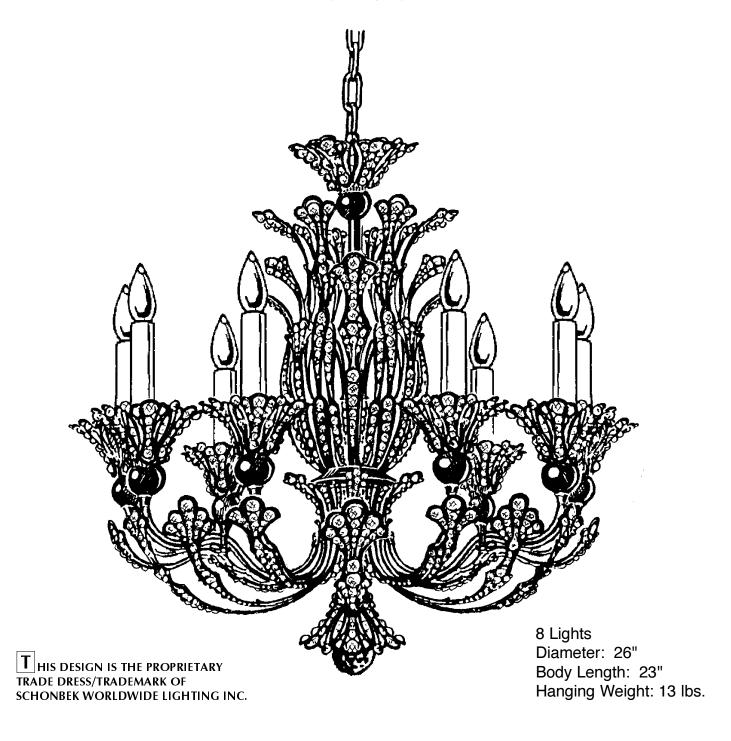

SCHONBEK®

See diagram on back page Follow steps in exact order Save this trim diagram for future reference

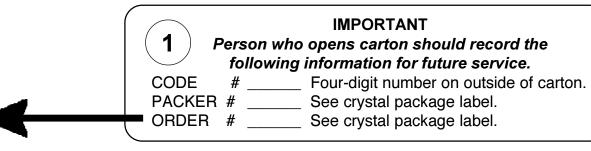

Instructions for crystal trimming **STEPS 22 - 24** 22 #7863358 You will need 8 - C10 25 Watts Recommended 60 Watts Max #7863353 #7863354 #7863358 #7863352 #7863350 #7863351 #7863359 24 **[23**] NC233 Tighten With **Allen Wrench** Provided.

