



## Instructions for electrician STEPS 2 - 6

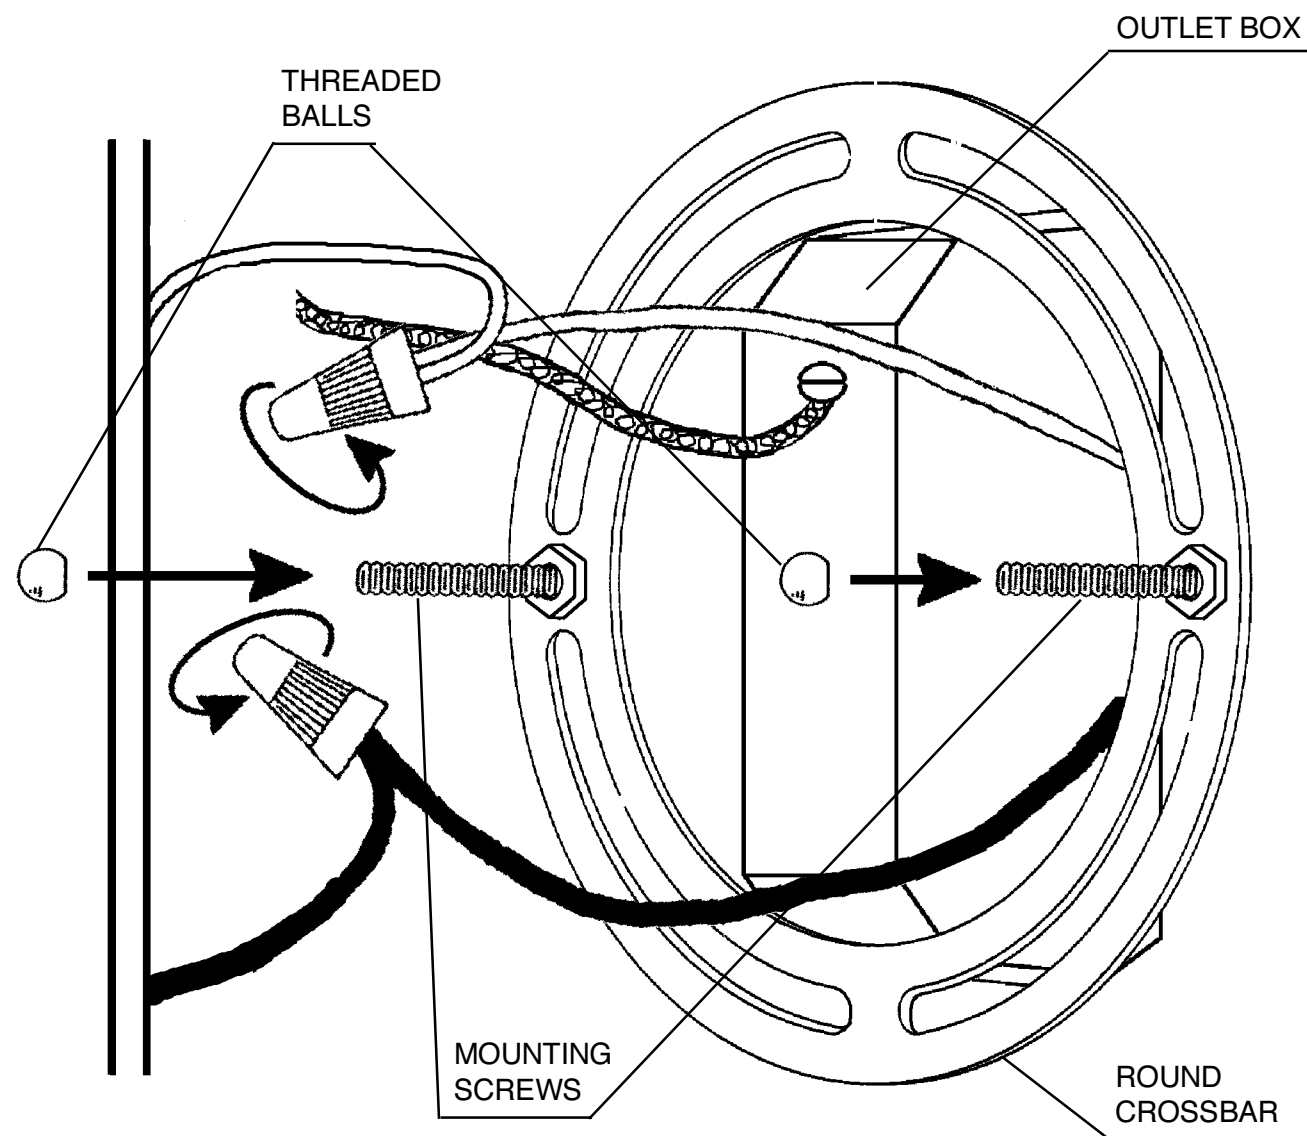

- 2 MAKE SURE POWER IS DISCONNECTED!!** All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.
- 3** Attach round crossbar to outlet box using 2 screws round head 8-32 x 1" (not supplied with wall bracket) to outlet box.
- 4** Test fit wall bracket by guiding it over screws assuring wall bracket is level. NOTE: If wall bracket is not level, adjust round crossbar and retighten screws.
- 5** Connect the wires of the wall bracket to the power wires of the outlet box, guide wall bracket over screws and secure with threaded balls supplied until mirror backplate is flush against wall. Make sure wall bracket is level. NOTE: Fixture **MUST** be grounded.
- 6** Test power to insure proper wiring before hanging trim from fixture.

## CHANDELIER 9620-\_\_\_ \_\_ TRIM DIAGRAM

(Finish Option)

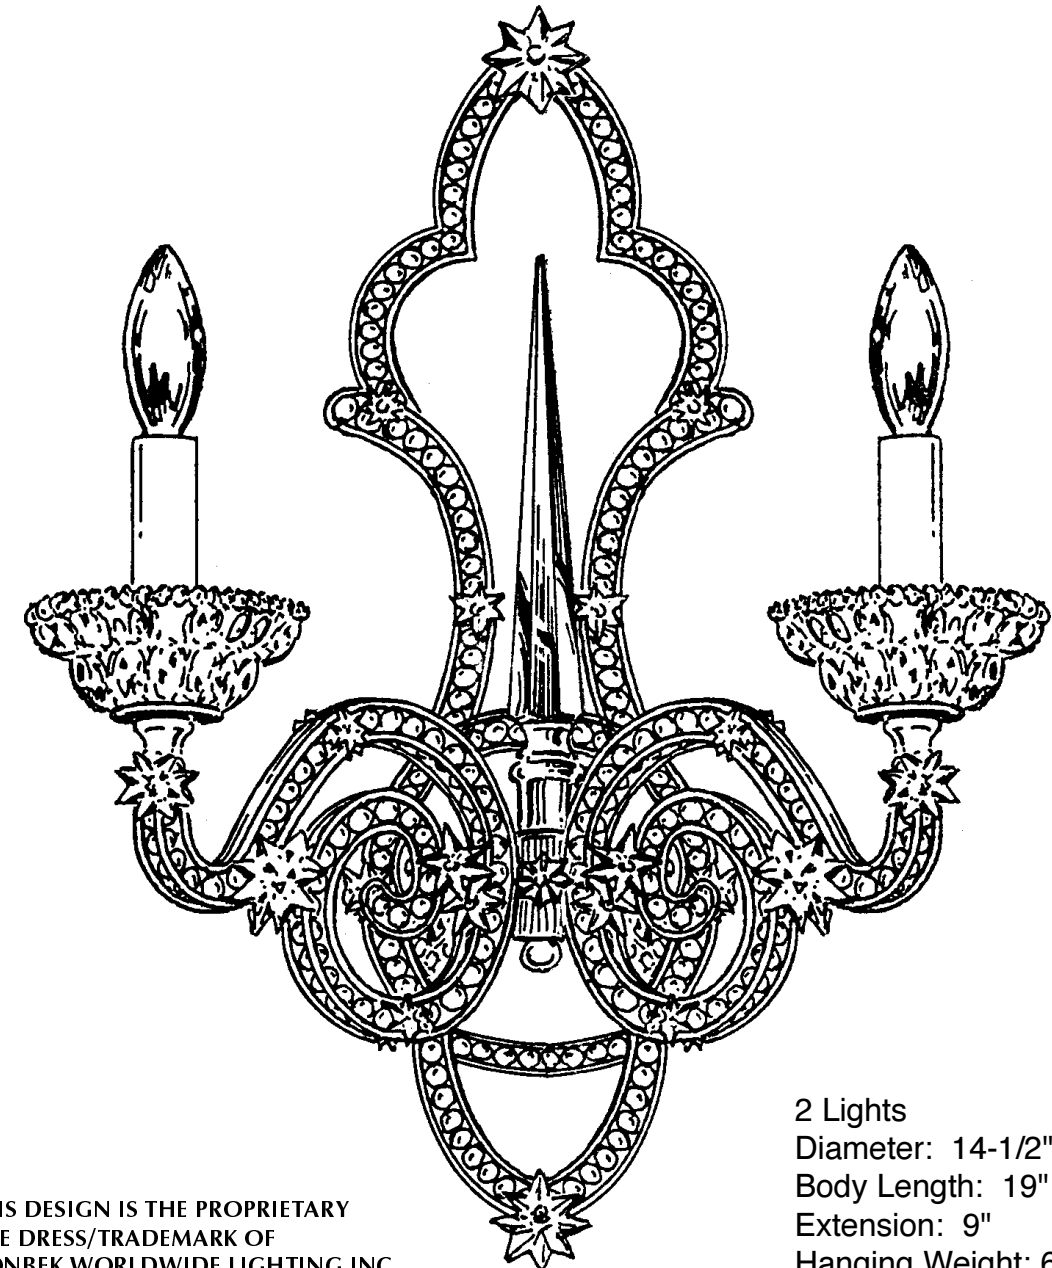

**T**HIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADEMARK OF SCHONBEK WORLDWIDE LIGHTING INC.

2 Lights  
Diameter: 14-1/2"  
Body Length: 19"  
Extension: 9"  
Hanging Weight: 6 lbs.

# SCHONBEK®

**See diagram on back page  
Follow steps in exact order  
Save this trim diagram for future reference**

**1**

### IMPORTANT


*Person who opens carton should record the following information for future service.*

CODE #	_____	Four-digit number on outside of carton.
PACKER #	_____	See crystal package label.
ORDER #	_____	See crystal package label.


SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE:  
#D5,460,269, #D6,712,490 & #D464,769

Instructions for crystal trimming  
STEPS 7 - 9

7



You will need 2 - C10  
25 Watts Recommended  
60 Watts Max

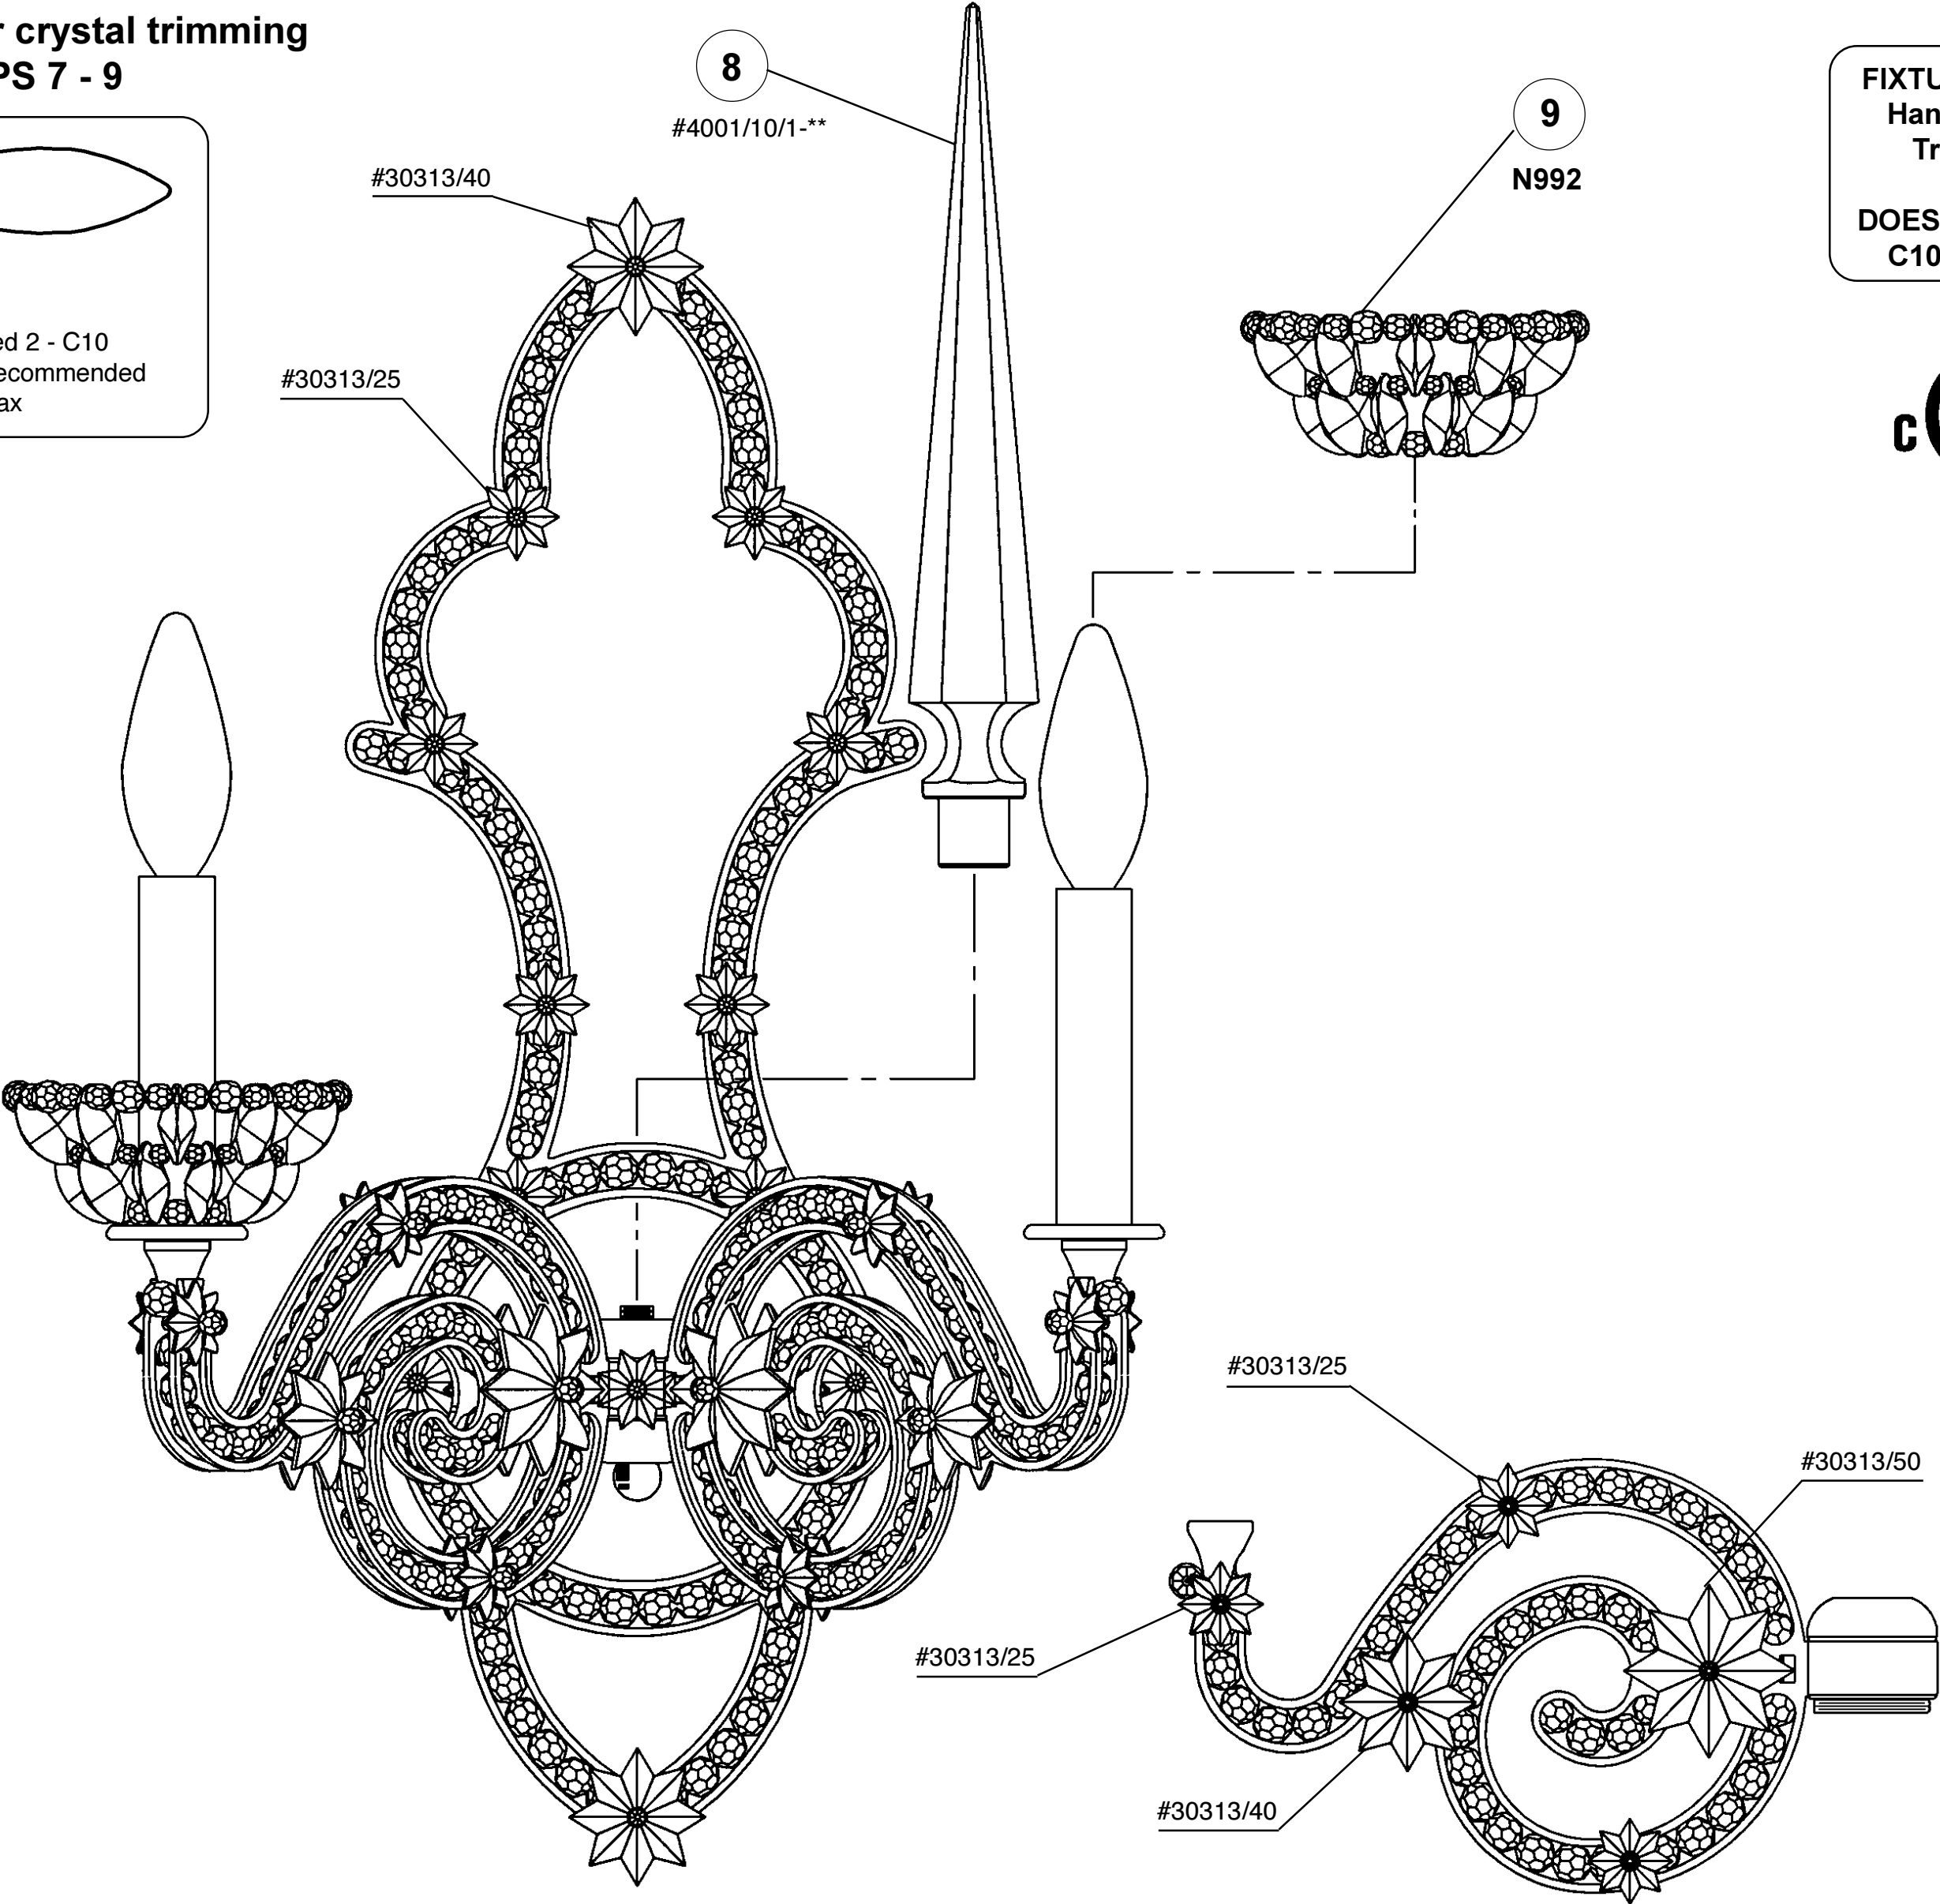

**FIXTURE INCLUDES:**  
Hanger Hardware  
Trim - Frame

**DOES NOT INCLUDE:**  
C10 - Light Bulbs

