

Instructions for electrician **STEPS 2 - 21**


16

15

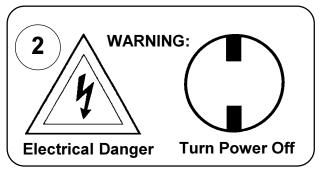

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

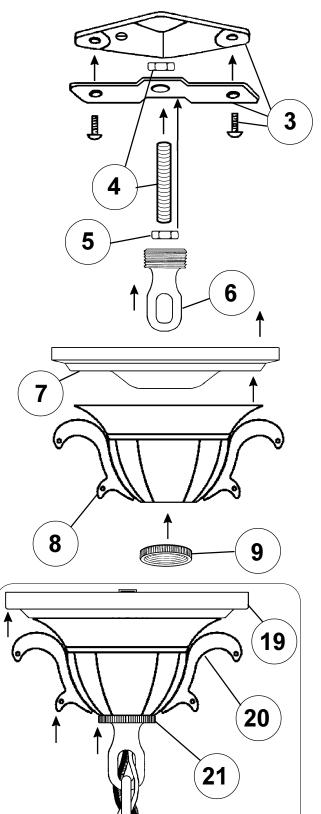

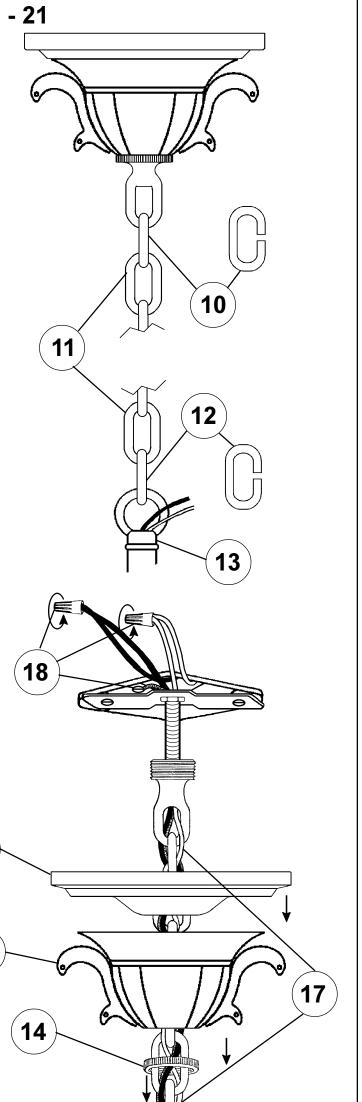

CHANDELIER 9878 TRIM DIAGRAM



SCHONBEK®

See diagram on back page Follow steps in exact order Save this trim diagram for future reference




IMPORTANT

Person who opens carton should record the following information for future service.


_____ Four-digit number on outside of carton.


See crystal package label. See crystal package label. ORDER #

SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE:



Instructions for crystal trimming STEPS 22 - 29

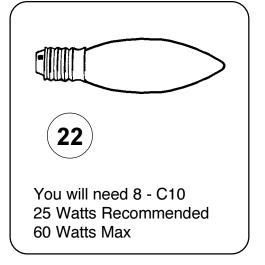

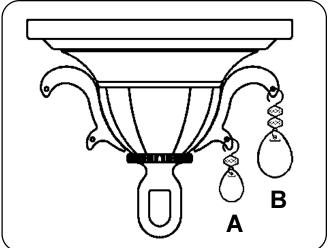

- Screw Crystal Ball "N590" onto bottom of chandelier. Tighten setscrew with tool provided.
- Screw Spikes #4000/3/1 onto frame.
- Trim canopy first so that colors will be distributed properly. Use trim from trays "A" and "B".

NOTE 1: Pinch the wire hooks to attach each crystal securely to frame.

NOTE 2: Scrollwork is asymmetrical, so that in the next step you will be attaching the crystals at different heights and points as you go down the chandelier.

- Using Crystal "A", move around the chandelier, working your way down the body, trimming from top to bottom. See indicated locations on diagram.
- Using Crystal "B", repeat process above, working your way down and around the body of the chandelier, trimming from top to bottom. See indicated locations on diagram.
- Hang Crystal "D" on outer points of arms as indicated.
- (29) Hang Crystal "C" along arms as indicated.

