



Instructions for electrician  
STEPS 2 - 21

2


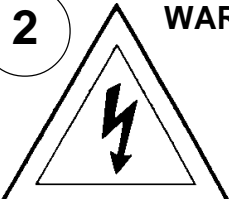


WARNING:

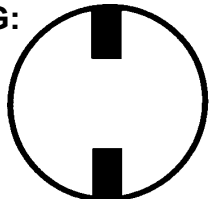


Electrical Danger    Turn Power Off

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

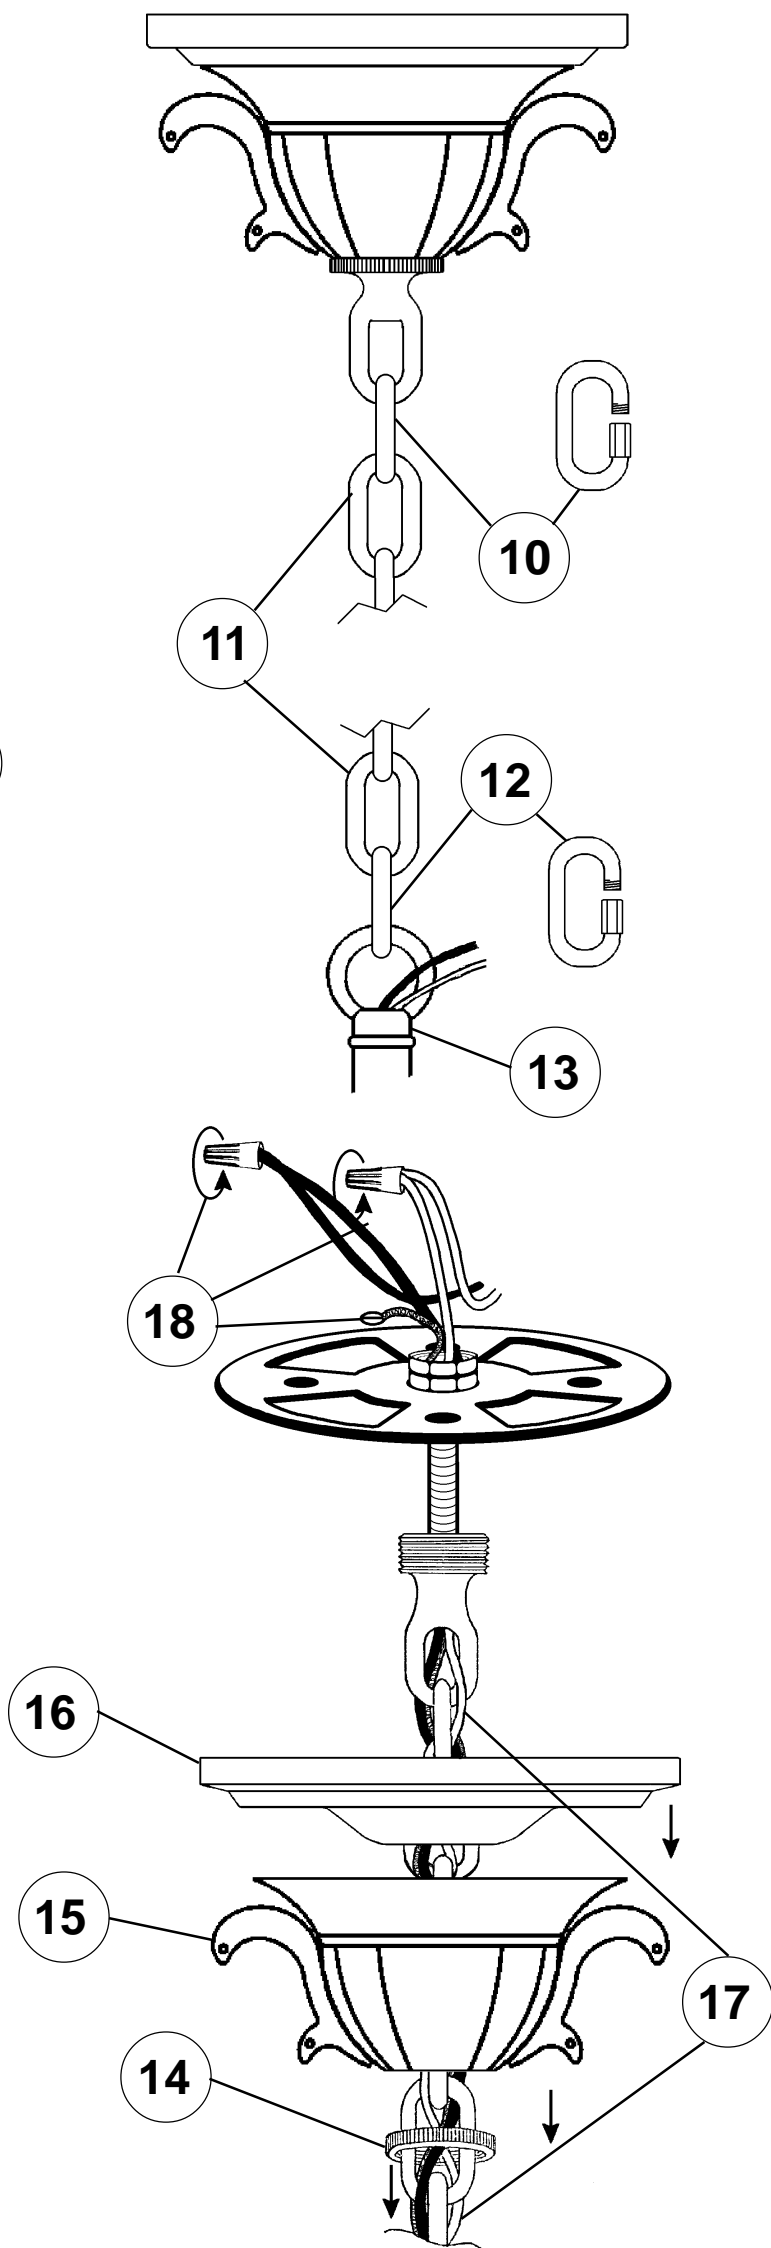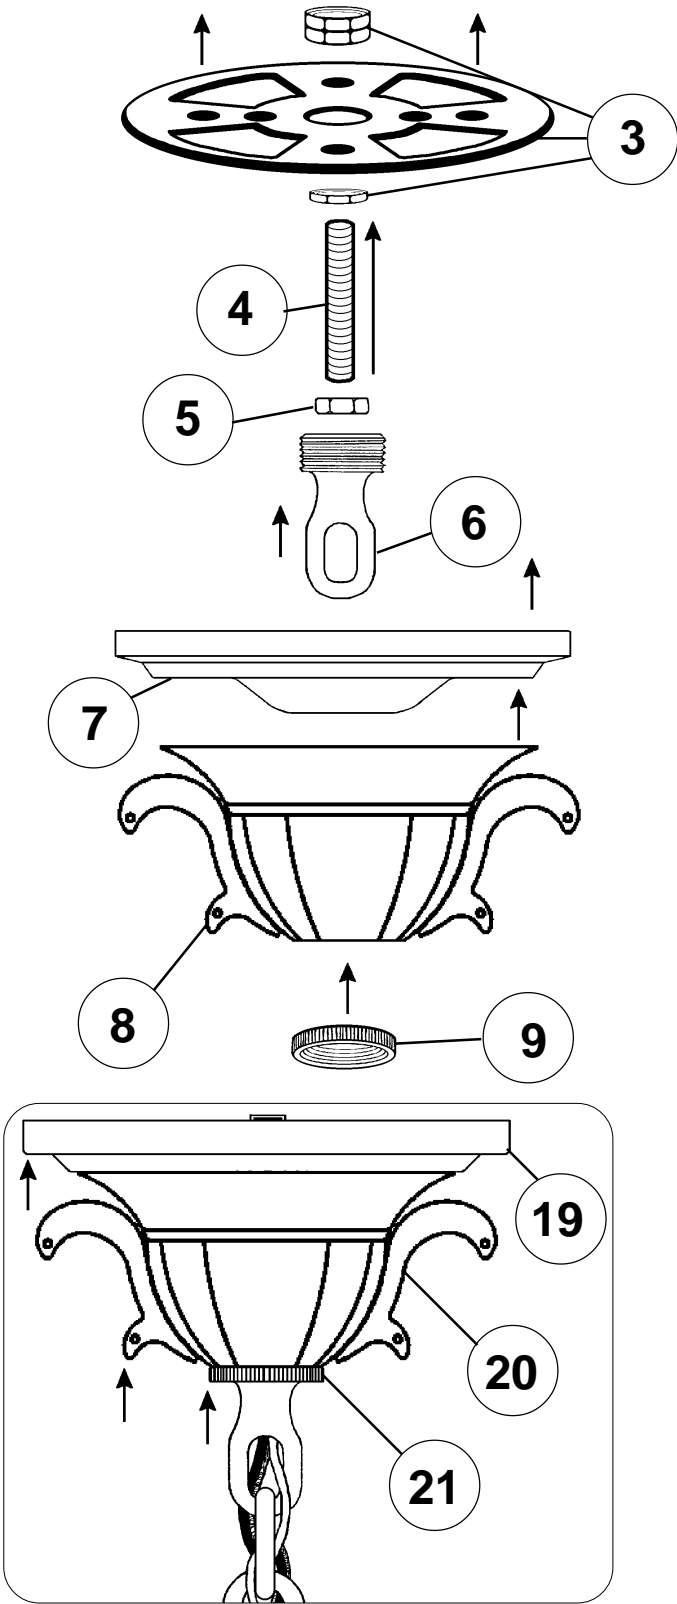

CHANDELIER 9886 TRIM DIAGRAM

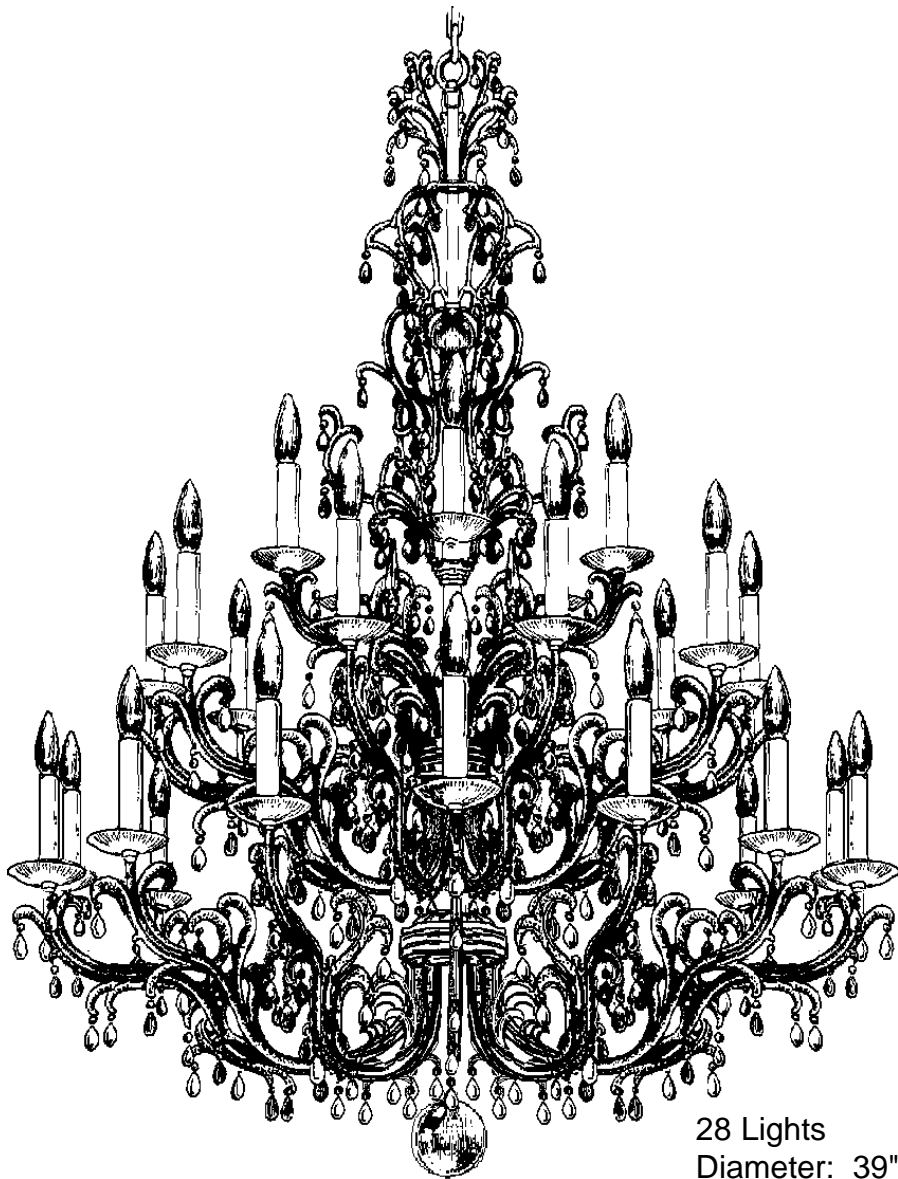

28 Lights  
Diameter: 39"  
Body Length: 55-1/2"  
Hanging Weight: 60lbs.

THIS DESIGN IS THE PROPRIETARY  
TRADE DRESS/TRADEMARK OF  
SCHONBEK WORLDWIDE LIGHTING INC.

SCHONBEK®

See diagram on back page  
Follow steps in exact order  
Save this trim diagram for future reference


1

IMPORTANT  
Person who opens carton should record the following information for future service.

CODE # \_\_\_\_\_ Four-digit number on outside of carton.  
PACKER # \_\_\_\_\_ See crystal package label.  
ORDER # \_\_\_\_\_ See crystal package label.


SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE:  
#D292,620, #D335,362, #D335,546, #D335,716, #D335,720, #D336,537, #D338,082,  
#D389,264, #D338,278, #D339,879, #D345,815, #D373,441, #D374,102, #D374,103,  
#D374,498, #D382,077, #D393,325, #D397,495, #D397,494, #D403,101, #D435,686,  
#D454,973, #D454,974, #D455,224, #D456,940, #D463,602S, #D463,603S, #D464,769S,  
#D468,480, #2,651,806, #5,104,082, #5,109,325, #5,116,009, #5,144,541, #5,205,644,  
#5,222,805, #5,241,460, #5,255,173, #5,258,900, #5,285,364, #5,404,285, #5,460,269,  
#5,567,046, #5,567,468, #5,573,330, #5,577,838, #5,588,744, #5,873,652, #5,906,430,  
#5,921,668 & #6,241,370B1

## Instructions for crystal trimming STEPS 22 - 29

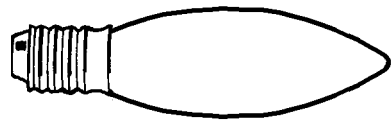

22

You will need 28 - C10  
25 Watts Recommended  
60 Watts Max

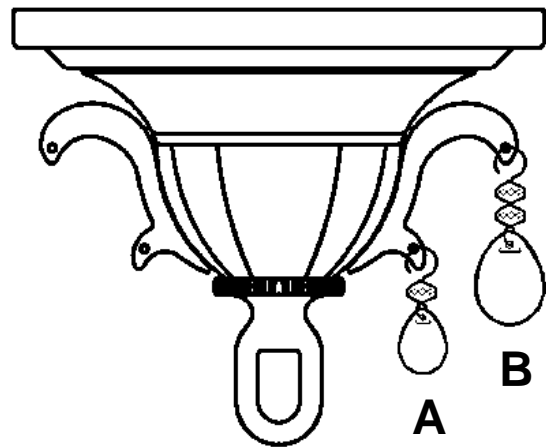

**23** Screw Crystal Ball "N1099" onto bottom of chandelier.  
Tighten setscrew with tool provided.

**24** Screw Spikes #4000/6/1 onto frame.

**25** Trim canopy first so that colors will be distributed properly.  
Use trim from trays "A" and "B".

**NOTE 1:** Pinch the wire hooks to attach each crystal  
securely to frame.



**NOTE 2:** Scrollwork is asymmetrical, so that in the next  
step you will be attaching the crystals at different heights  
and points as you go down the chandelier.

**26** Using Crystal "A", move around the chandelier, working  
your way down the body, trimming from top to bottom.  
See indicated locations on diagram.

**27** Using Crystal "B", repeat process above, working your  
way down and around the body of the chandelier, trimming  
from top to bottom. See indicated locations on diagram.

**28** Using Crystal "C", repeat process above, working your  
way out on each arm. See indicated locations on diagram.

**29** Hang Crystal "D" on arms as indicated on diagram.

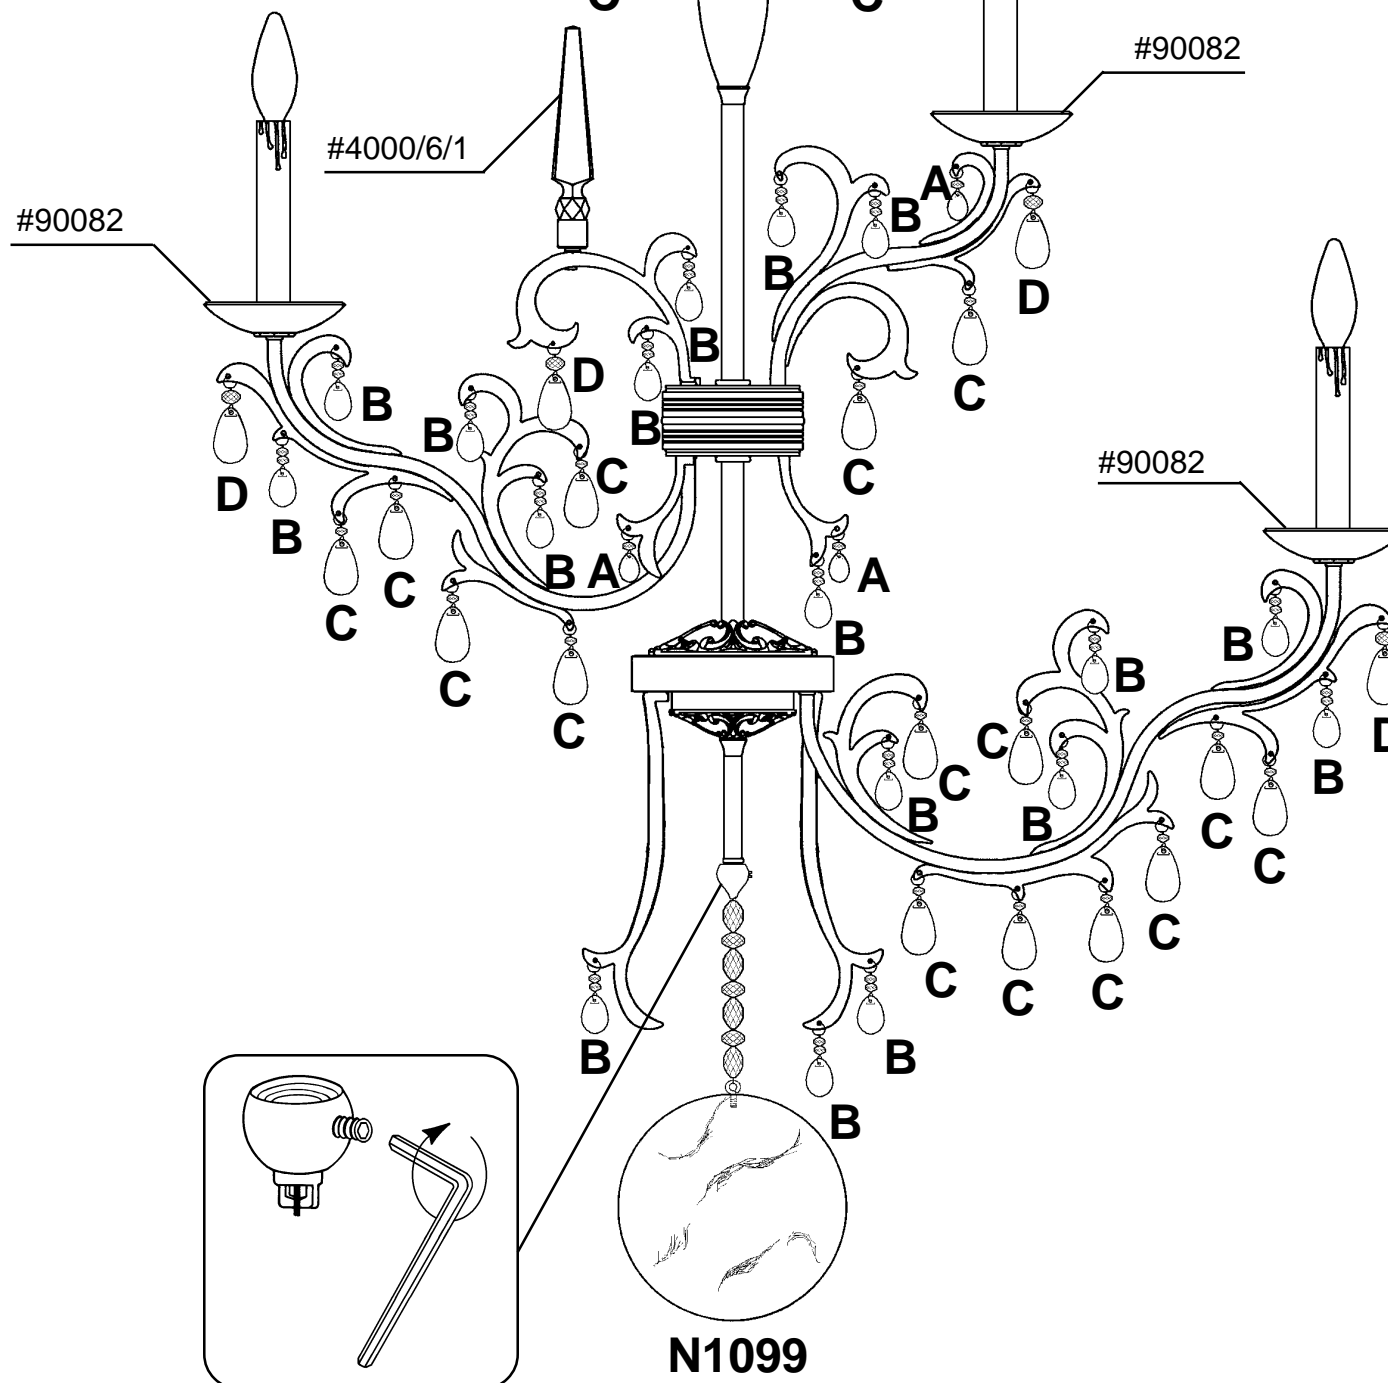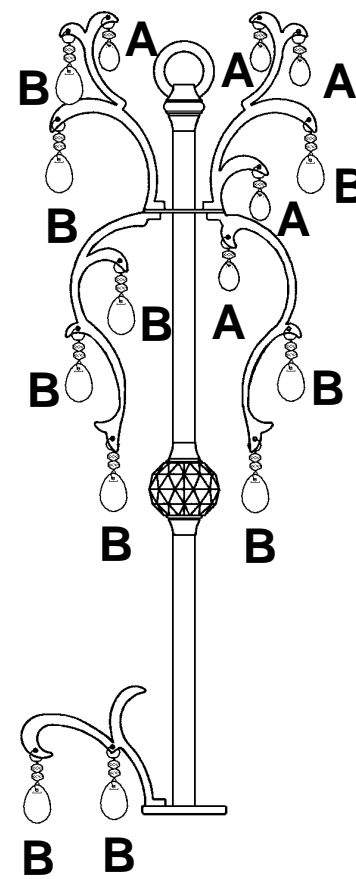

## HOW TO TRIM GENESIS Be Creative!

There is no wrong way to trim  
Genesis. Colors are meant to  
alternate, so just avoid hanging  
crystals of the same color next to  
each other. We recommend  
attaching the crystals, a different  
color each time, in random order.

