


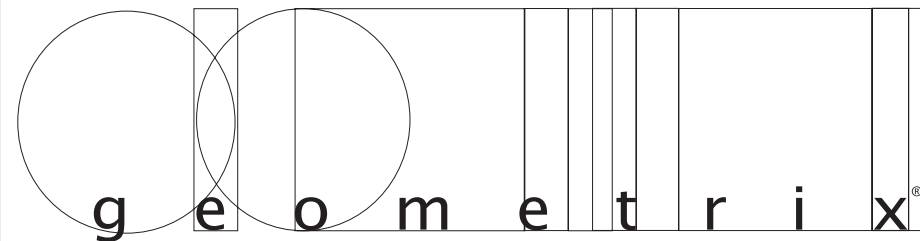


Schonbek Worldwide Lighting Inc., 61 Industrial Blvd., Plattsburgh NY 12901-1908
 Tel: 800.836.1892 or 518.563.7500 www.schonbek.com or www.geometrix-lighting.com
 For cleaning instructions, visit www.schonbek.com or www.geometrix-lighting.com

© 2008 SCHONBEK WORLDWIDE LIGHTING INC., A. SCHONBEK & CO. LTD. WORLDWIDE COPYRIGHT RESERVED
 US UTILITY PATENT PENDING



Trim Diagram
 Chandelier CA2525S

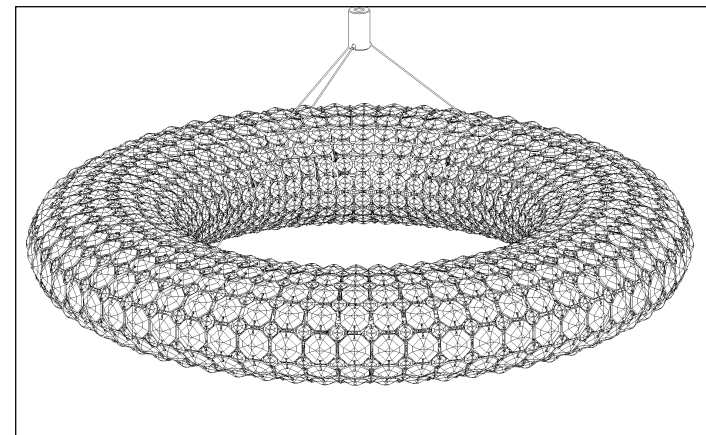

15 Lights
 Diameter: 25"
 Height: 13"

Geometrix™ is designed by Schonbek
 with Strass® crystal by Swarovski.




This design is the proprietary trade
 dress/trademark of Schonbek Worldwide Lighting Inc

Please save your trim diagram for future reference.

IMPORTANT: Label on back contains important
 information on your crystal color. Please save in case
 you ever need to order matching crystal.




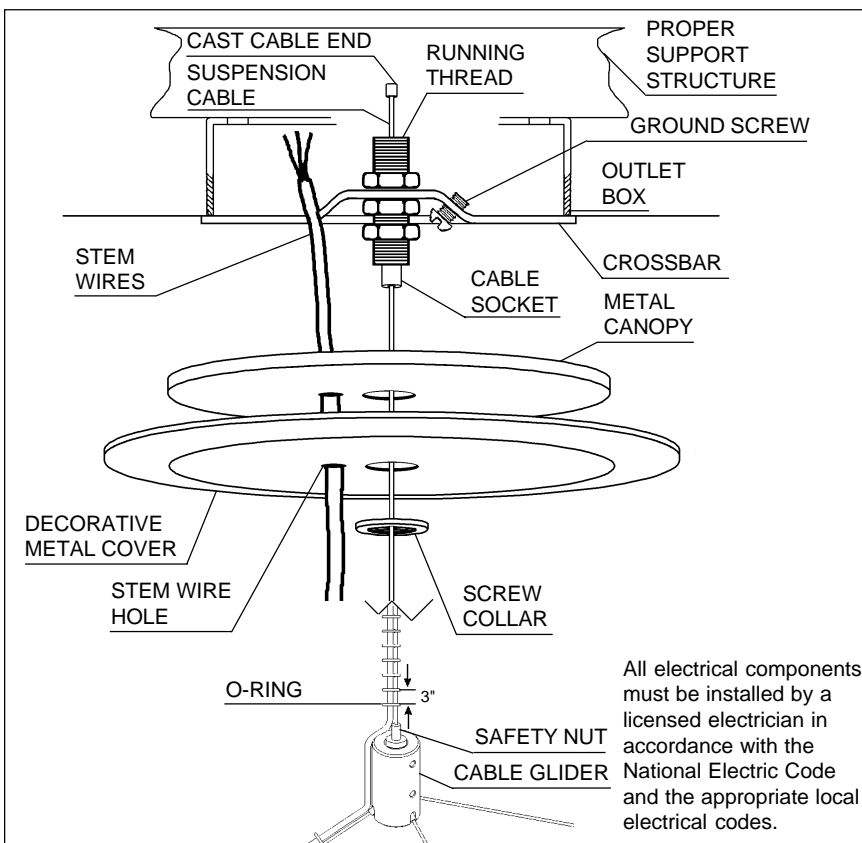

How to Install Canopy:

1 Remove the screw collar, decorative metal cover, metal canopy from the canopy assembly. Feed suspension cable through running thread from the top so that the cast cable end is seated in the inside of the cable socket. Attach crossbar using hardware (not provided) to outlet box with cable hanging down. Feed suspension cable through the center hole (larger hole) of the canopy, decorative metal cover and then screw collar. The metal canopy must be finish side down and on top of the decorative metal cover. Slide all O-Rings (supplied) over suspension cable. Loosen the safety nut by turning it counter clockwise and depress it in order to feed the cable into cable glider on chandelier frame. Slide cable into glider and allow it to play out of the bottom of the cable glider temporarily. To adjust height, hold the frame with one hand while depressing the safety nut with the other hand until the cable is released. Move the frame up and down the suspension cable until desired height is reached. Be sure to add 2" to the bottom of the frame for the height of the pinned crystal sections to be installed later. Feed stem wire through all O-Rings, then stem wire hole in decorative metal cover and metal canopy (the smaller hole). When chandelier is at desired height, trim stem wire and connect ground wire (marked with green tracer) and power wires (black or white tracers) in outlet box. Raise metal canopy and mirror to ceiling and secure to running thread with the screw collar. Cut excess cable off with cable cutters. Adjust O-Rings along stemwire and suspension cable to measure one every 3". Cut off any unnecessary O-Rings.

2 Plug bulbs carefully but completely into socket. Be sure NOT to handle bulbs with bare hands. Use only G9 JCD bulbs marked "suitable for open luminaires" OR bearing this symbol:

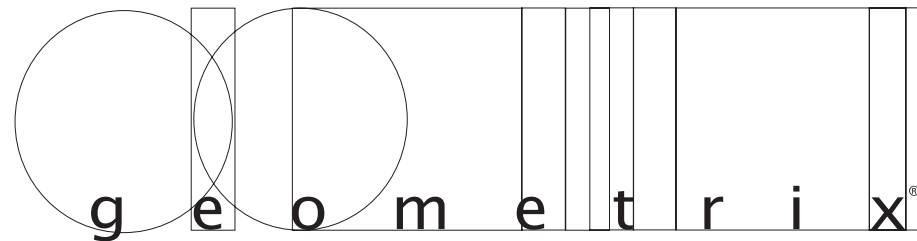

Frequency of cleaning crystal

We know people who clean their crystal every few months, because they love handling the crystals and admiring them close up. Others do a cleaning every six or nine months.


To stretch the time between cleanings, dust lightly every two or three months with a feather duster, lambswool duster or make-up brush.

Frequency of cleaning depends on location of your Cassini and other environmental factors.


Crystal needs cleaning when it appears dusty or dull. Just look at your Cassini frequently (always enjoyable), and you'll know when it's time for a cleaning.

REPLACING CRYSTAL:

If a crystal breaks, you'll see a bare spot in the framework. You will need a set of needlenose pliers to replace the crystal. Make sure when placing pliers onto the metal tab that the ends of the pliers do not go beyond and scratch the crystal.

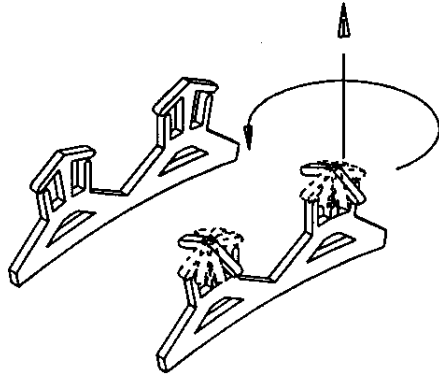


A Turn both tabs 90° counterclockwise on either side of pocket where the octagon should be.

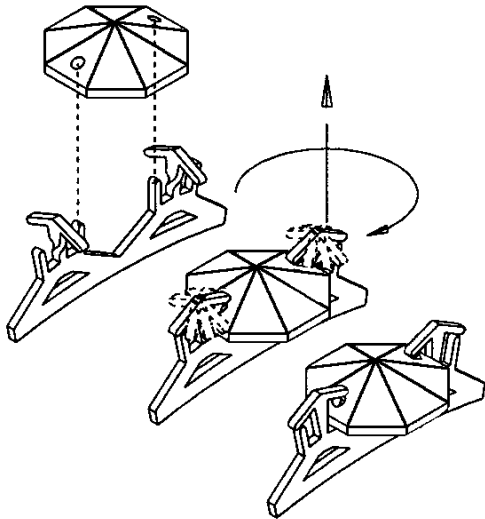


B Slide crystal octagon into pocket. Turn both tabs clockwise back to original position to hold the octagon in place.

CRYSTAL IDENTIFICATION SHEET

TOP SECTOR

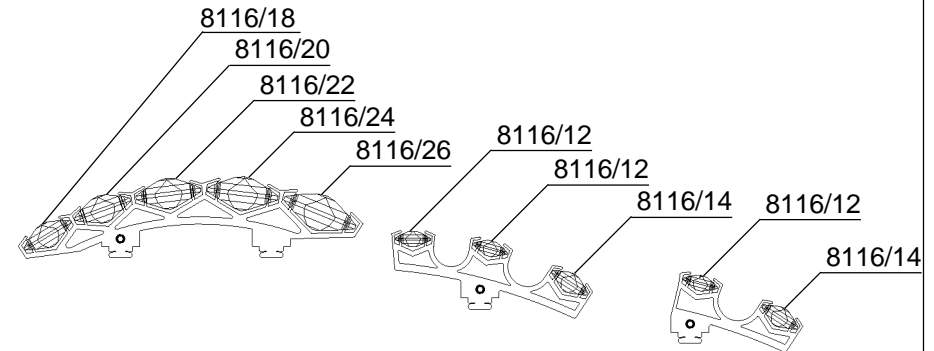

BOTTOM SECTOR

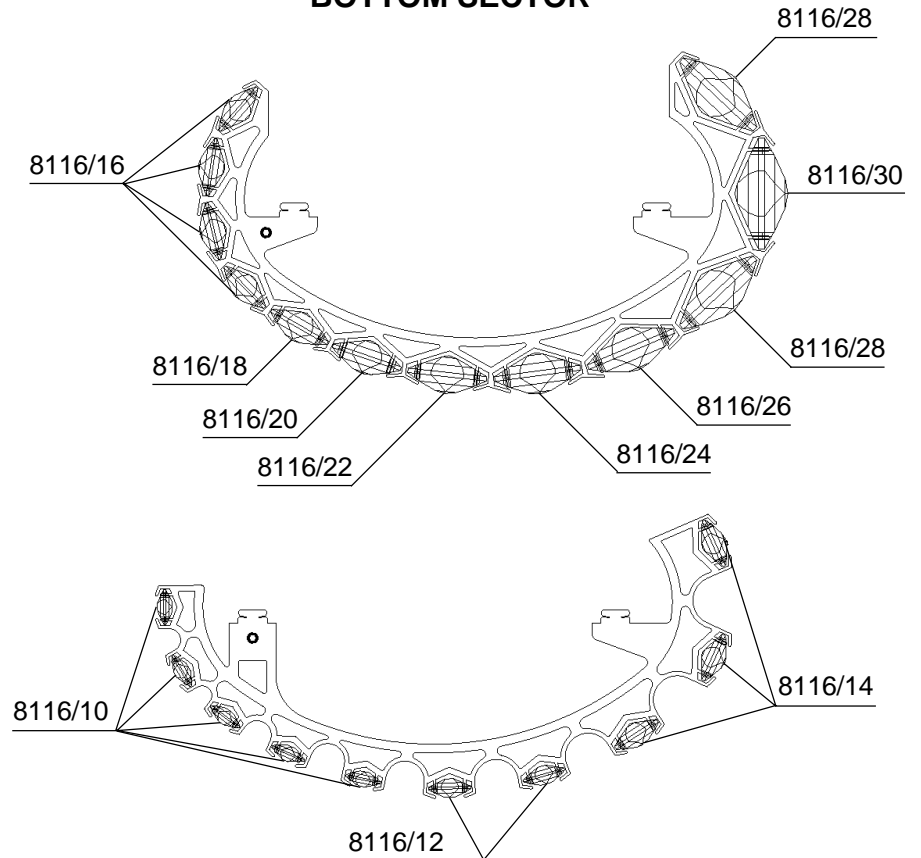



15 - G9 JCD
(Supplied - Schonbek #JCD-G9-40)
40 Watts Max
Hanging Weight: 28 pounds
Install bulbs and be sure to test
fixture BEFORE assembly.



To avoid damaging, do
NOT touch bulb with bare
hands. Install bulb with
clean cloth or tissue.



FRAME

THUMB
NUT

SUPPORT
CABLE

STAND OFF

HOLE


STUD

BOTTOM
CRYSTAL
SECTION

TOP
CRYSTAL
SECTION

**TWO PERSON
ASSEMBLY
RECOMMENDED**

DIAGRAM 1

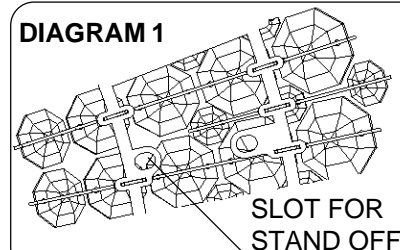

SLOT FOR
STAND OFF

How to Assemble Your Cassini Chandelier:

Put on white cotton gloves to handle crystal.

3 Remove thumb nuts from bottom crystal section.

4 Align six studs in bottom crystal section with six holes in frame. Start anywhere on frame.

5 Screw thumb nuts to studs. Hold on securely to crystal section until you are sure the thumb nuts are secure. NOTE: Be sure the thumb nuts do not pinch the wires.

6 Repeat for the remaining (4) bottom crystal sections, by placing the next bottom sector against the previous bottom sector.

7 Align slots in the underside of the top crystal section with standoffs on frame. (See Diagram 1) Top crystal section will simply rest on these standoffs. NOTE: Each of the (3) top crystal sections will fit between the (3) support cables.

8 Repeat for remaining (2) top crystal sections.

How to take apart your Cassini for changing bulbs or cleaning:

1 Remove all (3) top crystal sections by lifting up on sections between support cables.

2 The bottom of the fixture will come apart in (5) sections.

3 Remove each section by unscrewing the (6) corresponding thumb nuts. Be sure to hold on securely to the crystal section beneath.

4 Gently pull down on bottom crystal section.

5 Repeat for the remaining (4) bottom crystal sections so all that remains is the frame with bulbs.

6 Do not discard thumb nuts, they are required for reassembly.

7 Replace necessary bulbs.