


Important: Label on back contains important information on your crystal. Please save in case you ever need to order matching crystal.

Trim Diagram Aco405A Pendant Refrax™ Pendant

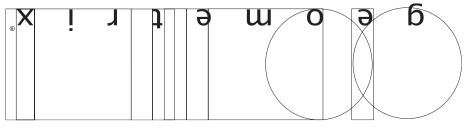




Schonbek Worldwide Lighting Inc., 61 Industrial Blvd., Plattsburgh NY 12901-1908 Tel: 800.836.1892 or 518.563.7500 www.schonbek.com

© 2006 SCHONBEK WORLDWIDE LIGHTING INC., A. SCHONBEK & CO. LTD. WORLDWIDE COPYRIGHT RESERVED

US PATENT: #5,109,325

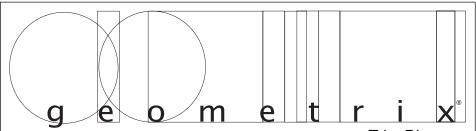

Trim Diagram Refrax[™] Pendant RE0405A



1 Light Length: 4", Width: 4", Height: 5"

Geometrix[™] is designed by Schonbek with Swarovski Spectra® crystal.




This design is the proprietary trade dress/trademark of Schonbek Worldwide Lighting Inc.

Please save your trim diagram for future reference.


IMPORTANT: Label on back contains important information on your crystal. Please save in case you ever need to order matching crystal.






1 - MR16 (Wide Flood) 35 Watts Recommended (supplied - Schonbek # : MR16-FMW-G) 50 Watts Max.




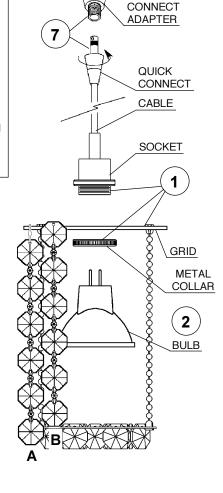

QUICK

REPLACING CRYSTAL: If a crystal breaks, you'll see a bare pin sticking out of a hole in the framework. PIN A Straighten pin outward. (Be careful not to scratch frame.) B Slide crystal octagon onto pin. C Bend sideways to latch in place.

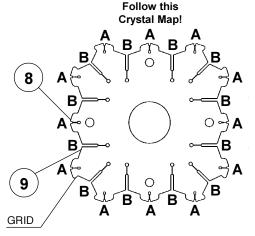

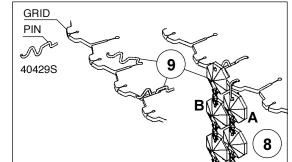


How to Install MR16 Bulb and Refrax[™] Pendant:

Pendants may be mounted to monorail systems, monopoints or line voltage track by coupling to the quick connect transformer adapter. Attached to the socket is a cable that may be cut on site during installation to any length (see instructions below).


1 Position the pendant grid against the socket and secure in place by screwing the metal collar onto the socket.

2 Plug bulb carefully but completely into socket. Use only an MR16 glass covered lamp bulb.


How to Shorten the Cable:

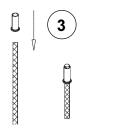


3 Cut the cable cleanly with wire cutter to desired length, and slide brass collar over wire. Position collar so that a small section (1/16") of braided wire protrudes from the top of the collar.

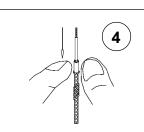

4 Grasping the collar, slide braided outer wire back to expose inner wire. Trim 1/8" of insulation from the inner wire with wire stripper.

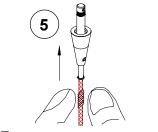

5 Feed inner wire into quick connect adapter until it reaches top set screw. Feed braided outer wire and brass collar into quick connect.

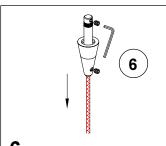

6 Tighten top set screw first, then lower set screw snugly. Smooth out any bulges in braided wire.

7 Screw quick connect into quick connect adapter until it seats. If you adjust the orientation of the pendant, be careful not to loosen the connection.

8 Hang A chains first, following the crystal map. Hook the connectors into the pinholes located towards the outside of the grid. See illustration to the left.

9 Insert pins into grid. Hang B chains by sliding the octagon with an open hole onto the pin. Chains B will nest into position between A chains. See illustration to the left.

RE0405A