

ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0075 / P0076

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

**NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.**

Parts:


Parts Number (4855MM for models P0075)
(4856MM for models P0076)



Mounting Strap (A)




Mounting Screw (B)




Green Grounding Screw (C)



Wire Nut (D)



Hex Nut (E)




Washer (F)



Nipple (G)



Coupling Kit (H)



Canopy (I)



Collar (J)



Strain Relief (K)



Screwdriver (L)


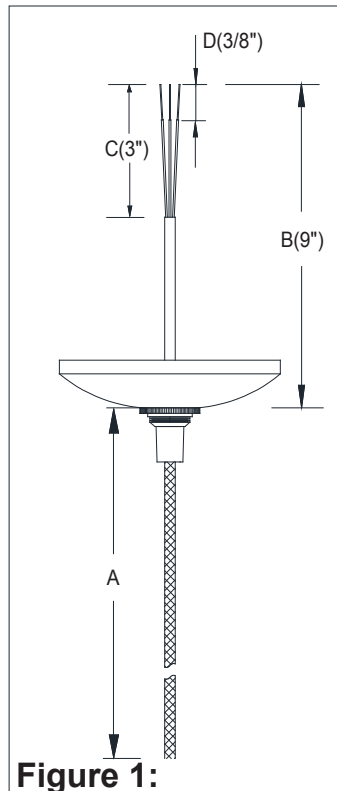


Figure 1:

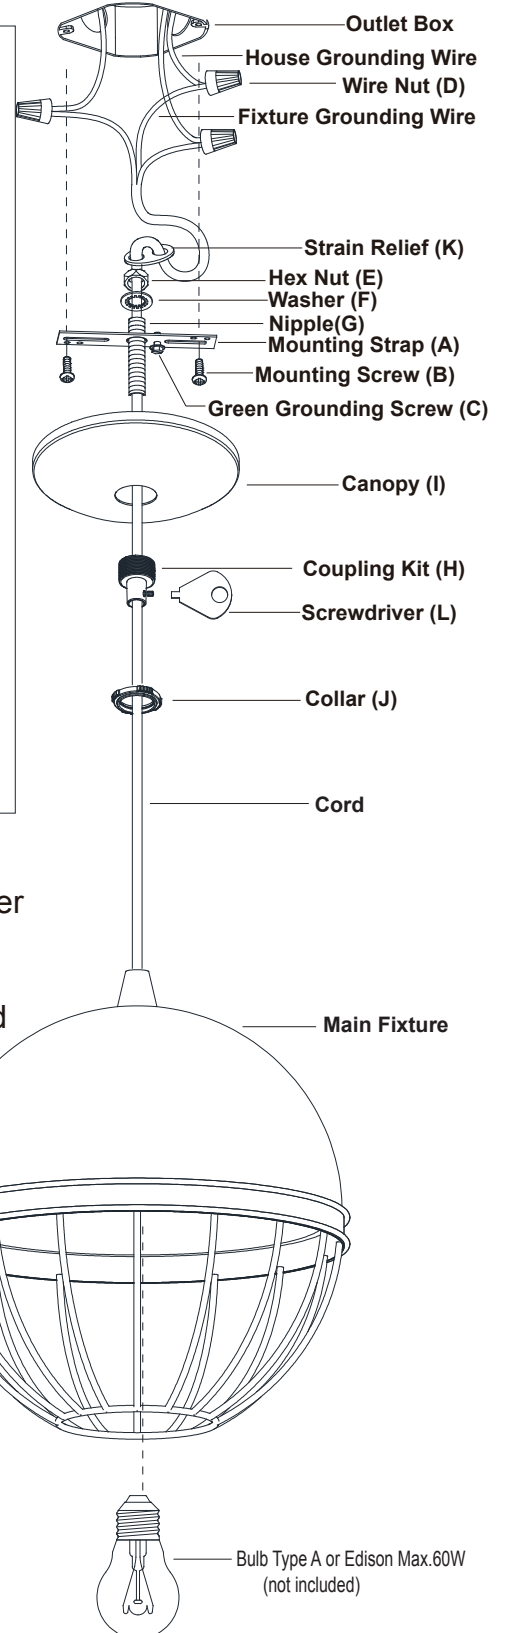

1. Carefully unpack the fixture, lay out the fixture on a clean surface.
2. Attach the nipple to the mounting strap, then secure it with a washer and hex nut.
3. Install the nipple to the coupling kit.
4. Thread the cord through the collar, coupling kit, canopy, nipple and strain relief. Measure the desired length of the cord (A) from the canopy to the top side of the fixture and leave an additional 9" of cord (B) above the canopy (include the canopy). Then cut off the unnecessary cord. (See Figure.1)
5. Adjust strain relief at 9" position from the top of the cord.
6. Mark the 3" of cord (C) from the top of the cord (B). Use a knife to peel off the insulation of the cord (C) carefully to expose the 3 wires on the inside. (See Figure 1)
CAUTION: Too deep cutting may damage the insulation layer of the three wires inside.
7. Peel off the 3 wires from the top about 3/8" long(D) to expose the copper for wiring.
8. Attach the mounting strap to the outlet box by using two mounting screws.
9. Pull out the outlet wires and house grounding wire from the outlet box. Make wire connections using the wire nuts:

 **VAXCEL**

130916


- The black wire from the fixture to the black wire from the power source.
- The white wire from the fixture to the white wire from the power source.
- The green grounding wire from the fixture to the green grounding wire from power source.

Carefully put the wires back into the outlet box.

10. Attach the canopy to the mounting strap, and secure it with collar.
11. Pull the cord (A) down slightly until the strain relief touches the hex nut of the nipple, then fastening cable by screwing headless screw, using supplied flat head screwdriver.

Note: Adjusting the strain relief of the canopy can decrease or increase the length of cord that is exposed.

12. Install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.
13. Turn on the power at the main fuse or circuit breaker box.

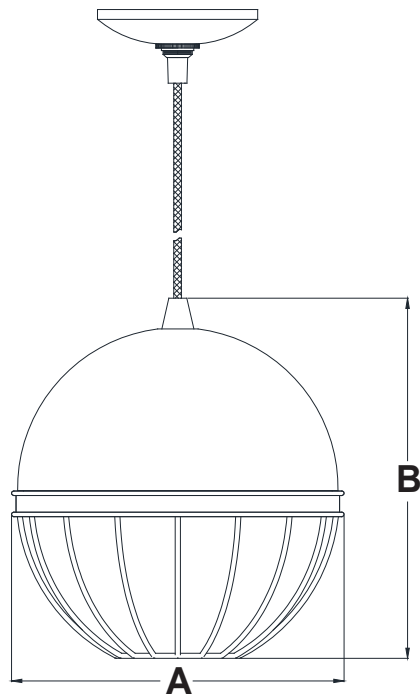

A: 10-1/4"

B: 10-1/2"