



ASSEMBLY AND INSTALLATION INSTRUCTIONS

T0160

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.


Hardware Package (included):

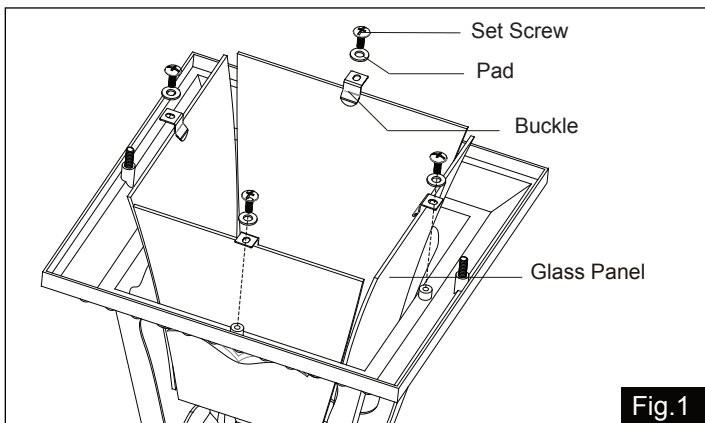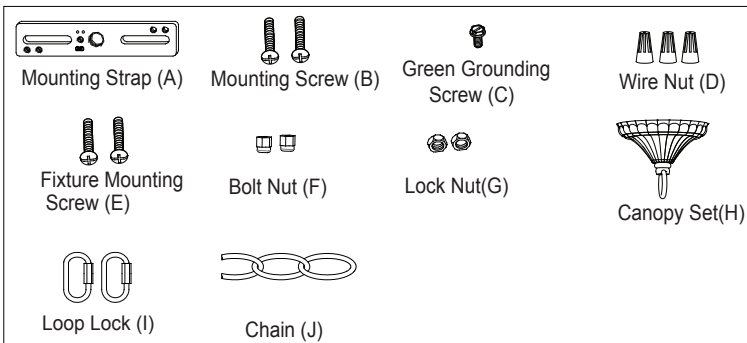

Installation Steps

Turn off the power at fuse or circuit

1. Thread two fixture mounting screws through the mounting strap, then secure them with two lock nuts. Adjust the length of the fixture mounting screws if necessary.
2. Attach the mounting strap to the outlet box by using two mounting screws.
3. Connect the chain:
 - Determine length of chain needed to achieve desired fixture height. (To remove excess chain section, use pliers to bend link open.)
 - Weave the fixture wires and fixture grounding wire through the chain and canopy.
4. Connect one end of the chain to the loop using a loop lock.

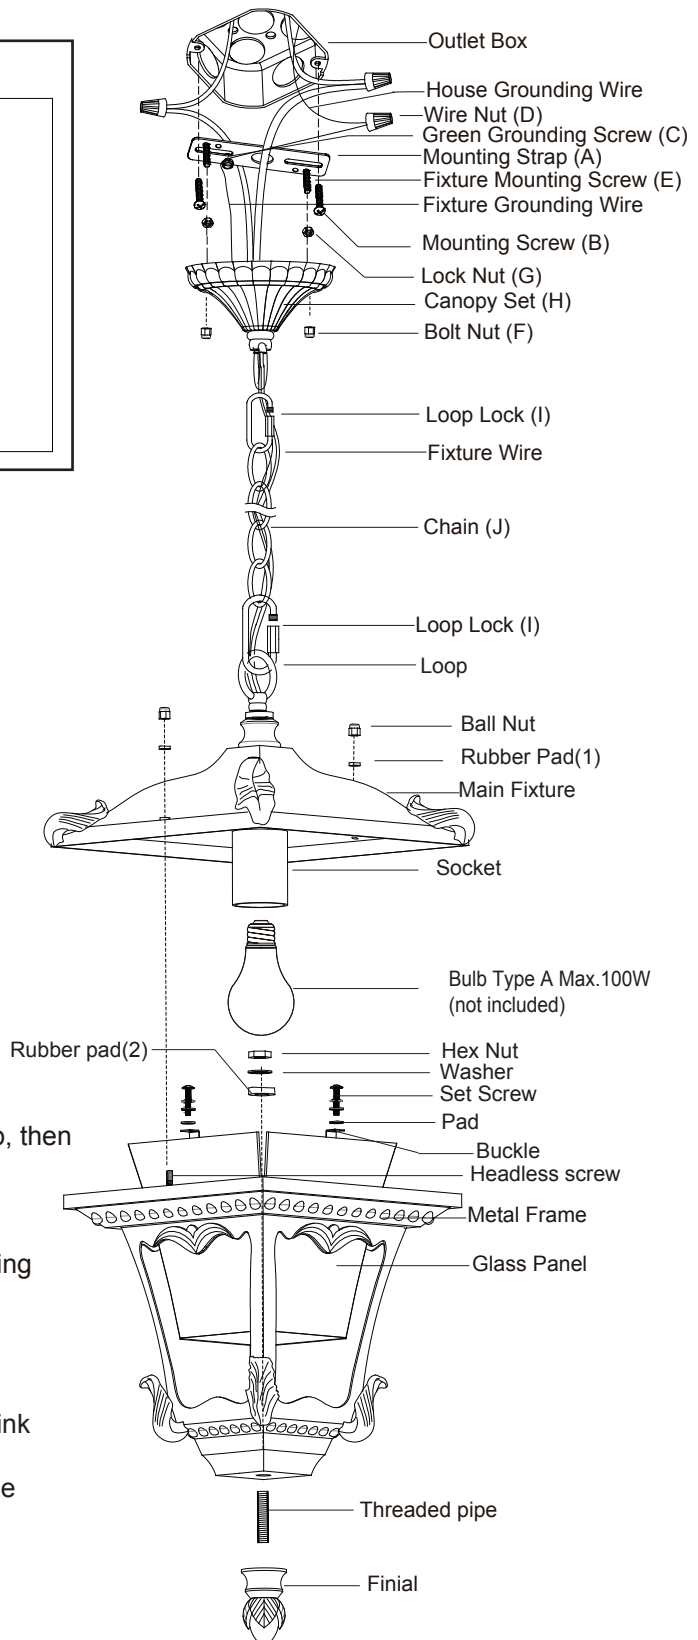

VAXCEL


141105

5. Connect the other end of the chain to the canopy using the other loop lock.
6. Pull out the source wires from the outlet box. Make wire connections using wire nuts as follows:
 - Connect the smooth-coated wire (marked) from the fixture to the black wire from the power source.
 - Connect the ribbed-coated wire (unmarked) from the fixture to the white wire from the power source.
 - Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with a wire nut.
 Carefully put the wires back into the outlet box.
7. Attach the canopy to the mounting strap by inserting the fixture mounting screws, and secure it with two bolt nuts.
8. Install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.
9. Screw the threaded pipe into the finial. Then attach the finial to metal frame with rubber pad (1), washer and hex nut.
10. Place the glass panels into the metal frame carefully, secure the buckles to fix the glass panels by using four pads and four set screws. (See Fig.1)
11. Attach the metal frame to main fixture by inserting headless screws. Then secure it with rubber pads(2) and ball nuts.



Turn on the power at fuse or circuit box.

The following parts are available for re-order if damaged or missing.

Spare Parts List:

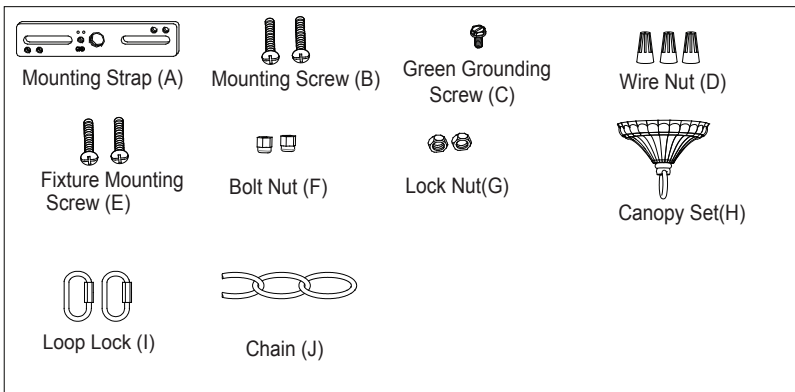

→ Assembly Kit
5180MM (1 SET) for T0160

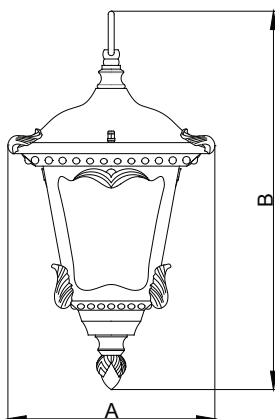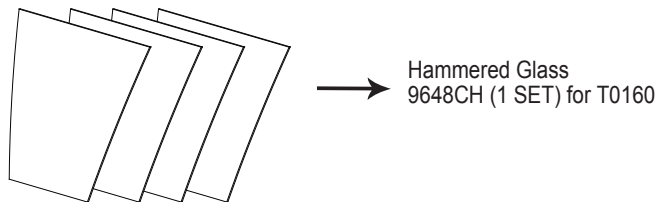

A: 11"
B: 19-1/2"