

ASSEMBLY AND INSTALLATION INSTRUCTIONS

W0130 / W0131

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.

Hardware Package (included):



Mounting Strap (A)



Mounting Screw (B)



Green Grounding Screw (C)



Threaded Pipe (D)



Wire Nut (E)




Finial (F)



Hex Nut (G)



Washer (H)

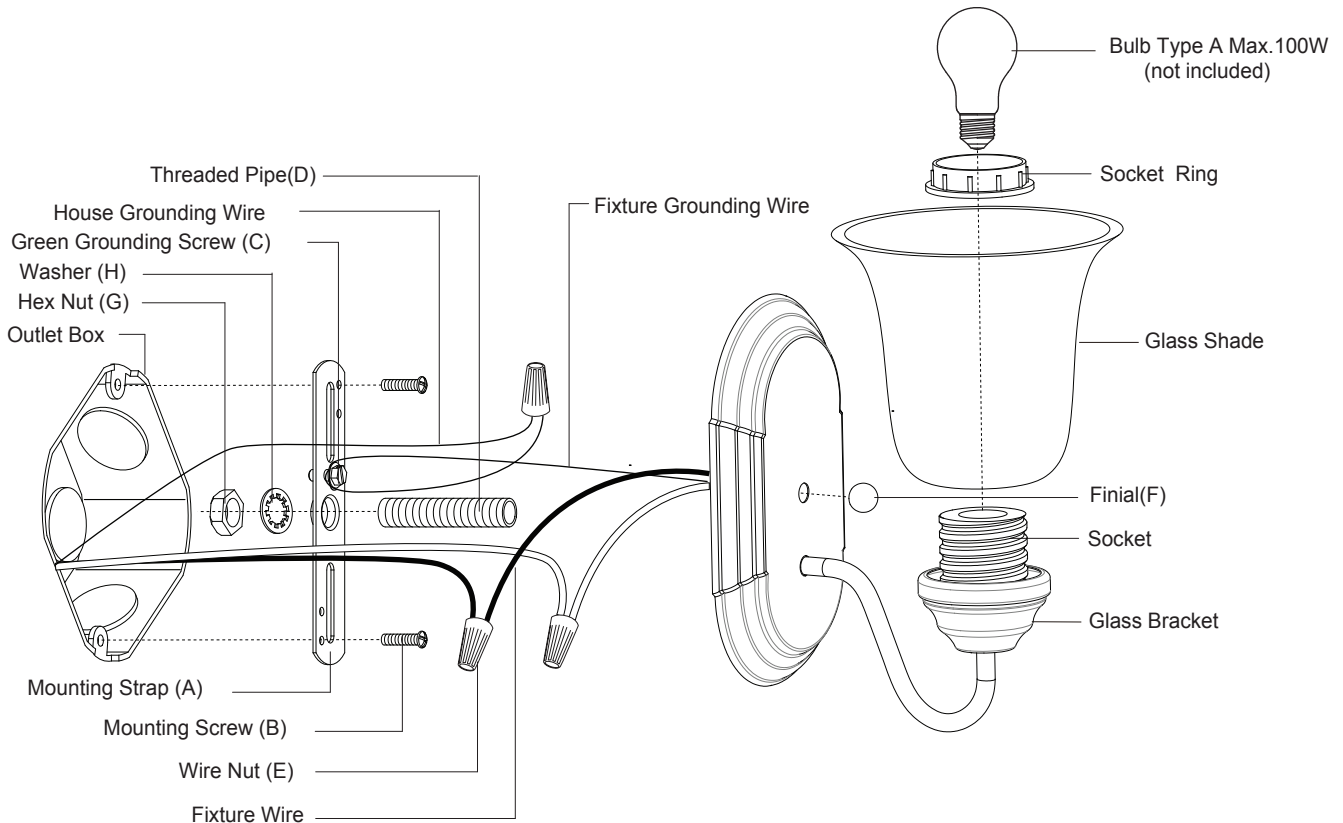

Installation Steps

Turn off the power at fuse or circuit box.


1. Attach the threaded pipe to the mounting strap, then secure it with a washer and hex nut.
2. Attach the mounting strap to the outlet box by using two mounting screws.
3. Pull out the source wires from the outlet box. Make wire connections using wire nuts as follow:
 - Connect the hot wire (usually black insulation) from the fixture to the black wire from the power source.
 - Connect the neutral wire (usually white insulation) from the fixture to the white wire from the power source.
 - Attach the fixture grounding wire (usually green insulation or bare wire) to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with the wire nut.Carefully put the wires back into the outlet box.

4. Attach the back plate to the mounting strap by inserting threaded pipe, then secure it with finial.
5. Attach the glass shade to the glass bracket, secure it with socket ring.
6. Install bulb(not included). See relamping label at socket area or packaging for maximum allowed wattage.


Turn on the power at fuse or circuit box.

The following parts are available for re-order if damaged or missing.


Spare Parts List:

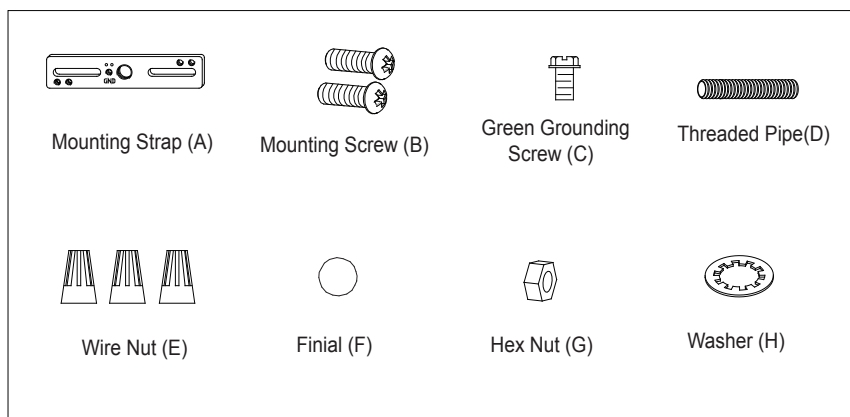

→ Assembly Kit
5272MM (1 SET) for W0130
5273MM (1 SET) for W0131

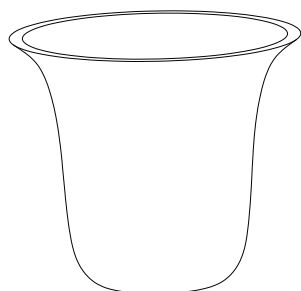

→ Glass Shade
9694EW(1PCS)

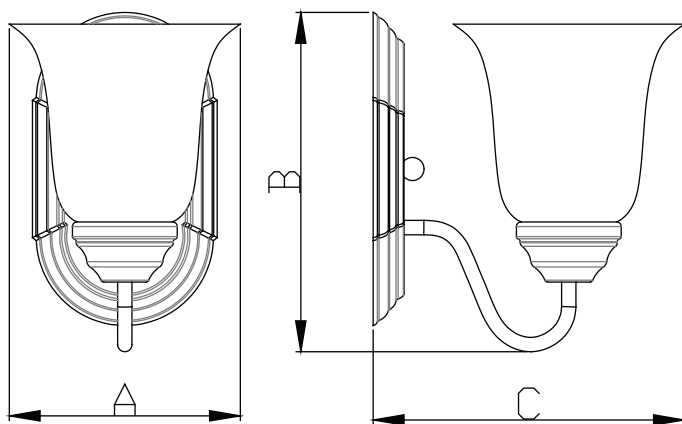

A: 6"

B: 8-1/2"

C: 8-1/2"