

ASSEMBLY AND INSTALLATION INSTRUCTIONS

W0160 / W0161

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.

Hardware Package (included):



Mounting Plate (A)



Mounting Screw (B)



Green Grounding
Screw (C)



Headless Screw(D)




Wire Nut (E)



Ball Nut (F)



Lock Nut (G)

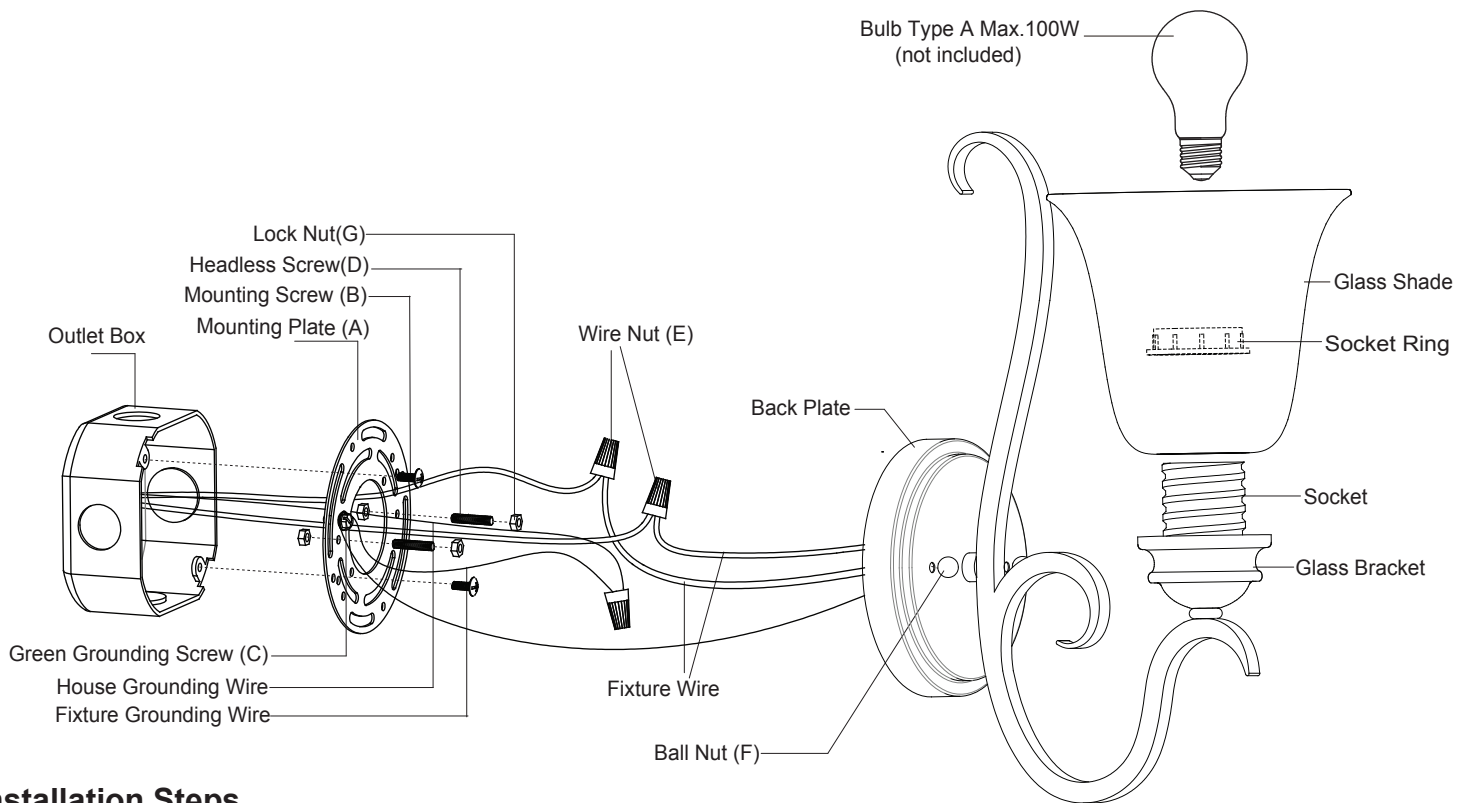

Installation Steps

Turn off the power at fuse or circuit box.

1. Thread two headless screws through the mounting plate, then secure them with four lock nuts (two on each side of the mounting plate). Adjust the length of the headless screws if necessary.
Note: Make sure that the headless screws are lined up horizontally, in order to ensure that the fixture will be level.
2. Attach the mounting plate to the outlet box by using two mounting screws.
3. Pull out the source wires from the outlet box. Make wire connections using wire nuts as follows:
 - Connect the hot wire (usually black insulation) from the fixture to the black wire from the power source.
 - Connect the neutral wire (usually white insulation) from the fixture to the white wire from the power source.
 - Attach the fixture grounding wire (usually green insulation or bare wire) to the mounting plate with the green grounding screw. Then connect it to the house grounding wire with the wire nut.Carefully put the wires back into the outlet box.
4. Attach the back plate to the mounting plate by inserting two headless screws, then secure it with two ball nuts.

 **VAXCEL**


141212

5. Attach the glass shade to the glass bracket, secure it with socket ring.
6. Install bulb(not included). See relamping label at socket area or packaging for maximum allowed wattage.


Turn on the power at fuse or circuit box.

The following parts are available for re-order if damaged or missing.


Spare Parts List:




Mounting Plate (A)




Mounting Screw (B)




Green Grounding Screw (C)




headless Screw (D)



Wire Nut (E)



Ball Nut (F)



Lock Nut (G)

→ Assembly Kit
5274MM (1 SET) for W0160
5275MM (1 SET) for W0161

